


# anko

**Toaster with Egg-boiler**  
**XB8002BA-SA**  
**User Manual**

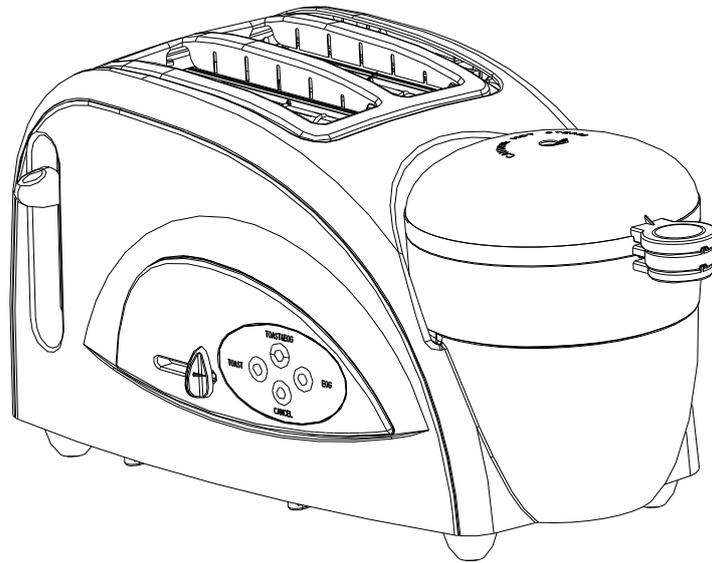

**PLEASE READ AND SAVE THESE  
INSTRUCTIONS FOR FUTURE REFERENCE**

## **IMPORTANT SAFEGUARDS**

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instruction.
2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the toaster.
3. Do not touch hot surface. Use handles or knobs only.
4. To protect against electrical shock, do not immerse cord, plug, or any part of the toaster in water or other liquid.
5. If the supply cord is damaged, DO NOT use. For electrical safety, any repairs to the product should only be carried out by a qualified electrical person only or the product must be disposed of.
6. Do not let the cord hang over edge of table or counter or touch hot surface.
7. Do not place on or near a hot gas or electric burner, or in a heated oven.
8. Do not use the appliance for other than its intended use.
9. Oversize food, metal foil packages or utensils must not be inserted in the toaster as they may cause fire or electric shock.
10. Bread may be burn, therefore toasters must not be used near or below curtains and other combustible materials, and they must be watched.
11. The use of accessory not recommended by the appliance manufacturer may cause injuries.
12. Don't attempt to dislodge food when toaster is in operation.
13. Be sure to take the bread out carefully after toasting so as to avoid injuries.
14. Allow the unit to cool completely before cleaning or storing.
15. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
16. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
17. Extreme caution must be used when operating the appliance containing hot oil or other hot liquids.
18. Use the appliance on a level and stable surface.
19. When steaming eggs, after cooking, the plastic bowl will be hot. Use oven gloves to take out the eggs and avoid steam burns by directing steam away from the face and hands.
20. Do not steam eggs without water, it may damage the heating element.
21. During steaming, please be careful of the steam coming out from the cover and when opening the lid.
22. A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
23. This appliance has been incorporated with a grounded plug. Please ensure the wall outlet in your house is well earthed. If unsure check with an electrician.

24. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliances by a person responsible for their safety.

25. Children should be supervised to ensure that they do not play with the appliance.

26. This appliance is intended to be used in household and similar applications such as:

- Staff kitchen areas in shops, offices and other working environments;
- Farm houses;
- By clients in hotels, motels and other residential type environments;
- Bed and breakfast type environments.

27. Do not use outdoors.

**28. WARNING: Potential injury from misuse.**

29. Heating element surface is subject to residual heat after use.

30. CAUTION: Avoid injuries from the egg pricking device.



**CAUTION: The bread may burn, therefore toaster must not be used near or below curtains and other combustible materials. The toaster should be attended when in use.**

**WARNING!**


**Never operate toaster on its side. To prevent damage to the toaster, DO NOT toast with extremely runny ingredients such as butter, jam and other sugary ingredients. Adding any food substances to bread, muffins or crumpets can cause an electric shock and / or fire. This toaster is for toasting bread, crumpets and muffins only.**

**SAVE THESE INSTRUCTIONS  
HOUSEHOLD USE ONLY**

# PRODUCT INTRODUCTION

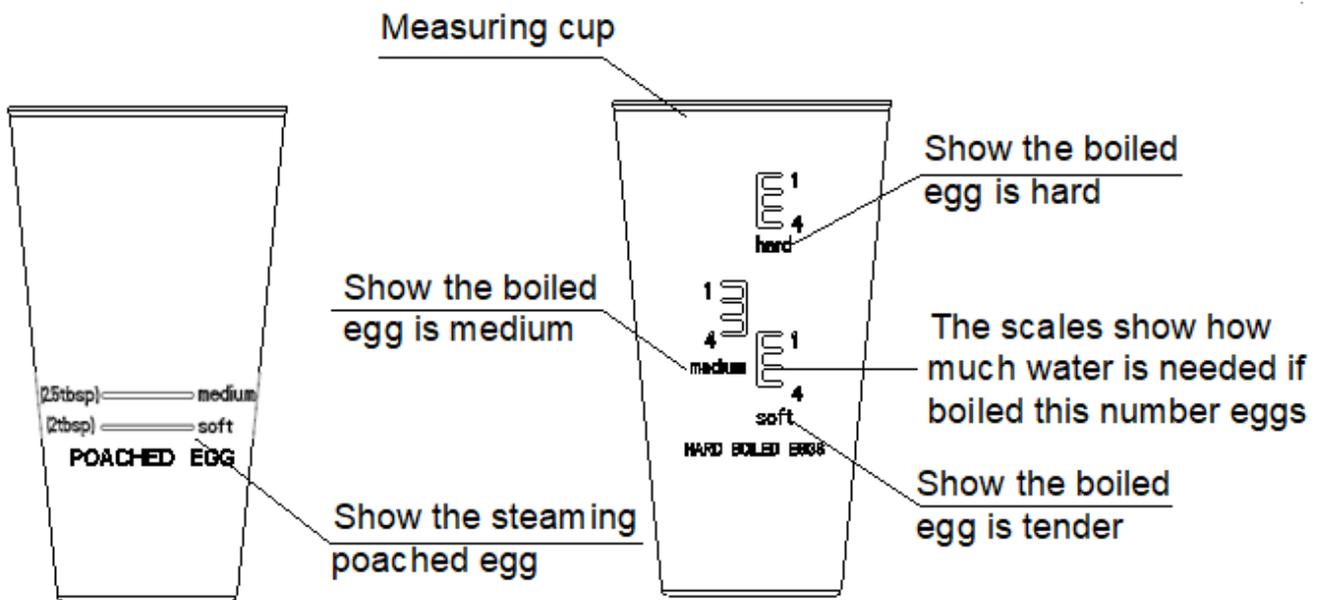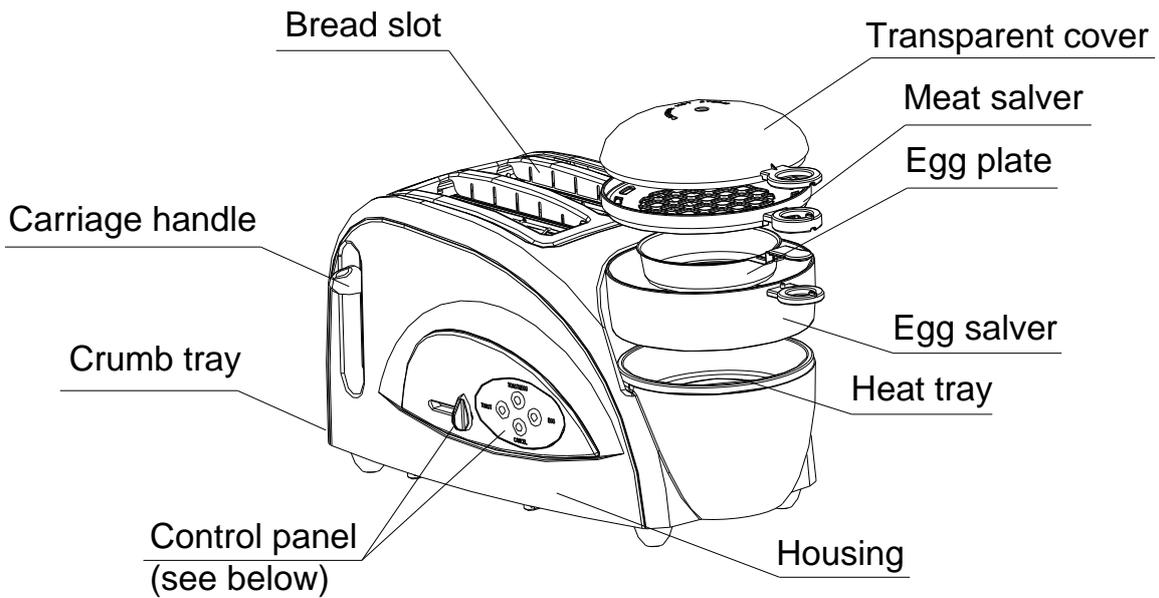

# CONTROL PANEL

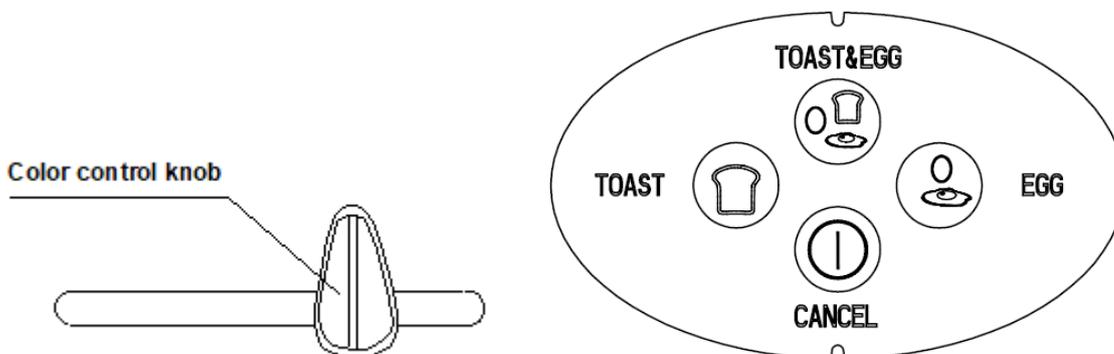

## FOR THE FIRST USE

1. Unpack your appliance and remove all labels, carefully read the directions for use before using the appliance for the first time.
2. Clean your appliance and all the items with water and washing up liquid.

## USING YOUR APPLIANCE

### TOAST

1. Put bread slice into the bread slot. Two slices can be inserted at most each time.

Note: Make sure the crumb tray is completely positioned in place before using.

2. Plug the power cord into the mains power outlet.
3. Set the color control knob to your desired browning color. There are 5 levels of browning, the lowest is for lightest and the highest is for darkest. The bread slices can be toasted to golden color at the number 3 position.

**Note:** ①. Toasting color for one slice is darker than that for two slices at the same level.

- ②. When toasting continuously, toasting color for the latter bread will be darker than that the bread that was toasted when the toaster was cool.

4. Press carriage handle down vertically until it is positioned in place, and toasting will begin.

**Note:** ①. Toasting process can be terminated at any time by pressing the “**CANCEL**” button.




- ②. Only when the power supply is switched ON, the carriage handle can rest at the bottom of slot.

5. During the toasting process, you may observe the toasting color. If you are satisfied with the colour, press the “**CANCEL**” button to cancel the operation at any time.

6. Once the bread has been toasted to the preset color, the carriage handle will automatically spring up.

# COOKING EGGS

1. Cooking table for hard-boiled eggs, boiled eggs and soft-boiled eggs.

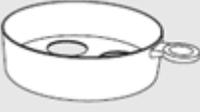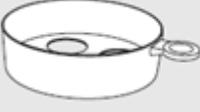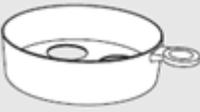 (accessories needed to cook eggs)	Preparation	Cooking method	Number of eggs	Water level
	Hard-boiled	HARD	1 2 3 4	
	Boiled	MEDIUM	1 2 3 4	
	Soft -boiled	SOFT	1 2 3 4	

2. Fill the measuring cup according to the number of eggs to boil and type of boiled egg required (see table above).

3. Pour water from the measuring cup into the heat tray. You can adjust the amount of water according to your taste.

**IMPORTANT! The measuring cup is fitted with an egg piercing spike underneath. The egg must be pierced at the large rounded end to avoid the shell bursting during boiling.**

4. Place the eggs in the egg salver, small end down. Close with the cover.

5. Plug in the appliance. Press the **EGG** button, and the light will illuminate. Cooking will start. The eggs are ready when there is no more water in the heat tray. The appliance will stop automatically.

6. If you wish to continue boiling the eggs, pour more water into the heat tray, wait a few seconds and press the EGG button.

7. You can stop the boiling at any moment by pressing the CANCEL button.

**Caution: Hot steam will escape out when opening the lid. Do not put your hands and face over the appliance.**

Tip! When making hard boiled eggs, quickly put the cooked eggs in cold water. The shells will come off more easily and your eggs will keep all their flavor!

## **POACHED EGG/MEAT AND TOAST**

1. Add proper amount water using the measuring cup into the heat tray.
  2. Assemble the egg salver. Break an egg in the Egg Plate and pierce the yolk, then place the Egg plate onto the Egg salver.
  3. Put the Meat salver on the Egg salver and put the meat in the Meat salver.
  4. Then cover with the transparent cover.
  5. Put the bread slice into the bread slot.
  6. Plug in the power source, press **TOAST&EGG** button, press carriage handle down vertically until it is positioned in place. **EGG** indicating light will light up and begin to steam the eggs, **TOAST** indicating light will light up and begin to toast the bread slice. When toasting has finished, the toaster carriage handle will spring up automatically.
- Note: press the **CANCEL** button at any time, and the appliance will stop operation.

## **CAUTION**

1. If the toaster starts to smoke, Press “**CANCEL**” to stop toasting immediately.
2. Remove any protective wrapping from bread, crumpets etc. prior to placing it in the toaster.
3. To prevent fire and burning, do not toast the food with extremely runny ingredients such as butter.
4. Never attempt to remove bread jammed in the slots without unplugging the toaster from the electrical power outlet first. Be sure not to damage the internal mechanism or heating elements when removing bread.
5. The bread slot is only applicable for toasting regular bread slice. For irregular shaped bread or round bread, you cannot toast it in the Bread slot.

## **CLEANING AND MAINTENANCE**

1. Unplug the power source and allow the appliance to cool down completely before cleaning.
2. Pull out crumb tray on bottom of toaster and empty it. If toaster is used frequently, accumulated bread crumbs should be removed at least once a week. Make sure the crumb tray is completely closed before using the toaster again.

3. Wash the transparent cover, egg plate, measuring cup, salvers in warm soapy water, rinse and dry completely.
4. Do not clean any parts with abrasive cleaners such as metal scouring pads and scouring powder.
5. Wipe the appearance of housing and the heat tray with a damp cloth or cleaner, never use chemicals or abrasive cleaners.
6. When not use or when storing, the power cord may be wound under the bottom of toaster.

**WARNING: For electrical safety never immerse the housing in water or other liquid.**

## **TECHNICAL SPECIFICATION**

Voltage: 220-240Va.c. 50-60Hz

Power: 1000-1200W

## **12 Month Warranty**

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at [Kmart.com.au](http://Kmart.com.au) for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.