


anko

Air Purifier
Model: AP2202A-SA
User Manual

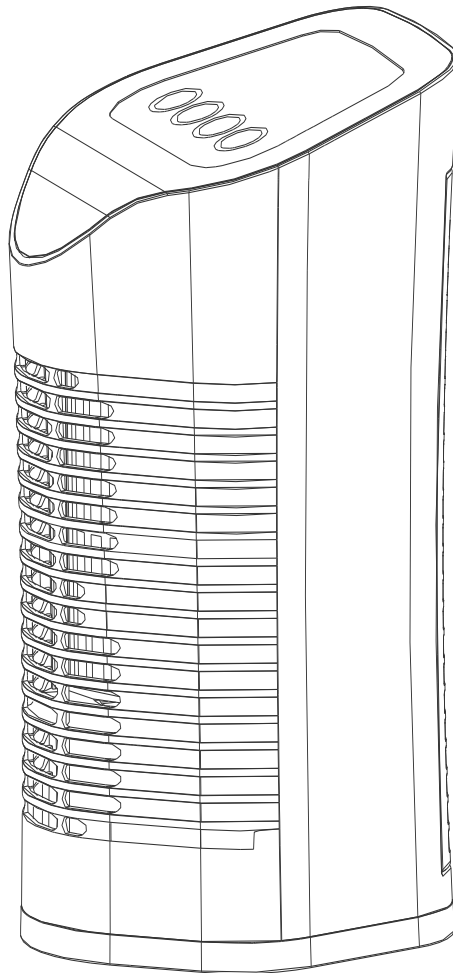

PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE

IMPORTANT SAFETY INSTRUCTIONS:

When using electrical appliance. Basic safety precautions should always be followed including the following:

READ ALL INSTRUCTIONS BEFORE USING

- All components need to be installed in accordance with the user manual instructions for correct performance of unit.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- A unit should never be left unattended while plugged in.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- If the supply cord is damaged, **DO NOT** use. For electrical safety, any repairs to the product should only be carried out by a qualified electrical person only or the product must be disposed of.
- Do not use appliance for other than intended use.
- Do not attempt to adjust or repair the unit. Servicing must be performed by professional or qualified personnel.
- DO NOT use outdoors. For indoor use only.
- Keep the rear air inlet and outlet free from air blocking materials such as clothing, plastic bags or papers. Air flow is required for the unit to operate effectively.
- Place unit on a flat location at least 30cm away from wall or other appliances.
- Keep the unit away from fire, flammable gas, combustible products or vapours and corrosive substances.
- DO NOT operate the unit in bathrooms or other humid environments.
- DO NOT operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Do not operate the unit without filters.
- Do not operate the product in any greasy environment, such as in the kitchen. This product is not intended to filter oil or grease from the air.
- Electrical supply shall be disconnected prior to beginning any such cleaning operation.
- NEVER drop or insert any object into any opening.
- DO NOT carry this unit by the power cord or use the power cord as a handle.

CAUTION

- Never cover the unit while it is operating.
- Always keep the cord away from high temperature and fire.
- Stop using this unit if there is an unusual noise or smell.
- Unplug this unit when not in use for a long period of time.
- Do not touch the water or any parts of the unit that are covered by water while the unit is on or plugged in.

**FOR HOUSEHOLD USE ONLY
READ AND SAVE THESE INSTRUCTIONS**

FEAUTURES

Filters

The 3-layer filter contains a Pre-filter, HEPA filter and an activated carbon filter.

- The Pre-filter traps larger particles such as dust, pet hair and large-sized allergens.
- The HEPA filter (Grade H11) removes 99.5% of particles as small as 0.3 microns and greater from the air. It is capable to remove smoke, dust, pollen, pet dander and mould spores in the air.
- The Activated carbon filter absorbs common household odours, VOCs, cigarette odours and smoke.

Ionizer


Turn on the ionising function which help to take the pollution out of the air.

Fan speed/ Sleep mode


Allow selection for desired speed setting: High, Medium and sleep.

Default setting at medium speed.


Timer

Programmable timer to turn off the unit after a pre-set amount of time. Press the  button to program the timer at 1hr, 2hr, 4hr and 8hr.

PARTS

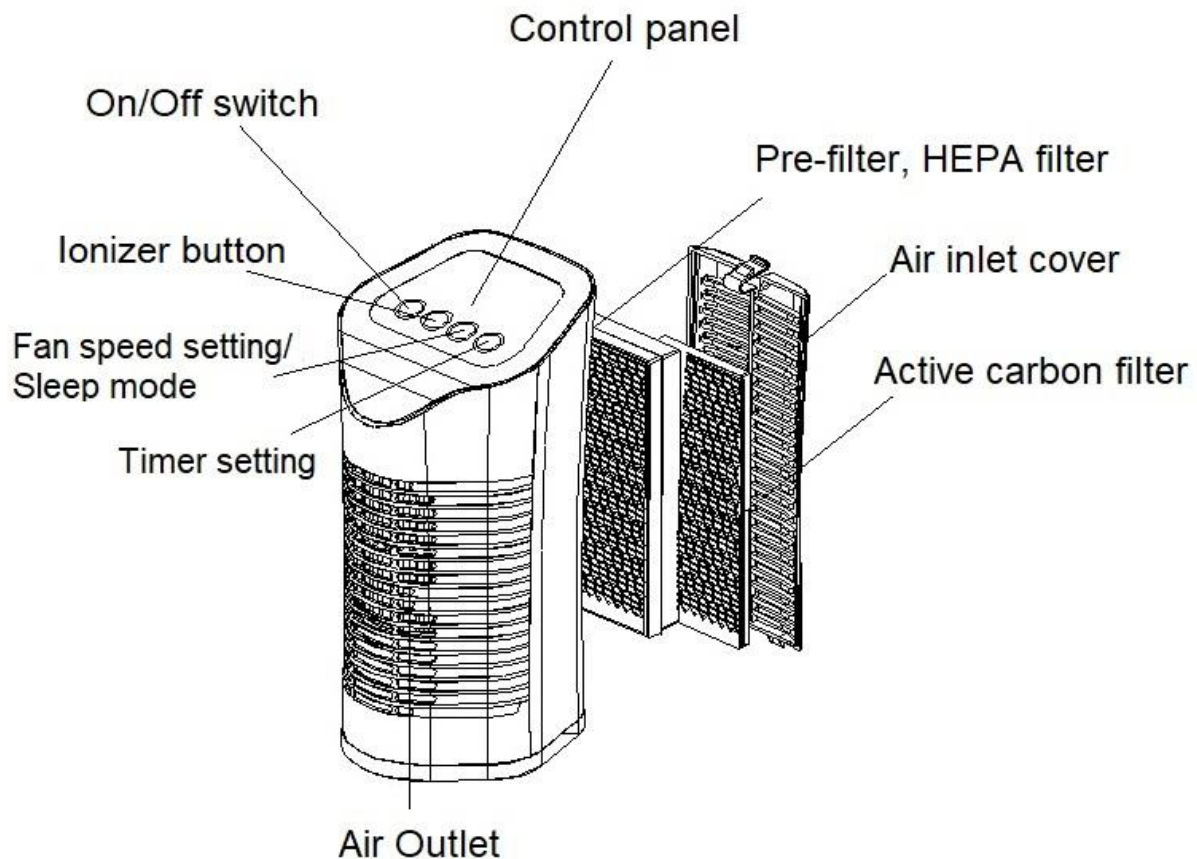

CONTROL PANEL

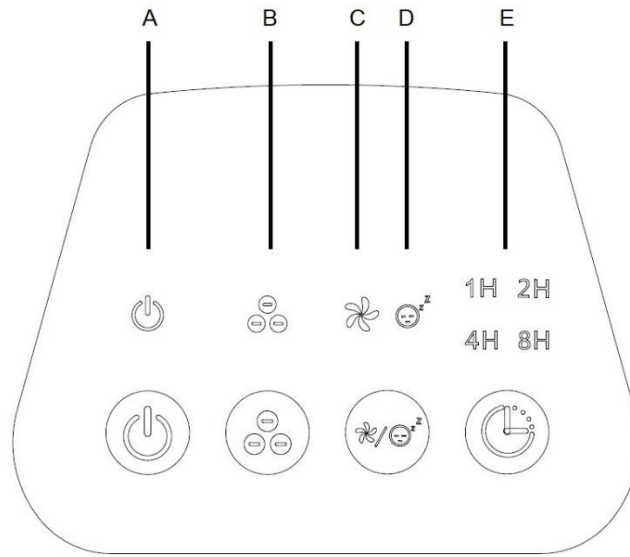


- A. Power indicator B. Ionic function indicator C. Fan speed indicator
 D. Sleep mode indicator E. Timer indicator




HOW TO USE



IMPORTANT! Before first use, open air inlet cover and unwrap filters before operation.

1. Plug unit in to a 220-240V AC electrical outlet. Press the ON/OFF switch to turn unit on. Press the ON/OFF switch again to turn the unit off.

Note: The purifier default setting is at Medium speed.

2. To select speed, press  button. The fan speed will cycle from HIGH, SLEEP and MEDIUM.

Indicator light	Fan Speed
	MEDIUM
	HIGH
	SLEEP MODE

3. To set automatic off timer, press  until LED light is on desired time 1H/ 2H/ 4H/ 8H. Unit will automatically switch off once selected time duration has lapsed.
4. To activate IONIC FUNCTION, press . The ionic function indicator will illuminate. Press again the button to deactivate the function.

CLEANING AND MAINTENANCE

Caution: Before cleaning the unit, turn off the unit and unplug from the mains supply.

External cleaning of unit:

- Turn off and unplug the unit.
- Use a washcloth slightly dampened with a little water and dishwashing soap to wipe the outer case surfaces.
- Do not allow water to slip into the internal parts as this could damage your unit and result in electrical shock and injury to you.
- Allow the unit to thoroughly dry before use.

Cleaning the Pre-filter, HEPA filter and Activated carbon filter

- Turn off and unplug the unit.
- Release the air inlet cover by pressing on the locking latch then pull.
- Pull out the filters by the fabric belt attached.
- Run a vacuum cleaner with brush attachment on low power setting along the HEPA (white side) and Activated carbon filters to pick up the dust and various particles.
- Re-attach filter layers and the rear cover.
- When placing the filters back into the air purifier, ensure that the fabric belts are facing outwards and the filters are facing towards the air inlet.

Note: It is recommended that the filters are cleaned every 100-500 hours of operation, depending on the air quality of the room.

REPLACING FILTER

When the lifespan of the 3-layer filter reaches its end, discard the old filter and replace with a new one.

The lifespan and duration of the filter depends on the air quality and surrounding environment. The higher level of pollutants, the shorter the filter lifespan. It is advisable to change the filter at 8-12 months or 2000 hours of operation.

How to replace filter

- Turn off and unplug the unit.
- Release the air inlet cover by pressing on the locking latch and then pull.
- Pull out the filters by the fabric belt attached.
- Install a new HEPA filter and a new activated carbon filter in position. Make sure the fabric belts are facing outwards and the filters are facing towards the air inlet.
- Replace the air inlet grill back in position.

TECHNICAL DATA

MODEL NO.	AP2202A-SA
VOLTAGE	220-240V
POWER CONSUMPTION	22 Watt
CLEAN AIR DELIVERY RATE	50m ³ /h
COVERAGE AREA	4-6m ²

TROUBLESHOOTING

Some problems may be caused by minor faults that you can correct yourself. To do so, follow the instructions in the following table. If it is still not possible to resolve the problem, contact Kmart customer service. Do not attempt to repair the air purifier yourself.

Problem	Possible cause	Solution
Power Light is off/ No power	<ul style="list-style-type: none">• Unit is not plugged in• No power at outlet	<ul style="list-style-type: none">• Plug the unit to mains supply, press the POWER button to turn the power on• Check circuits and fuses or try a different outlet
Reduced airflow or Poor filtering	<ul style="list-style-type: none">• Air inlet or outlet may be blocked• HPEA filter may be clogged	<ul style="list-style-type: none">• There must be at least 30cm between unit and wall or other appliances.• Call customer service.

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.