FRONT

~858°

fold

105mm

Permitted by law, this warranty does not cover damage caused by accidents, product modifications, dismantling of the scooter or attempts at repairs by persons we have not authorised or by your use of the Light up scooter contrary to any of our usage

To the extent permitted by law, liability is excluded for indirect, consequential and incidental loss or damage.

How to claim under the warranty

For the warranty to be honoured, please contact us at -889 Warranty Claims, Unit 1601, 16/F., Ginza Square 567 Mathan Road, Kowloon, Hong Kong, For telephone enquiries contact -86-21-6238532. For email enquiries contact chinGelrédasSorm. We may require you to deliver the faulty scooter to a location within Australia.

We will assess the defect and, as long as none of the exclusions above apply, will repair, replace, provide a redfl or refund for the scotter in accordance with the above, if applicable we will return the repared or replaced scotter to you by the channel through which it was submitted to us.

Manufactured by Ride 858. Lisht 1801; 1614; Carus Square 507 Nathon Soed, Kowkon, Hong Kong 164-86-31 Acception Romg 8 you have any product inquiries, pleases erroll us. December 2015 page 164-864.



▲ GENERAL WARNING: Prior to assembly, this package contains small parts, which are a choking hazard and may also contain sharp edges and sharp points. Keep away from children until fully assembled. LIGHT UP Adult assembly required

ELITE LED

Scooter riding can be a hazardous activity. Scooters can, and are intended to move and it is therefore possible to get into dangerous situations and/or lose control and/or fall. If such

dangerous situations and/or lose control and/or fail. It such things occur you can be seriously injured or die, LIKE ANY OTHER MOWING PRODUCT, USING A SCOOTER CAN BE A DANGEROUS ACTIVITY AND MAY RESULT IN INJURY OR DEATH EVEN WHEN USED WITH PROPER SAFETY PRECAUTIONS, USE AT YOUR OWN RISK AND USE COMMON SENSE.

AT YOUR OWN RSK AND USE COMMON SENSE.

Adult assembly required. Adult spervision required.

Always wear safety equipment such as helmet, knee pads and
elbow pads. Amys wear a helmer when riding your scooler
and keep the chinstrap securely buckled. Always wear shoes.

Bilde on smooth, paved surfaces away from motor whickles.

Avoid sharp bamps, drainage grates, and sudden surface
changes. Scooler may suddenly stop.

Avoid streats and surfaces with water, sand, gravel, dirt, leaves,
and other debris. Wet weather impairs traction, braking, and
visibility.

Do not ride at night.

Brake will get hot from continuous use. Do not touch after

Avoid excessive speed associated with downhill rides.

Adults must assist children in the initial adjustment procedures

AGES 5+ YEARS



to unfold scooter, adjust handlebar and steering to height, and to unfold scooter, adjust handlebar and steering to height, and finally to fold scooter.

- Obey all local traffic and scooter nding laws and regulations.

- Watch out for pedestrians.

- Check and secure all fasteners before every ride.

- Replace worn or broken parts immediately.

- Hastimum weight- Solg (11 Olss), Class B.

- All children and preteners should ride with adult supervision and guidance at all times.

- No modifications other than to the manufacturer's instructions shall be market.

FAILURE TO USE COMMON SENSE AND HEED THE ABOVE WARNINGS FURTHER INCREASES RISK OF SERIOUS INJURY USE AT YOUR OWN RISK AND WITH APPROPRIATE AND SERIOUS ATTENTION TO SAFE OPERATION. USE CAUTION.

SERIOUS ATTENTION TO SAFE OPERATION. USE CAUTION.

WARNING ANAWYS INSPECT SCOOTER PRIOR RIDING.
Self-locking nuts and other self-locking fixings may lose their
effectiveness. Properly inspecting and maintaining your
scooter can reduce the risk of injury. Always inspect your
scooter before riding and regularly maintain it.

WARNING: CHECK LOCAL LAWS REGARDING
SCOOTER USE. Check local laws and regulations to see
where and how you may use your Light up scooter legally.
In many states and local areas scooter riders are required
BY LAW to wear a helmet. Check local laws and regulations
regarding laws governing helmet use and scooter
operation in your area.





To unfold scooter

1. Pull the folding slide down firmly, (see picture A).

2. Push the folding slide forward, (see picture B).

3. When folding the scooter, ensure that the bar is facing 90° angle to the scooter, if this is not done, it will not close properly. (see picture C).

To adjust handle bar height

 Aligment screw. The screw on the clamp that adjusts the height of the bar must not be removed. This screw is to align the handle bar with the front wheel and keep clamp attached to steering column. If you loose this screw, do not use scooter

untill screen has been replaced. (see picture E).

2. To adjust the handle bar release the clamp and press the spring button then adjust the handle bar to the appropriate spring outron tree adjust the handle bar to the appropriate height of the rider. The buttom must then pop into the steering column, leep picture D&E. Close clamp before use, (see picture E. 3. After use, simply open the clamp, press the spring loom and push down the handle bar. Close the clamp to secure the handle bar. Goe picture F. 4. Press back of the bar's bottom, handle bar cn/off switch to contact.

To use the lights on your Light Up Scooter
Press . LED lights ON.
Press . Select from the 8 different modes.
Press . LED lights off (Long press to turn off the power).

13

fold

E

BACK

use this product at the same time

RECOMMENDATIONS FOR USE

Before each use, check that your scooter is correctly

- Do not allow more than one child (more than one rider) to

Teach children how to ride safely. Keep both hands on the handlebars and keep feet on the deck while riding Keep shoelaces out of the way of wheels or pivots. Keep hands and feet clear of pivot and steering mechanism

TATCHTO COMMON

2

- Battery Replacement (see picture H)

 1. Open the Battery Door with a screwdriver

 2. Place 3 x AA batteries inside.

 3. Close the battery door with that same screwdriver
- 3. Gove the dativey door with that same screwturer
 4. You're all sets:

 Batteries must be changed by an adult. Unscrew the cover
 with a screwdriver and lift away from the back of the
 product. Remove old batteries and replace with new
 batteries. Be sure to insert batteries correctly according to +
 and symbols located on the battery compartment. Replace
 the battery cover and tighten the screw securely before
 further use.

△ WARNING!

- Do not mix old and new batteries.
 Do not mix alkaline, standard (carbon-zinc), or rechargeable has a manual me, standard (carbon-zinc), or rechargeable batteries.

 - Rechargeable batteries must be removed from the toy before being recharged.

 - Non-rechargeable batteries are not to be recharged.

 - Rechargeable batteries are to be charged only under adult supervision.

- ONLY use batteries specified by the manufacturer.

- -ONLY use batteries specified by the manufacturer. -On ont short-circuit battery terminals. -Always remove weak or dead batteries from product. -Remove batteries if the product will be stored for an extended period of time. -For safety reasons, remove and discard all packaging attachments before glving toy to child. Please retain this packaging for future referance.

MAINTENANCE

- Regular maintenance enhances the safety of the Light up
- oter. This includes: scooter. This includes: - Check the condition of the bearings and wheels regularly,
- and replace them if necessary.

 Check regularly for wear and tear. Discontinue use if breakage is found. Failure to do this may result in injury.

CLEANING YOUR SCOOTER

Wipe with a damp cloth to remove dirt and dust. Do not use industrial cleaners or solvents as they may damage the surfa Do not use alcohol, alcohol-based or ammonia-based clean-as they may damage or dissolve the plastic components or soften the decals or decal adhesive.

HOW TO RIDE

1. Place one foot on the footboard o 1. Place one foot on the footboard or the Light up scooter and use your other foot to propel the scooter.

2. For controlled stops, apply the brake by stepping on the rear fender/brake. We recommend that you practice applying the brake at various speeds and in an open area free from obstructions before riding your scooter around others.

your scooter around others



13

AN IMPORTANT MESSAGE TO PARENTS: This manual contains important information. For your child's safety, it is you responsibility to review this information with your child and make sure that your child understands all warnings, cautions, instructions and safety topics. We recommend that you periodically review and reinforce the information in this manual with younger infers and that you are required to inspect and maintain your child's scooter to ensure their safety, responsibility to review this information with your child and make sure that your child understands all warnings cautions, instructions and safety topics. We recommend that you periodically review and reinforce the information in this manual with younger inders and that you are required to inspect and maintain your child's scooter to ensure their safety. AN IMPORTANT MESSAGE TO PARENTS: This manua

WARRANTY

6

The -BSB- Light up scooter is covered by a warranty in the terms below. The warranty applies for a period of 12 months from the date of purchase.

We warrant that the scooter will be substantially free from defects for the warrant unar use stocker win be substantially neer non-release for the warranty period. To the extent permitted at law, and subject to the following paragraph, we will, at our election repair, replace or provide credit in respect of scooters that are notified to us, during the warranty period, as being defective.

Our goods come with guarantees that cannot be excluded unde the Australian Consumer Law. You are entitled to a replacement refund for a "major failure" and compensation for any other reasonably foreceable loss or damage. You are also entitled to have the goods repaired or replaced if goods fall to be of acceptable quality and the failure does not amount to a major failure. Our goods come with guarantees that cannot be excluded under

The term "major failure" is defined in the Australian Consumer Law and includes but is not limited to:

where the goods are substantially unfit for the purpose for which such goods are commonly supplied and cannot easily and within a reasonable time be remedied to make them fit for such a purpose;

· where the goods are unsafe.

The benefits provided by this warranty are in addition to any other rights and remedies of the consumer under any law in relation to t scooters or service to which the warranty relates.

1

The warranty does not cover defects or problems that arise due to you causing the scooter to become of unacceptable quality, such as improper assembly, failure to take reasonable care of the scooter or damage caused by abnormal use of the scooter. To the extent

8

12

W