INSTRUCTIONS FOR USE

Warning and Notice:

- 1. This trike is only suitable for children aged 18-60 month old.
- 2. An adult must read these instructions carefully before use, otherwise it might compromise the child's safety.
- 3. Please retain this instruction sheet permanently for future reference.
- 4. This trike should not be used near fire, heat, or water.
- 5. Assembly should be done by an adult.
- 6. Adult supervision is required when using this trike.
- 7. Not to be used on the street or roadway.
- 8. Maximum weight limit is 30kg.
- 9. Please ensure the safety lock is installed correctly for each use.

Warning and Maintenance:

- 1. Inspect the safety lock prior to each use.
- 2. Do not ride the trike in any extreme weather conditions.
- 3. The rider should wear a helmet and protective gear when using the trike.
- 4. The rider needs to pedal for the trike to run.
- 5. The parent push bar is a moving tool, it's not suitable for steering.

This product meets the standard of Consumer Protection Notice No. 14.

