

# SLR-19044 ELECTRIC WAX WARMER

## IMPORTANT SAFETY INSTRUCTIONS:

The following safety precautions should always be followed, to reduce the risk of electric shock, personal injury or fire. It is important to read all of these instructions carefully before using the product, and to save them for future reference or new users.


1. This product must only be used as intended in accordance with the enclosed operating instructions.
2. Do not carry the appliance by the mains cable or pull the cable to remove the plug from the socket.
3. If the appliance stops unexpectedly or appears to malfunction, switch off the power supply, unplug from the mains and stop using immediately. Seek professional advice to rectify the fault or make repairs.
4. Switch off the power supply or unplug from the mains socket when not in use, before cleaning or changing accessories.
5. Avoid positioning the appliance where the power cable might be accidentally trapped or damaged.
6. Keep the appliance and cable away from sources of heat, sharp objects or anything that may cause damage.
7. Ensure the appliance is switched OFF before connecting the mains power supply.
8. Be aware that some surfaces may become hot. Do not touch hot surfaces and supervise others accordingly.
9. This product has not been designed for use by children.
10. Children should be closely supervised at all times when they are near any electrical appliance.
11. To protect against electric shock, never allow the appliance, the mains cable or plug to come into contact with water or any other liquid.
12. Never reach for any appliance that has fallen into water. Switch off the power supply at the mains immediately and unplug. Do not re-use until the product has been inspected and approved by a qualified electrician.
13. Always ensure that hands are dry before operating or adjusting any switch on the product or touching the plug and mains supply connections.
14. To disconnect, first ensure that all controls are in the OFF position, then remove the plug from the electricity supply.
15. Where relevant keep all ventilation slots, filters, etc. uncovered and clear of debris. Never drop or insert objects into the openings.
16. Do not use outdoors. This appliance has been designed for domestic indoor use only.
17. Do not use the Wax Warmer if the supply cord is damaged, it must be replaced by the manufacturer in order to avoid a hazard.
18. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
19. Children should be supervised to ensure that they do not play with the appliance.
20. The appliance is only to be used with the recommended vaporizing medium. The use of other substances may produce an unstable result or fire risk.

## Product specification

- Rated voltage: 220-240V ~ 50Hz
- Max. 28W

## INSTRUCTIONS FOR ASSEMBLY

1. Place ceramic dish on top of the Wax Warmer.
2. Be sure the Switch on the back of the Wax Warmer is in the OFF position. Place 1-2 Wax Melt pieces in the Wax Warmer dish. Never place more than two Melts in the Wax Warmer dish at one time.
3. Insert the plug from the power cord into the socket. When switched "ON", the internal light will also turn on.
4. Fragrance is released as the Melts begin to liquify.
5. Once the Wax Melts have liquified do not add additional Melts to the dish. First remove hardened wax and then add fresh Melts to the dish.

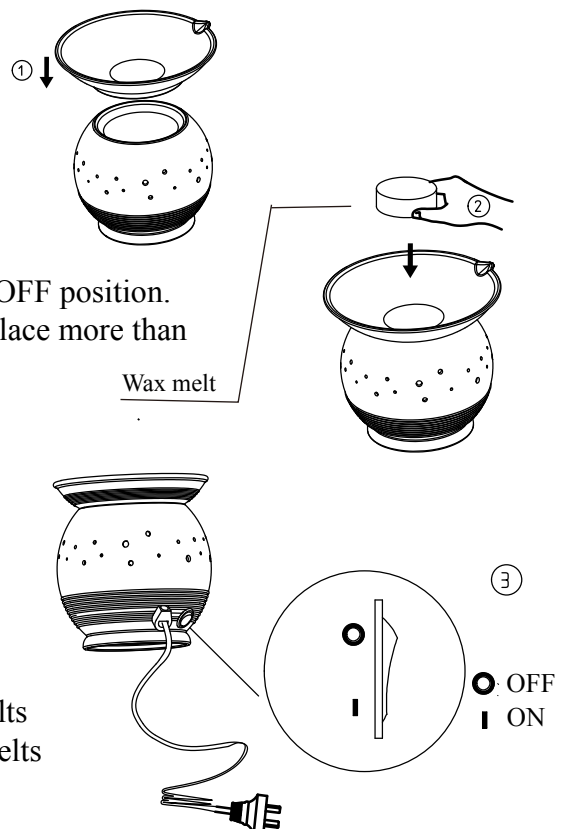

## **Warning**

1. This appliance must not be immersed for cleaning or for any other purpose.
2. Do not leave appliance unattended when in use.
3. Do not place this appliance where it can fall into water such as near a sink or bathtub. Immediately unplug Wax Warmer from the power outlet if it falls into water.
4. The appliance may become very hot, allow the appliance to cool before handling.
5. Do not touch or move the liquid wax until it has cooled and solidified.
6. Do not place water or oil in the Wax Warmer dish with the Wax Melts.
7. Keep out of reach from children, pets and things which can catch fire.
8. Avoid any form of spillage on the unit.

## **Maintenance**

To help ensure a long working life, please properly maintain the Wax Warmer.

1. For best results always start with a clean, dry dish.
2. Always turn off and unplug the power cord before cleaning the Wax Warmer.
3. Wax does not evaporate in the Wax Warmer. Remove solidified wax from the Wax Warmer dish when the fragrance has stopped.
4. To remove used wax, let the wax cool and solidify completely, place the dish in the freezer for around 20 minutes and pop wax out of dish. If needed, use a blunt plastic or rubber item to aid wax out of the dish. Dispose of wax in rubbish, not down the sink.
5. Wipe Wax Warmer clear with a soft, dry cloth.
6. Allow dish to warm to room temperature before reheating.



## 12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at [Kmart.com.au](http://Kmart.com.au) for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.