

LIGHT & SOUND MICROPHONE

INSTRUCTION MANUAL

PACKAGE CONTENTS

-Sing-Along Microphone -Built-in Aux Cable

FEATURES

-Bright flashing LED lights for a party -Built-in AUX cable to connect to your music player device -Runs on 3 AAA batteries

INSERTING BATTERIES


Your device requires three AAA batteries for power. To insert or replace batteries, please follow the steps below:

1. Use a screwdriver to remove the screw on the battery compartment door.
2. Insert 3 AAA 1.5V batteries. Make sure to insert the batteries with the correct polarity (+, -) as displayed in the battery compartment.
3. Once batteries are inserted, close the battery compartment, and then use the screwdriver to screw the battery compartment door in place.

WARNING:


Do not mix old and new batteries.
Do not mix alkaline, standard (carbon-zinc) or rechargeable (Nickel cadmium) batteries.
Battery installation by adult required.

Use a screwdriver (not included) to open the battery compartment door.

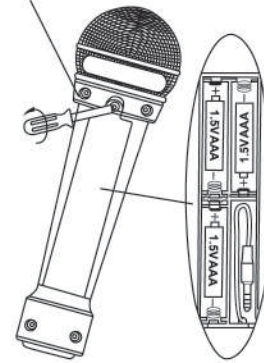

POWERING ON YOUR MICROPHONE


1. Slide the "POWER" switch to the "ON" position to power on your microphone. Once powered on, speak or sing directly into the microphone.
2. Slide the "POWER" switch to the "OFF" position to power off your microphone.

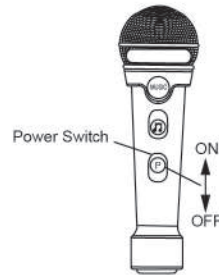

SINGING INTO YOUR MICROPHONE

Once you power on your microphone, you can sing into it even without a music player device connected.


For best results when singing, use your hands or fingers to wrap around the head of the microphone. By doing so, the sound of your voice funnels more directly into the microphone, allowing for clearer and louder vocals.

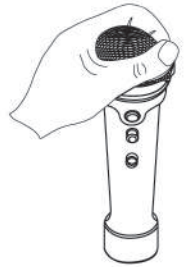

CONNECTING MUSIC PLAYER DEVICE

Open the battery compartment door to access the built-in aux cable. This cable can be plugged into the headphone jack of your music player device.


Once your microphone is powered on, music from your music player device will play through the microphone's speaker.

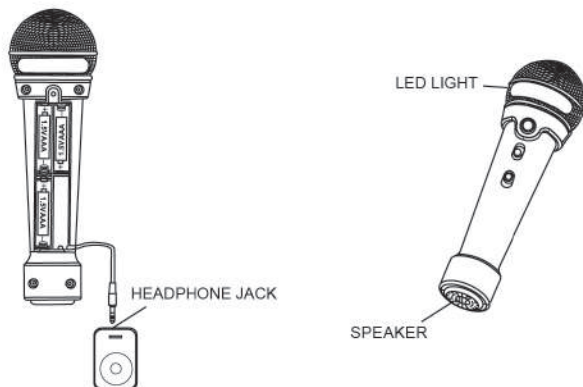

SINGING ALONG WITH MUSIC (KARAOKE)

You can sing into the microphone while music is playing from your music player device.

When singing, slide the effects switch to the "SING" position to help mask out the vocals of your music. You can also slide the effects switch to the "ECHO" position to add some sound effect to your vocals.

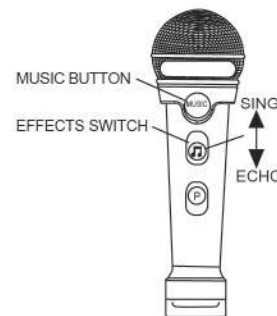

If you do not have a music player device plugged in, press the Music Button to play some built-in audio tracks.

Keycode: 42880189

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

WARNING: CHOKING HAZARD
SMALL PARTS. NOT FOR CHILDREN UNDER 3 YEARS.

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS, AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

WARNING: THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITISED INDIVIDUALS.