 


3+
years

 
ELECTRONIC ANIMAL MANUAL



UNICORN

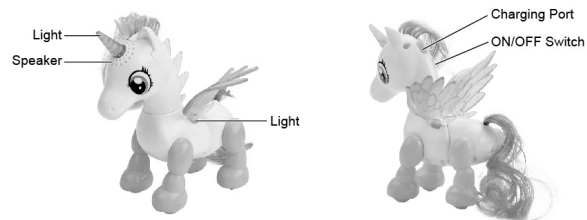


PUPPY

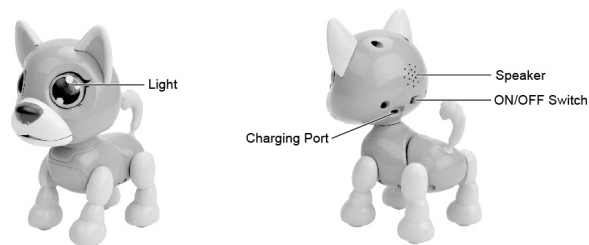

BATTERY CHARGE INSTRUCTIONS

Attention: Do not charge battery immediately after each play, let the battery cool down for a while.

1. Turn off unicorn / puppy.
2. Plug the charger into a USB port and battery as shown. (The battery connector will only fit in one way. Do not force the connectors together). The LED light will light up when charging. When it is finished charging, the light will turn off.

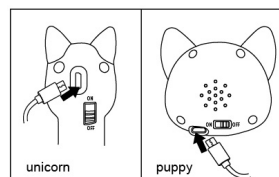

POWERING ON YOUR UNICORN / PUPPY

Once you have fully charged your unicorn / puppy, you can go ahead and power on your unicorn / puppy. To do so, slide the ON/OFF switch of the unicorn / puppy to the ON position. When you have finished playing with your unicorn / puppy, slide the ON/OFF switch to the OFF position. NOTE: When the unicorn / puppy is not being used for longer than a minute, it will make a sound to remind you to turn it off every minute. When your unicorn / puppy is running low in power, it will stop.

TOUCH SENSING

Unicorn: There are 3 ways to get the unicorn to make different sounds. (Total 4 sounds included)

1. Touch the unicorn's forehead.
2. Clap with your hands next to the unicorn.
3. Blow air onto the unicorn's head.



Puppy: There are 3 ways to get the puppy to make different sounds. (Total 4 sounds included)

1. Touch the puppy's head.
2. Clap with your hands next to the puppy.
3. Blow air onto the puppy's head.



VOICE REPEAT FUNCTION

Unicorn: Hold your hand over the unicorn's forehead until you hear a beep sound. Speak to the unicorn and then the unicorn will repeat what you have said. If you want to exit the voice repeat mode, hold your hand on the unicorn's forehead for 1 second.



Puppy: Hold your hand over the puppy's forehead until you hear a beep sound. Speak to the puppy and then the puppy will repeat what you have said. If you want to exit the voice repeat mode, hold your hand on the puppy's forehead for 1 second.



WARNING: CHOKING HAZARD
SMALL PARTS. NOT FOR CHILDREN UNDER 3 YEARS.

WARNING: TO BE CHARGED BY AN ADULT CHARGE TOY BY SUPPLIED USB ONLY. DISPOSE OF PRODUCT RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

WARNING: THE TOY CONTAINS A BUILT-IN RECHARGEABLE BATTERY THAT IS NON-REPLACIBLE. THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITISED INDIVIDUALS.

Keycode: 42883777

ADULT SUPERVISION REQUIRED.
PRODUCT MAY VARY FROM IMAGE SHOWN.
PLEASE KEEP THE PACKAGING FOR FUTURE REFERENCE.
READ THE INSTRUCTIONS BEFORE OPERATING THE PRODUCT.

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.