

 
 
Assembly Instructions

42884903 GARMENT RACK WITH 2 DRAWERS

ATTENTION:

- DO NOT TIGHTEN THE SCREWS UNTIL IT HAS BEEN FULLY ASSEMBLED.
- FOR INDOOR USE ONLY.
- MAXIMUM LOADING WEIGHT: 10KG FOR CLOTHES RAIL, 5KG FOR EACH SHELF, 4KG FOR EACH DRAWER.


Hardware List

	a	M6	4pcs		b	M6	4pcs
	c	M6x22	2pcs		d	M6x13	4pcs
	e	M6x9	4pcs		f	M6x22	18pcs
	g	6. 3x40	8pcs		h	M6	4pcs
	i	st4. 2x10	1pc		j	st4x40	1pc
	k	76x32	1pc		l	6x25	1pc
	m		2pcs		n		1pc

2


			
A 1pc	B 1pc	C 2pcs	D 2pcs
			
E 2pcs	F 1pc	G 1pc	H 1pc
			
I 1pc	J 1pc	K 2pcs	L 2pcs

3

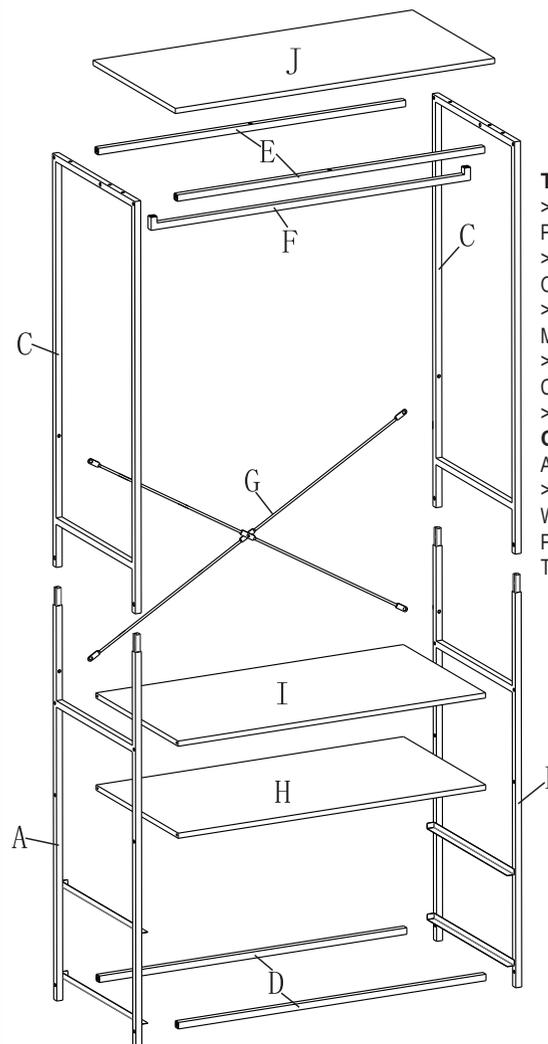


TOPPLING FURNITURE WARNING:

- >IT IS STRONGLY RECOMMENDED THAT THIS PRODUCT IS PERMANENTLY FIXED TO THE WALL.
 - >PLEASE SEEK PROFESSIONAL ADVICE IF YOU ARE IN DOUBT OF WHAT FIXING DEVICE TO USE.
 - >REGULARLY CHECK THAT ANCHORS ARE SECURELY MAINTAINED.
 - >STABILITY OF TALL ITEMS MAY BE AFFECTED BY THICK PILE CARPET OR UNEVEN FLOORS.
 - >DO NOT PLACE UNANCHORED TELEVISIONS ON FURNITURE.
- CAUTION:** FOR YOUR SAFETY WHEN ATTACHING THE ANCHOR FIXINGS, PLEASE NOTE THE FOLLOWING:
- >CHECK ANY ELECTRICAL WIRES OR PLUMBING INSIDE THE WALL BEFORE DRILLING ANY HOLES (IF YOU ARE UNSURE PLEASE SEEK PROFESSIONAL ADVICE FROM A QUALIFIED TRADESPERSON).

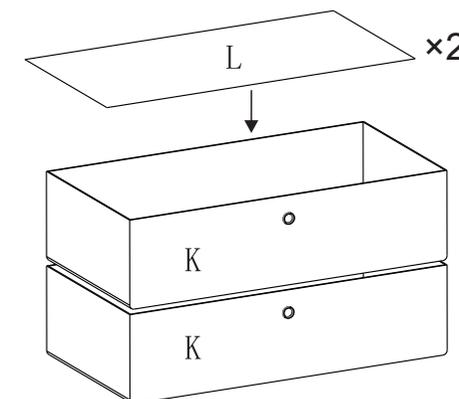


Step 1

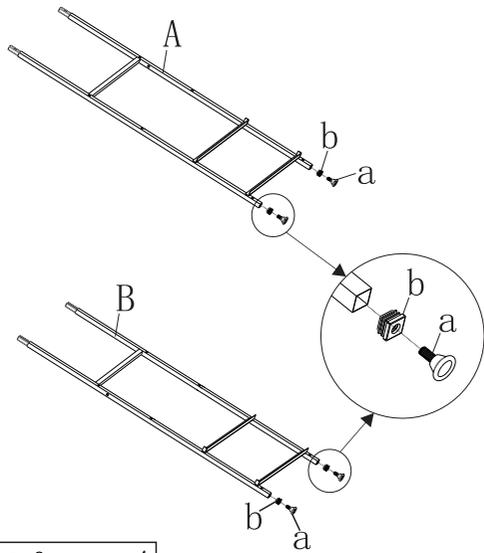


-  a x 4
-  b x 4

Step 2

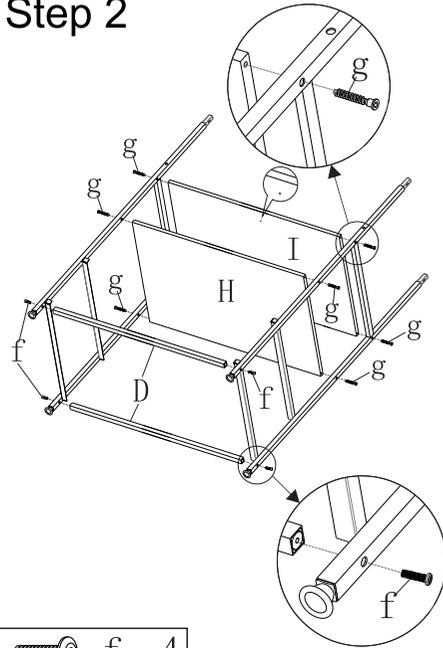


-  f x 4
-  g x 8

Step 3

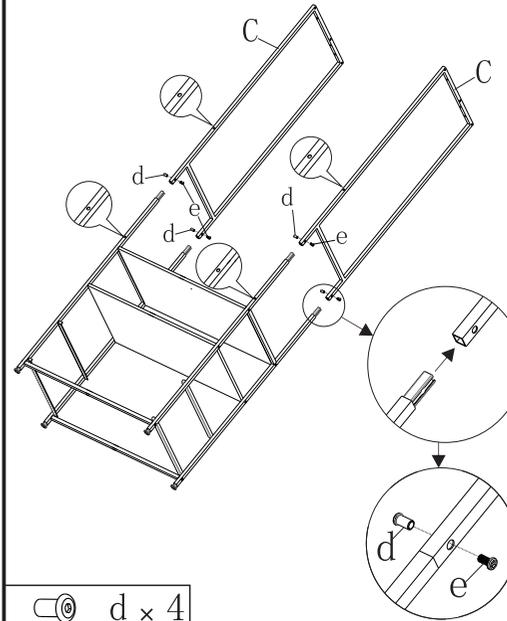


-  d x 4
-  e x 4

Step 4

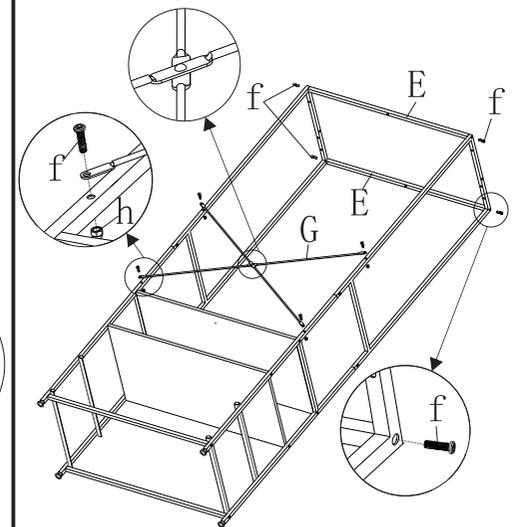


-  f x 8
-  h x 4

Step 5

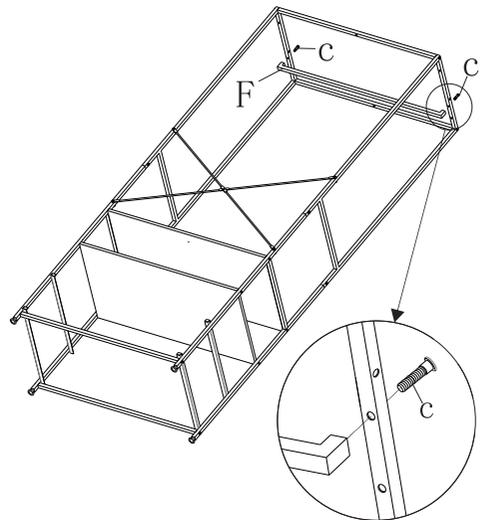


-  c x 2

Step 6

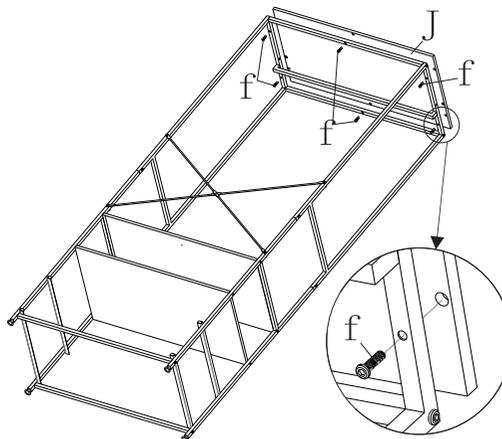


-  f x 6

Step 7

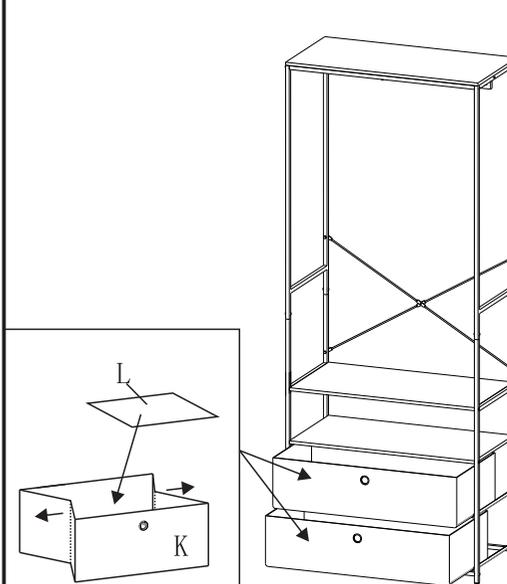

Step 8

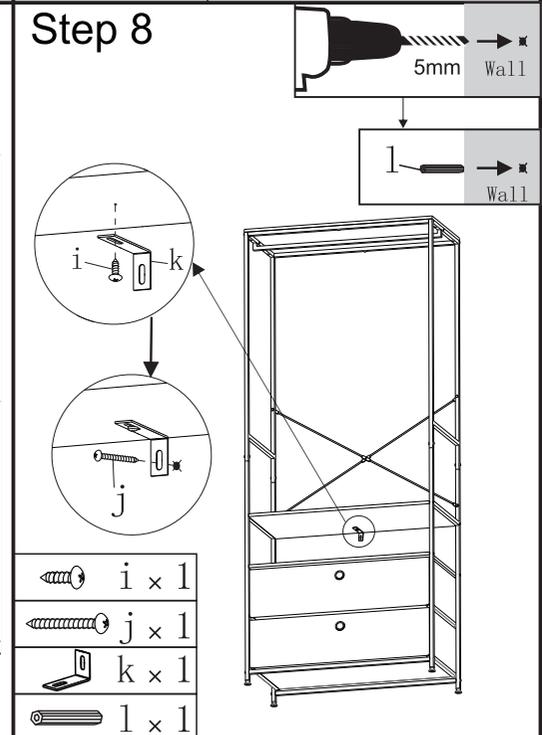

-  i x 1
-  j x 1
-  k x 1
-  l x 1