


# MONSTER TRUCK

## INSTRUCTIONS



- 1. Unscrew to open the battery compartment.
- 2. Insert batteries into the correct + and polarities.
- 3. Close the cover.



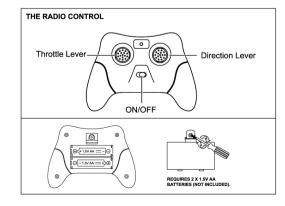

#### How to use simultaneously:

 
- 1. Turn on the vehicle, then turn on the transmitter.
- 2. When the vehicle is functioning, that means they are matched.
- If you have more than two vehicles, please pair one by one. When the second vehicle is pairing, please always keep the first vehicle and transmitter on.
- Please turn off both the vehicle and transmitter and re-start all pairing processes if you are changing to play with another 2.4GHz transmitter.

### Start:

- 1. How to move forwards or backwards:
- Push the throttle lever up, the vehicle will move forwards.

Pull the throttle lever down, the vehicle will move backwards.








#### 2. Turn left or right:

 Move the direction lever to the left and the vehicle will turn left. Move the direction lever to the right and the vehicle will turn right.





#### KEYCODE: 42887010

PERFORMANCE TIPS: DO NOT DRIVE THE VEHICLE THROUGH WATER. DO NOT DRIVE THE VEHICLE INTO ANY HARD OBJECT. PRODUCT MAY VARY FROM THE IMAGE SHOWN. PLEASE KEEP PACKAGING FOR FUTURE REFERENCE. READ THE INSTRUCTIONS BEFOR MARNING: CHOKING HAZARD-SMALL PARTS.

NOT SUITABLE FOR CHILDREN UNDER 3 YRS.

WARNING: THIS TOY PRODUCES FLASHES THAT TRIGGER EPILEPSY IN SENSITISED INNIVIDUALS.

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY(+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.



