

Spy Recon Watch


6+ years

HOW TO TURN ON THE SPY RECON WATCH

Press and hold set button for 2 seconds to turn on the spy recon watch.

HOW TO SET TIME, DATE, ALARM AND 24 HOUR TIME

1. Press and hold mode button for 2 seconds to enter setup mode, then press mode button to cycle through the settings. For each setting, use sensor button to advance the number, set button to decrease.

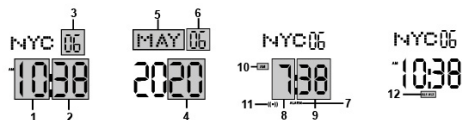

- Press mode button: HOUR [1] will flash.
- Press mode button: MINUTES [2] will flash.
- Press mode button: Seconds [3] will reset to zero. (No advance/decrease)
- Press mode button: YEAR [4] will flash.
- Press mode button: MONTH [5] will flash.
- Press mode button: DAY [6] will flash.
- Press mode button: ALARM [7] screen appears. Press set button to toggle alarm on and off (the icon appears/disappears).
- Press mode button: ALARM HOUR [8] will flash.
- Press mode button: ALARM MINUTES [9] will flash.
- Press mode button: To select time hour mode [10].
- Press set button: To select 12-hour or 24-hour time mode (When in 12-hour mode, AM or PM will appear).
- Press mode button: To quit set mode.

NOTE: The spy recon watch will return to normal time mode after 5 seconds without input.



HOW TO SET MOTION ALARM

- Press sensor button and hold for 2 seconds, this will enable sensor mode and the sensor icon will appear. (Not flash)
- Wait 5 seconds for sensor to activate.
- When disturbed, the alarm sounds and the sensor icon [11] will flash for around 6 seconds. The time of movement will store at AL1 or AL2 (new record will replace oldest record). It can store maximum of two records in hour & minutes only.
- Press mode button to access AL1 and AL2 [12].
- Press sensor button and hold for 2 seconds will disable sensor mode and sensor icon will disappear.

HOW TO USE THE STOPWATCH

- Press mode button and sensor button at the same time: STW icon appears.
- Press sensor to start / stop the timer.
- While stopped, press set button to reset to zero.
- Press mode button to quit stopwatch mode.

DECODER SCREEN

The decoder screen can reveal secret messages written in pencil on the included secret paper.

NIGHT VISION LED SPOTLIGHT

Press the light button to activate the night vision spotlight

MESSAGE CAPSULES

Hide tiny messages inside.

NOTE: If watch functions are not properly displayed, press the reset button to reset the watch. (While the watch is reset, press and hold the set button for 2 seconds to restart it.)



TO CHECK WORLD TIME: Press set button or sensor button to change city.

CITY	CODE	CITY	CODE
Tokyo, Japan	TYO	Berlin, Germany	BER
Seoul, South Korea	SEL	Paris, France	PAR
Beijing, China	PEK	London, England	LON
Hong Kong	HKG	Rio de Janeiro, Brazil	RIO
Singapore	SIN	Toronto, Canada	YYZ
Bangkok, Thailand	BKK	New York City, America	NYC
Delhi, India	DEL	Chicago, America	CHI
Riyadh, Saudi Arabia	RUH	Denver, America	DEN
Moscow, Russia	MOW	Los Angeles, America	LAX
Cairo, Egypt	CAI	Anchorage, Alaska	ANC
Helsinki, Finland	HEL	Honolulu, Hawaii	HNL
Rome, Italy	ROM	Sydney, Australia	SYD

WARNING: DISPOSE OF USED BATTERIES IMMEDIATELY. KEEP NEW AND USED BATTERIES AWAY FROM CHILDREN. IF YOU THINK BATTERIES MIGHT HAVE BEEN SWALLOWED OR PLACED INSIDE ANY PART OF BODY, SEEK IMMEDIATE MEDICAL ATTENTION.

WARNING: BUTTON CELL BATTERIES CAN CAUSE SERIOUS INJURY OR DEATH IF SWALLOWED. DISPOSE OF SAFELY! STORE BATTERIES OUT OF REACH OF CHILDREN! VISIT THEBATTERYCONTROLLED.COM.AU



PLEASE KEEP THE PACKAGING FOR FUTURE REFERENCE. PRODUCT MAY VARY SLIGHTLY FROM IMAGE SHOWN. CONTAINS NON-REPLACEABLE BATTERY.

WARNING: CHOKING HAZARD—SMALL PARTS. NOT SUITABLE FOR CHILDREN UNDER 3 YRS.

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

KEYCODE: 42887928