


Item No.	Parts
42889939	One product, Play balls: 30 pcs, Repair patch.

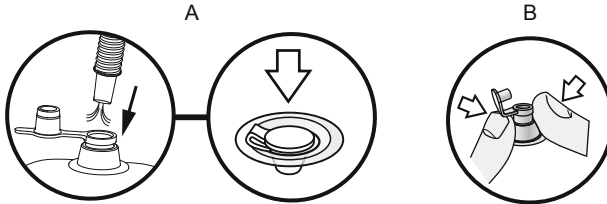

A	B
Inflate	Deflate

OWNER'S MANUAL

PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT.

WARNING:

1. Use only under adult supervision.
2. Keep away from fire and flame.
3. Adult assembly required.
4. Do not use the product in strong wind.

Repair

If a chamber is damaged, use the provided repair patch.

1. Clean the area to be repaired.
2. Carefully peel patch.
3. Press patch over the area to be repaired.
4. Wait 30 minutes before inflating.

Cleaning and storing

1. After deflating, use a damp cloth to gently clean all surfaces.

Note: Never use solvents or other chemicals that may damage the product.

2. Store in a cool, dry place and out of children's reach.
3. Check the product for damage at the beginning of each season and at regular intervals when in use.