

Jada

Final Output Approval
(Signed Form Only)

Signature: _____ Date of approval: _____

Adm. Chief: _____
Engineer: _____
Project Approval: _____
Remarks: _____

Description: RC - Instruction Sheet
Model: 1:16
Material Code: _____
Part No.: Feb 20 2020
Prepared by: EDDY

Marvel - 1:16 RC

Size: 420mm x 297mm

Front 1C + Back 1C



6+

BC

Industry Canada Warning:
The device complies with part 15 of the FCC Rules. Operation is subject to the following conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

NOTICE: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARNING: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used according to the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. This equipment does cause harmful interference to radio reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into a circuit different from that which the receiver is connected.
- Consult the equipment manufacturer for help.

Electric products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.
Produits et appareils doivent être éliminés de façon appropriée avec les installations locales. Vérifiez avec votre autorité locale ou votre détaillant pour obtenir des conseils de recyclage.
Los productos eléctricos no deben desecharse junto con los basuras domésticas. Reciclos donde haya instalaciones para ello. Consulte con las autoridades locales o con el distribuidor para que le aconsejen sobre cómo reciclarlos. Los aparatos con pila no se deben desechar junto con las basuras domésticas. Reciclos donde haya instalaciones para ello. Consulte con las autoridades locales o con el distribuidor para que le aconsejen sobre cómo reciclarlos.

Elektronische Produkte sollten nicht mit dem Hausabfall zusammen entsorgt werden. Bitte recycle, wo entsprechende Einrichtungen vorhanden sind. Informieren Sie sich über die Recycling-Option für dieses Produkt bei Ihrem Einzelhändler oder Ihrem Fachhändler. Produkte mit Batterie sollten nicht mit dem Hausabfall zusammen entsorgt werden. Informieren Sie sich über die Recycling-Option für dieses Produkt bei Ihrem Einzelhändler oder Ihrem Fachhändler.

Industry Canada Warning:
The device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

NOTICE: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARNING: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used according to the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. This equipment does cause harmful interference to radio reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into a circuit different from that which the receiver is connected.
- Consult the equipment manufacturer for help.

Electric products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.
Produits et appareils doivent être éliminés de façon appropriée avec les installations locales. Vérifiez avec votre autorité locale ou votre détaillant pour obtenir des conseils de recyclage.
Los productos eléctricos no deben desecharse junto con los basuras domésticas. Reciclos donde haya instalaciones para ello. Consulte con las autoridades locales o con el distribuidor para que le aconsejen sobre cómo reciclarlos. Los aparatos con pila no se deben desechar junto con las basuras domésticas. Reciclos donde haya instalaciones para ello. Consulte con las autoridades locales o con el distribuidor para que le aconsejen sobre cómo reciclarlos.

Elektronische Produkte sollten nicht mit dem Hausabfall zusammen entsorgt werden. Bitte recycle, wo entsprechende Einrichtungen vorhanden sind. Informieren Sie sich über die Recycling-Option für dieses Produkt bei Ihrem Einzelhändler oder Ihrem Fachhändler. Produkte mit Batterie sollten nicht mit dem Hausabfall zusammen entsorgt werden. Bitte recycle, wo entsprechende Einrichtungen vorhanden sind. Informieren Sie sich über die Recycling-Option für dieses Produkt bei Ihrem Einzelhändler oder Ihrem Fachhändler.

Jada

Model 2.4GHz radio control technology
Fonctionne avec la technologie radiocommande 2.4GHz
Funktioniert mit der Fernsteuerungstechnik 2.4GHz
Das Produkt nutzt eine 2,4-GHz-Fernsteuerungstechnik.

RF Frequency band: 2411-2427 MHz
Transmitter power: 0.7065W
RF Frequency band: 2411-2427 MHz
Transmitter power: 0.7065W
RF Frequency band: 2411-2427 MHz
Transmitter power: 0.7065W
RF Frequency band: 2411-2427 MHz
Transmitter power: 0.7065W

CE

We advise the buyer to register or amend product category. Options may vary Jada and work in registered trademark of Jada Toys, Inc.
Nous nous réservons le droit d'apporter des modifications aux spécifications des produits. Les couleurs peuvent varier.
La marque Jada est une marque commerciale de Jada Toys, Inc.
We reserve the right to modify specifications without notice. The colors may vary.
La marca Jada Toys, Inc. es una marca comercial registrada de Jada Toys, Inc.
We reserve the right to modify specifications without notice. The colors may vary.
Das Marke Jada Toys, Inc. ist ein eingetragenes Warenzeichen von Jada Toys, Inc.

62020 JADA TOYS, INC. CITY OF INDUSTRY, CA 91748, USA

Hendry, ADA TOYS CO. LTD., declares that the radio model type #R6522 is in compliance with Directive 2014/53/EU.
Por presente, JADA TOYS CO. LTD., declara que el modelo de radiocontrol #R6522 cumple con la Directiva 2014/53/EU.
Für das Produkt #R6522, erklärt ADA TOYS CO. LTD., dass es die Anforderungen der Richtlinie 2014/53/EU erfüllt.
JADA TOYS CO. LTD. erklärt hiermit, dass das Funkgerät Typ #R6522 den Anforderungen der Richtlinie 2014/53/EU entspricht.

F48423000-05H-01A

INSTRUCTIONS SHEET MUST BE RETAINED ONCE FORWARDING INFORMATION IS PROVIDED.

These instructions, including safety instructions and instructions by vehicle, are included in the "CONSUMER INFORMATION" booklet appearing this by vehicle. **ADDITIONAL SAFETY INFORMATION:**

Main Adult is to read the instructions to both child and to ensure review all applicable instructions and signs on the CONSUMER INFORMATION booklet and user manual.

CONSUMER INFORMATION:

1. **SAFETY:** This is a toy. It is not to be used as a weapon or for any other purpose. It is not to be used in any way that could cause injury to anyone. It is not to be used in any way that could cause damage to property. It is not to be used in any way that could cause environmental damage. It is not to be used in any way that could cause harm to the environment. It is not to be used in any way that could cause harm to the environment.

WARNING: Rechargeable battery is not rechargeable.

INSTALLING BATTERIES AND CONTROLLERS (See Diagram 2)
Diagram 2: "AA" Batteries.
Insert a controller and recharge the battery compartment.
Remove the controller and recharge the battery compartment.
Insert the "AA" batteries with polarity (+) as shown below battery compartment.
Recharge the battery and controller as shown below.

BATTERY SAFETY INFORMATION:
Do not use old, damaged, swollen, or recharged batteries.
Do not use batteries of different types or capacities.
Do not use batteries of different brands.
Do not use batteries of different sizes.
Do not use batteries of different voltages.
Do not use batteries of different chemistries.
Do not use batteries of different ages.
Do not use batteries of different manufacturers.
Do not use batteries of different capacities.
Do not use batteries of different voltages.
Do not use batteries of different chemistries.
Do not use batteries of different ages.
Do not use batteries of different manufacturers.
Do not use batteries of different capacities.

TRUBLE SHOOTING

PROBLEM	SOLUTION
Vehicle not START	1. Make sure it's fully charged. 2. Batteries are installed with correct polarity. Check the - and + markings to make sure the batteries are installed correctly. 3. Batteries are fresh. Charge batteries until almost full again.
Vehicle does not respond to controls.	1. Recharge the battery and controller. 2. Check the battery and controller connections. 3. Check the battery and controller polarity. 4. Adjust the battery and controller trim pots.
Vehicle does not drive straight.	1. Check the steering mechanism. 2. Check the battery and controller connections. 3. Check the battery and controller polarity.
Vehicle does not move.	1. Check the battery and controller connections. 2. Check the battery and controller polarity. 3. Check the battery and controller trim pots.
Vehicle does not respond properly.	1. Recharge the battery and controller. 2. Check the battery and controller connections. 3. Check the battery and controller polarity.
Transmitter controller does not work.	1. Recharge the battery and controller. 2. Check the battery and controller connections. 3. Check the battery and controller polarity.

CONSEJOS DE SEGURIDAD Y PREVENCIÓN DE ACCIDENTES:

Este producto es un juguete. No debe utilizarse como arma o para cualquier otro propósito que pueda causar lesiones o daños a la propiedad.

PREVENCIÓN DE ACCIDENTES:

1. Mantenga siempre a un niño o niño menor de 12 años alejado de este producto.
2. No utilice este producto en áreas donde pueda causar lesiones o daños a la propiedad.
3. No utilice este producto en áreas donde pueda causar contaminación ambiental.

PREVENCIÓN DE ACCIDENTES:

1. Mantenga siempre a un niño o niño menor de 12 años alejado de este producto.
2. No utilice este producto en áreas donde pueda causar lesiones o daños a la propiedad.
3. No utilice este producto en áreas donde pueda causar contaminación ambiental.

PREVENCIÓN DE ACCIDENTES:

1. Mantenga siempre a un niño o niño menor de 12 años alejado de este producto.
2. No utilice este producto en áreas donde pueda causar lesiones o daños a la propiedad.
3. No utilice este producto en áreas donde pueda causar contaminación ambiental.

ADVERTENCIA: La pila no es recargable.

INSTALLATION OF THE BATTERY AND CONTROLLER (See Diagram 2)
Diagram 2: "AA" Batteries.
Insert a controller and recharge the battery compartment.
Remove the controller and recharge the battery compartment.
Insert the "AA" batteries with polarity (+) as shown below battery compartment.
Recharge the battery and controller as shown below.

BATTERY SAFETY INFORMATION:
Do not use old, damaged, swollen, or recharged batteries.
Do not use batteries of different types or capacities.
Do not use batteries of different brands.
Do not use batteries of different sizes.
Do not use batteries of different voltages.
Do not use batteries of different chemistries.
Do not use batteries of different ages.
Do not use batteries of different manufacturers.
Do not use batteries of different capacities.

PREVENCIÓN DE ACCIDENTES:

1. Mantenga siempre a un niño o niño menor de 12 años alejado de este producto.
2. No utilice este producto en áreas donde pueda causar lesiones o daños a la propiedad.
3. No utilice este producto en áreas donde pueda causar contaminación ambiental.

CHARGING YOUR VEHICLE
1. Make sure the battery is not fully charged.
2. Connect the battery to the charging cable.
3. Plug the charging cable into the power outlet.
4. Charge the battery until the LED indicator shows a full charge.

RECHARGER VOTRE VÉHICULE
1. Assurez-vous que la batterie n'est pas complètement chargée.
2. Branchez la batterie sur le câble de recharge.
3. Branchez le câble de recharge sur la prise murale.
4. Chargez la batterie jusqu'à ce que l'indicateur LED montre une charge complète.

CARGA DEL VEHÍCULO
1. Asegúrese de que la batería no esté completamente cargada.
2. Conecte la batería al cable de carga.
3. Conecte el cable de carga a la toma de corriente.
4. Cargue la batería hasta que el indicador LED muestre una carga completa.

AUFLEADEN DES FAHRZEUGS
1. Stellen Sie sicher, dass die Batterie nicht vollständig geladen ist.
2. Schließen Sie die Batterie an das Ladekabel an.
3. Stecken Sie das Ladekabel in die Steckdose.
4. Laden Sie die Batterie, bis das LED-Indikatorlicht eine vollständige Ladung anzeigt.

BUILT-IN NON-REMOVABLE RECHARGEABLE BATTERY / BATTERIE RECHARGEABLE NON-AMOVIBLE INTEGRÉE
FLA INTEGRATOR RECHARGEABLE NO SEPARABLE / ENDESEITER NICHTAUSTAUSCHBARE AKKU

BUILT-IN USER CHARGING CABLE / CÂBLE DE CHARGE USR INTÉGRÉ
KABEL INTEGRADO DE CARGA USR INTEGRADAS / KABELN INTEGRIERT

ON / OFF CHARGE
OFF / ARRANCAR / ENCENDIDO / CARGAR / AUS- / EIN- / LUCHEN

Steering Dial / **Alignement de la direction** / **Dial de dirección** / **Suchscheibe**

TO ADJUST STEERING ALIGNMENT / **RÉGLAGE DE L'ALIGNEMENT DE LA DIRECTION** / **COMO AJUSTAR LA DIRECCIÓN** / **WIE RICHTIG ALLEINEN DIE RICHTUNG**

2 x "AA" BATTERIES / **2 piles** / **2 x "AA" Batterien** / **2 x "AA" Batterien**

2 x "AA" BATTERIES
Includes 2 x AA Batteries

Forward / **Avance** / **Vorwärts** / **Forward**

Neutral / **Neutre** / **Neutral** / **Neutral**

Reverse / **Retarder** / **Rückwärts** / **Reverse**

Turbo Boost / **Amplification Turbo** / **Relace Del Turbo** / **Turbo Boost**

ON / OFF

Left / Straight / Right / **Cocher / Droit / Droite** / **Izquierda / Derecha** / **Links / Rechts** / **Links / Rechts**

Power on LED Lights Up / **Encendido: Luz LED se enciende** / **Einstrahlung: LED leuchtet auf**

HOW TO PLAY:
1. Turn the vehicle ON. Then hit the transmitter controller ON within 30 seconds.
2. The LED indicator will light up and the vehicle will start moving.
3. The LED indicator will light up and the vehicle will stop moving.
4. If playing is finished, hit the vehicle and controller OFF and try again.

COMO JUGAR:
1. Encienda el vehículo y luego encienda el control remoto en los 30 segundos.
2. El LED de encendido se iluminará y el vehículo comenzará a moverse.
3. Una vez que el vehículo y el control remoto se hayan detenido, presione el botón de apagado.
4. Si el empujamiento no le lleva a cabo, apague el vehículo y el control remoto y vuelva a intentarlo.

TURBO BOOST FUNCTION:
Press down the Turbo Boost to increase the speed of the vehicle.
Press the Turbo Boost to return back to the normal speed.

COMO JUGAR:
1. Presione el botón Turbo Boost para aumentar la velocidad del vehículo.
2. Presione el botón Turbo Boost para volver a la velocidad normal.

COMMENT JOUER:
1. Allumez le véhicule, puis appuyez sur le contrôleur à distance dans les 30 secondes.
2. L'indicateur LED s'allumera et le véhicule commencera à bouger.
3. Une fois que le véhicule et le contrôleur à distance se sont arrêtés, appuyez sur le bouton d'arrêt.
4. Si l'activation du Turbo Boost ne vous permet pas d'augmenter la vitesse de votre véhicule, appuyez sur le bouton Turbo Boost pour revenir à la vitesse normale.

COMO JUGAR:
1. Encienda el vehículo y luego encienda el control remoto en los 30 segundos.
2. El LED de encendido se iluminará y el vehículo comenzará a moverse.
3. Una vez que el vehículo y el control remoto se hayan detenido, presione el botón de apagado.
4. Si el empujamiento no le lleva a cabo, apague el vehículo y el control remoto y vuelva a intentarlo.

TURBO-BOOST-FUNKTION:
Drücken Sie den Turbo Boost, um die Geschwindigkeit der Fahrzeug zu erhöhen.
Drücken Sie den Turbo Boost, um die Geschwindigkeit der Fahrzeug zu erniedern.

ATTENTION: La batterie n'est pas rechargeable.

INSTALLATION OF THE BATTERY AND CONTROLLER (See Diagram 2)
Diagram 2: "AA" Batteries.
Insert a controller and recharge the battery compartment.
Remove the controller and recharge the battery compartment.
Insert the "AA" batteries with polarity (+) as shown below battery compartment.
Recharge the battery and controller as shown below.

BATTERY SAFETY INFORMATION:
Do not use old, damaged, swollen, or recharged batteries.
Do not use batteries of different types or capacities.
Do not use batteries of different brands.
Do not use batteries of different sizes.
Do not use batteries of different voltages.
Do not use batteries of different chemistries.
Do not use batteries of different ages.
Do not use batteries of different manufacturers.
Do not use batteries of different capacities.

PREVENCIÓN DE ACCIDENTES:

1. Mantenga siempre a un niño o niño menor de 12 años alejado de este producto.
2. No utilice este producto en áreas donde pueda causar lesiones o daños a la propiedad.
3. No utilice este producto en áreas donde pueda causar contaminación ambiental.

PROBLEME

L'ATTENTION: La batterie n'est pas rechargeable.

INSTALLATION OF THE BATTERY AND CONTROLLER (See Diagram 2)
Diagram 2: "AA" Batteries.
Insert a controller and recharge the battery compartment.
Remove the controller and recharge the battery compartment.
Insert the "AA" batteries with polarity (+) as shown below battery compartment.
Recharge the battery and controller as shown below.

BATTERY SAFETY INFORMATION:
Do not use old, damaged, swollen, or recharged batteries.
Do not use batteries of different types or capacities.
Do not use batteries of different brands.
Do not use batteries of different sizes.
Do not use batteries of different voltages.
Do not use batteries of different chemistries.
Do not use batteries of different ages.
Do not use batteries of different manufacturers.
Do not use batteries of different capacities.

BITTE BEWACHEN SIE DIE SICHERHEIT VON KINDERN. DA ES SICH UM EINEN PRODUKT HANDELT, DER MIT EINER BATTERIE ZUSAMMENGEBAUT UND MIT EINER FERNSTEUERUNG FUNKTIONIERT.

ATTENTION: La batterie n'est pas rechargeable.

INSTALLATION OF THE BATTERY AND CONTROLLER (See Diagram 2)
Diagram 2: "AA" Batteries.
Insert a controller and recharge the battery compartment.
Remove the controller and recharge the battery compartment.
Insert the "AA" batteries with polarity (+) as shown below battery compartment.
Recharge the battery and controller as shown below.

BATTERY SAFETY INFORMATION:
Do not use old, damaged, swollen, or recharged batteries.
Do not use batteries of different types or capacities.
Do not use batteries of different brands.
Do not use batteries of different sizes.
Do not use batteries of different voltages.
Do not use batteries of different chemistries.
Do not use batteries of different ages.
Do not use batteries of different manufacturers.
Do not use batteries of different capacities.

PROBLEME

ATTENTION: La batterie n'est pas rechargeable.

INSTALLATION OF THE BATTERY AND CONTROLLER (See Diagram 2)
Diagram 2: "AA" Batteries.
Insert a controller and recharge the battery compartment.
Remove the controller and recharge the battery compartment.
Insert the "AA" batteries with polarity (+) as shown below battery compartment.
Recharge the battery and controller as shown below.

BATTERY SAFETY INFORMATION:
Do not use old, damaged, swollen, or recharged batteries.
Do not use batteries of different types or capacities.
Do not use batteries of different brands.
Do not use batteries of different sizes.
Do not use batteries of different voltages.
Do not use batteries of different chemistries.
Do not use batteries of different ages.
Do not use batteries of different manufacturers.
Do not use batteries of different capacities.