







 

 
 



 
# Assembly Instructions 42894209 ENTERTAINMENT UNIT

## CARE INSTRUCTIONS:


WIPE CLEAN WITH A DAMP OR DRY CLOTH. DO NOT USE ABRASIVE MATERIALS AND SOLVENTS. CHECK AND TIGHTEN ALL PARTS REGULARLY. KEEP AWAY FROM WATER AND DIRECT SUNLIGHT. STORE IN A DRY PLACE. FOR INDOOR AND DOMESTIC USE.

## WARNING:

DO NOT STAND OR SIT ON THE UNIT. DO NOT USE UNTIL ALL SCREWS ARE FIRMLY SECURED. THIS PACKAGE CONTAINS SMALL PARTS AND SHARP POINTS. KEEP AWAY FROM CHILDREN AND BABIES. ADULT ASSEMBLY REQUIRED. USE ONLY ON A FLAT SURFACE. FAILURE TO FOLLOW THESE WARNINGS COULD IN SERIOUS INJURY. **MAXIMUM SAFE LOAD: 25KGS FOR TOP PANEL, 5KGS FOR PER SHELF.**


	A.Board	1pcs		H.Dowels M6x30mm	12pcs
	B.Board	1pcs		I.Screw M7x25mm	6pcs
	C.Board	3pcs		J.MetalFrame	2pcs
	D.Metal Frame	2pcs		K.Screw M7x50mm	4pcs
	E.Cam Lock	6pcs		L.Screw M8x30mm	4pcs
	F. Cam Bolt	6pcs		M.Eva mat	4pcs
	G.Screw M5x50mm	9pcs		N.Hex Key	1pcs

Step 1

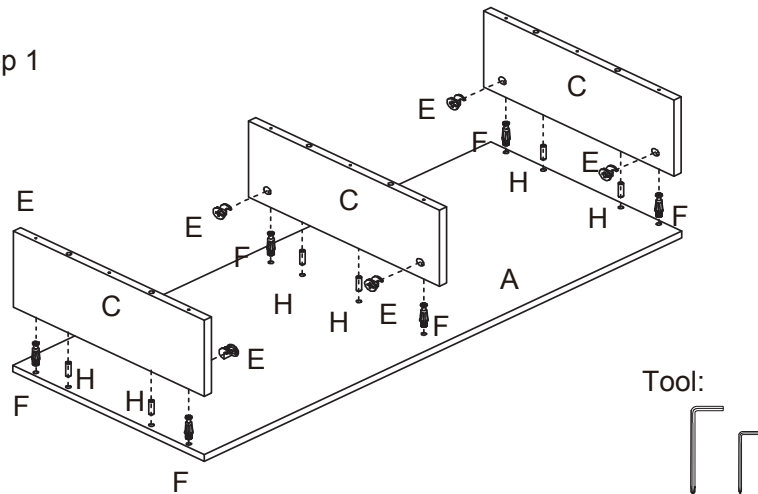


Step 2

Tool:


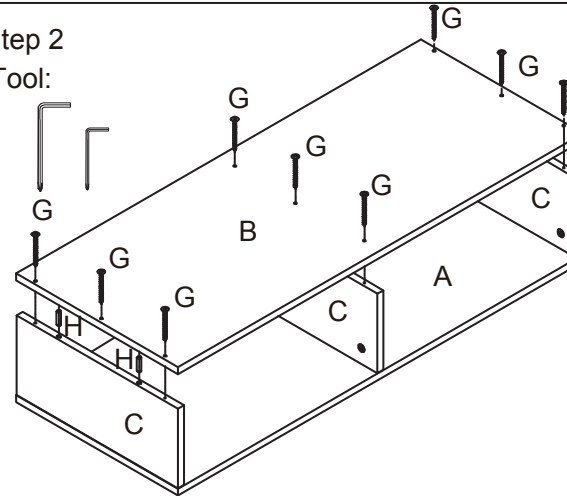


Step 4

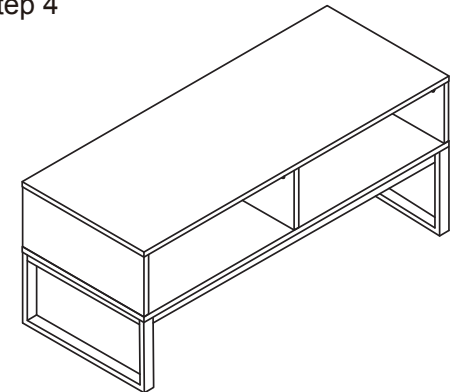

Step 3

Tool:

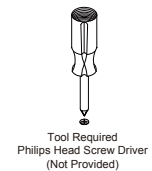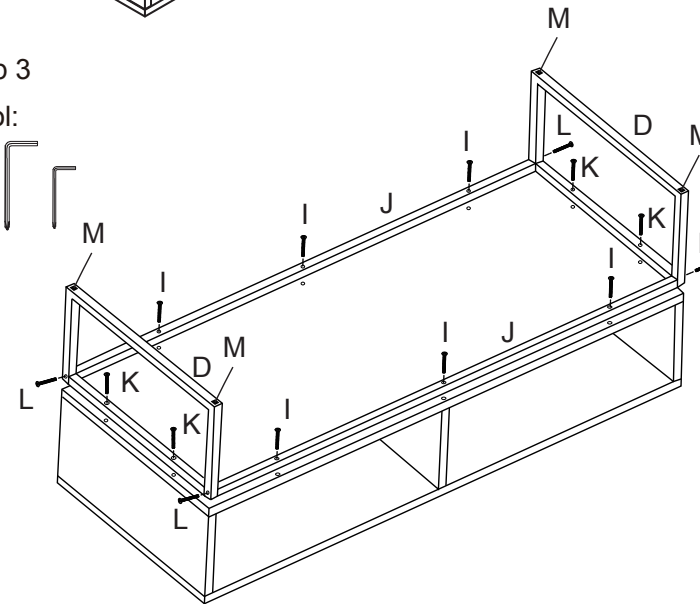

Tool:

