

AGES 8+ YEARS

REMOTE CONTROL DOG MANUAL



PACKAGE CONTENTS

 
• Rady the Dog • Remote Control • USB Charger • Rechargeable Battery

IMPORTANT SAFETY PRECAUTIONS

READ ALL INSTRUCTIONS BEFORE USING YOUR DOG.

1. Do not use your dog near water. Clean using a soft cloth or paper towel.
2. Do not place your dog on any wet surfaces.
3. Do not allow children under age eight to play with your dog without adult supervision.
4. Do not expose your dog to excessive heat, flames or fire.
5. Always press all buttons or switches carefully.
6. Do not use in extremely dry environments, as this can lead to static discharge during usage.
7. Do not expose your dog to temperatures above 40°C. Keep out of direct sunlight.
8. Do not drop, puncture or expose your dog to excessive trauma.
9. Your dog is not intended for commercial use.

DOG

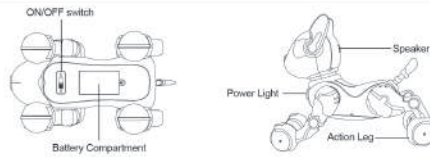

REMOTE CONTROL



-1-

INSERTING BATTERIES

 
Dog

1. Unscrew to open battery cover, connect the rechargeable battery pack with connector.

The battery connector will only fit in one way. Do not force the connectors together.

2. Replace battery cover.


Attention: Remove rechargeable battery after you have finished using your product.



Remote control

1. Unscrew to open battery cover, insert 2 x 1.5V AA batteries (not included).
2. Replace battery cover.

 
Attention: Remove batteries after you have finished using your product.



LITHIUM BATTERY CHARGE INSTRUCTIONS

Attention: Do not charge battery immediately after each play, let the battery cool down for a while.

 1. Turn off the dog.
2. Unscrew to open the battery cover and separate the rechargeable battery pack from the connector.
3. Plug the charger into a USB port and battery as shown. (The battery connector will only fit in one way. Do not force the connectors together). The LED light will light up when charging. When it has finished charging, the light turns off.
4. Charging time: approximately 60-90 minutes.



POWERING ON YOUR DOG

Once you have inserted batteries into your dog and remote control, you can go ahead and power on your dog. To do so, slide the ON/OFF switch located on the bottom of the dog to the ON position.

When you do not operate the dog for about 30 seconds, it will make a sound to remind you. When you do not operate the dog for about 2 minutes, it will make a sound and enter sleep mode. When your dog is in sleep mode, you can restart the ON/OFF switch at the bottom of the dog to resume use.

When you have finished playing with your dog, slide the ON/OFF switch to the OFF position.

NOTE: When your dog is turning low on power, the volume of the dog will drop, the light will dim or some of the functions will not be available. Once the batteries are completely depleted, charge the battery of the dog and replace the batteries of the remote control as soon as possible to continue use.

-2-

MOVING YOUR DOG

 
You can use your remote control to move your dog around in different directions.

Press the forward/backward button to make the dog bark, then walk forward/backward for a distance.

Keep pressing the forward/backward button to make the dog bark and walk forward/backward all the time.

Press the left/right button to make the dog bark, then turn left/right for a distance.

Keep pressing the left/right button to make the dog bark and turn left/right all the time.

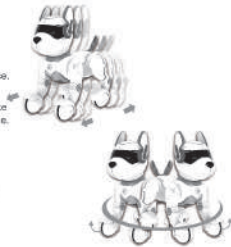

VOICE COMMAND

First, press the voice command button on the remote control. You will hear two beeps. The remote control indicator will always be red. Aim the remote at the dog's head and say the voice command to the remote control. After speech recognition, the indicators will turn off and the dog will make the requested action. After the dog has completed one action, repeat the above steps to make the dog do new tricks.

NOTE: Best receiving range between remote control and dog's head is 3-5 metres. The effective range to speak to the remote control is less than or equal to 30m.

SIT DOWN:

Rady will sit down when it receives the "sit down" signal.



PUSH-UPS:

Rady will do push ups when it receives the "push up" signal.



-3-

 
YOGA:

Rady will practice yoga when it receives the "yoga" signal.



" Yoga

SOMERSAULT:
Rady will do a somersault when it receives the "somersault" signal.



" Somersault

HELLO RADY:
Rady will say hello to you when it receives the "Hello Rady" signal.



" Hello

STAND UP:
Rady will stand up when it receives the "stand up" signal.



" Stand up

IMITATE

Press the button to play one kind of animal call and movement. After receiving the "imitate" signal, the dog will imitate different kinds of animals such as chicks, cats, cows and more.

PLAYFUL:

Rady will act playful when it receives the "act cute" signal.



" Playful

ANGRY:
Rady will start barking when it receives the "angry" signal.



" Angry

SING A SONG:
Rady will play music when it receives the "sing a song" signal.



" Sing a song

-4-

PLAY

After receiving the "play" signal, Rady will act playful, and will walk around and bark.

GUARD

After receiving the "guard" signal, Rady will act protectively and will make a "woof, woof, woof" sound.

DANCE

After receiving the "dance" signal, Rady will play music and dance to it.

PROGRAMMING

Press the programming button, then you could press any buttons on the controller (except voice command) to program your own. After receiving the "programming" signal, Rady can be programmed with over to 30 actions. Press the "programming" button again to make Rady perform the programmed actions.

STOP

After receiving the "stop" signal, Rady will stop all actions and enter standby mode.

PROBLEMS AND SOLUTIONS

COMMON PROBLEM	SOLUTIONS
WITHOUT REACTION WHEN TURNED ON.	Please check whether the battery is properly connected or the battery power is sufficient.
THE REMOTE CONTROL CAN'T BE OPERATED.	Please make sure the remote control is fully powered. When using the remote control, please aim at the dog signal receiver. Strong light or sunlight will affect the remote controls effect.
DOG DOES NOT FOLLOW THE CONTROL SIGNALS.	Please make sure the dog is fully powered. If the power is low, the dog might not function correctly.

Keystore : 42894445

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE. FOR EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED, BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

WARNING: THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITIVE INDIVIDUALS.

WARNING: CHOKING HAZARD
SMALL PARTS. NOT FOR CHILDREN UNDER 3 YEARS.

CAUTION: CHARGE THE RECHARGEABLE BATTERY BY SUPPLIED USB CHARGING CABLE ONLY. TO BE CHARGED BY AN ADULT.

* PRODUCT MAY VARY SLIGHTLY FROM THE IMAGE SHOWN.
** READ THE INSTRUCTIONS BEFORE OPERATING THE PRODUCT.
*** PLEASE KEEP THE PACKAGING FOR FUTURE USE.

-5-