

Before You Begin...

CAUTION

- **THIS IS NOT A TOY**
- **Please keep away from children and pets**
- Keep away from water and extreme temperatures
- Only use the supplied power cable to power this item
- If this item is broken, please do not attempt to repair on your own, please consult the Warranty section at the end of this user manual

In the Box


- Subwoofer (x1)
- Satellite Speakers (x2)
- Aux In Cable (x1)
- Au Dc Adapter (x1)
- User Manual (x1)

Product Specification

Bluetooth Version :
Input : DC 5V, 1.5A
Only use with provide AC adapter Model: S012A05015005
Output Power : 3Wx2+5W

Location of Controls

1. Volume Knob
2. Satellite Speaker Outputs
3. 3.5 mm Auxiliary Input
4. [LED MODE] Button
5. LED Indicator
6. Power Port
7. [Power] Switch

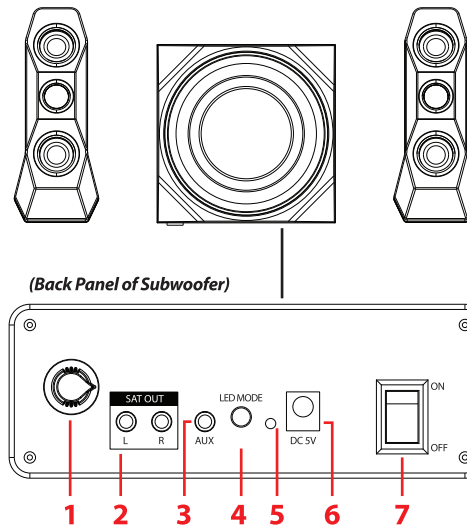


Getting Started

Powering the Speaker System

Fully insert the DC connector to the power port on the back of the subwoofer and play the AC power adaptor to the wall socket

Setting Up the Speakers

Plug the 3.5 mm connectors of the two satellite speakers into the Satellite Speaker Outputs on the back of the subwoofer.

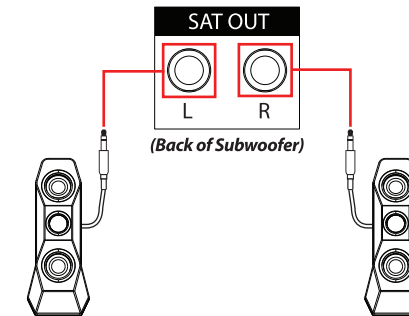


Powering ON/OFF

- Flip the [Power] switch on the back panel of the subwoofer to power ON/OFF.

Bluetooth Pairing

1. Power the system ON. A tone will be heard and the Bluetooth LED indicator will **quickly flash BLUE**.
2. Enable the Bluetooth function and scan on your Bluetooth device, select **KM42896128** on the available list.
3. After a successful pairing, a tone will be heard and the Bluetooth LED indicator will **slowly flash BLUE**.

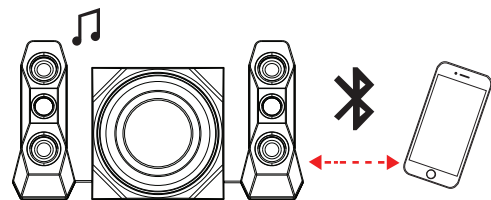

Using with a Wired Device

Plug one end of a 3.5mm auxiliary cable into the 3.5mm AUX input on the back of the subwoofer. Plug the other end into the headphone jack on your media-playing device. This will switch your speaker to AUX in mode.

Adjusting Volume

You can adjust volume with the Volume Knob on the back of the subwoofer, or with the controls on your connected device.

Using the LED Lights

Press the [LED MODE] button to cycle through the light modes.

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.


Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

anko

USER'S MANUAL

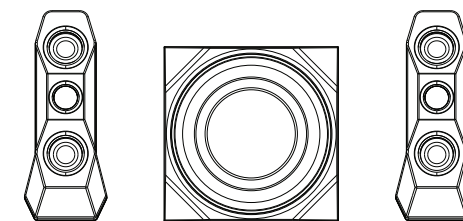

Bluetooth Speaker

Keycode:42896128

PLEASE READ CAREFULLY BEFORE OPERATING THIS EQUIPMENT
KEEP IT IN A SAFE PLACE FOR FUTURE REFERENCE