

1

Before You Begin...

⚠ CAUTION

- Do not expose the unit to extreme temperatures (heat or cold), open flames, humid conditions, or wet conditions.
- Keep away from water and extreme temperatures.
- Low power may cause poor Bluetooth connection or sound distortion.
- Do not overcharge the battery.
- Do not submerge in water.
- Do not open this product or attempt to repair the unit yourself.

📦 In the Box

- Speaker (x1)
- AUX In Cable (x1)
- Micro-USB Charging Cable (x1)
- User's Manual (x1)


Product Specification

- Bluetooth version: V 5.0
- Rechargeable battery
- Charging time: 3-4 hours
- Music playtime: up to 5 hours
- Input: DC 5V 1A

📺 Product View

- LED MODE
- Volume Up / Next Track
- MODE
- Volume Down / Previous Track
- POWER
- Micro SD Card Slot
- 3.5 mm Auxiliary Input
- DC 5V Charging Port
- USB Input Port/Charging Out Port
- LED Indicator

2

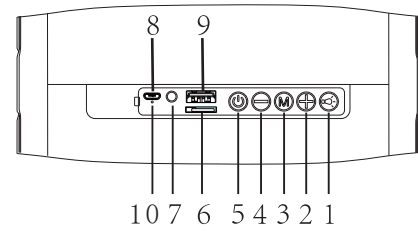

Getting Started

⚡ Charging the Speaker

Insert the small connector of the supplied micro-USB charging cable into the DC 5V charging port under the rubber cover on the top of the product. Insert the large connector into the USB port on a computer, a USB charging device, or a 5V USB adapter (not included).

The Charging indicator will turn red while charging and off when fully charged. On low power, a tone will be heard indicating that the speaker should be recharged.

🔌 Powering on/off

Press and hold the [🔌] button to turn on/off the speaker.

🔄 Changing Modes

Press the [🔄] button to switch input modes. Insert a USB flash drive, Micro SD card, or an aux cable, to have the corresponding modes available, otherwise, these modes will be skipped while changing modes.

3

📶 Bluetooth Pairing

- Turn on the speaker and select Bluetooth mode. A tone will be heard.
- Enable the Bluetooth function and scan on your Bluetooth device, select **KM42896135** on the available list.
- After a successful pairing, a tone will be heard.
- You can press and hold the [🔄] button to unpair your current device and search for new devices.

🔊 Adjusting Volume

Volume can be adjusted by pressing and holding the [🔊] and [🔊] buttons or the controls on your connected media-playing device.

⏸ Adjusting Playback

Press the [⏸] button to pause or resume playback. Press the [⏩] and [⏪] buttons to skip to next and previous track.

📞 Using Handsfree

When the unit is connected and paired to a Bluetooth-enabled device like a smartphone, the unit allows you to make or receive phone calls with its built-in microphone. Press [📞] to accept a call. To end a call press [📞]. To reject a call, press and hold [📞] for 2 seconds.

🔌 Using with a Wired Device

Plug one end of a 3.5mm auxiliary cable into the 3.5 mm AUX input under the rubber cover on the top of the speaker. Plug the other end into the headphone jack on your media-playing device. This will switch your bluetooth speaker to Aux in mode. If the speaker does not switch to USB mode automatically, press the [🔄] button repeatedly to select it.

4

📄 Using a Micro SD Card

Insert a micro SD (TF) card into the card slot under the rubber cover on the top of the speaker, with its label side facing up and this will switch your speaker to Card Player mode. If the speaker does not switch to Card Player mode automatically, press the [🔄] button repeatedly to select it.

NOTE: Micro SD cards can only be inserted in one direction. If the card does NOT easily slide and "clip" into place, remove, turn it around, and re-insert into the slot.

🔌 Using the USB Input

Insert your USB flash drive into the USB port under the rubber cover on the top of the speaker, and this will switch your speaker to USB mode.

If the speaker does not automatically switch to USB Input Mode, press the [🔄] button repeatedly to select it.

📻 FM Radio

Press the [📻] button to switch FM mode, then insert the micro-USB charging cable into the DC 5V charging port to be an antenna. In FM MODE, press and hold [🔄] button to search channel automatic.

💡 LED MODE

Pressing and holding the [💡] button to turn off the LED light, press the button to choose the different colourful led mode.

5

Troubleshooting

Unable to power on:

- Check that battery is not too low or discharged completely.

Unable to pair with a Bluetooth device:

- Check that you are in Bluetooth mode.
- Ensure that you are within range of the Bluetooth speaker for Bluetooth functionality, 10 metres or less (33 feet or less).
- Move the Bluetooth speaker and Bluetooth device away from other Bluetooth devices/electrical equipment.
- If possible, turn off other nearby Bluetooth devices or disable their Bluetooth functionality.

No sound / Sound distortion:

- Adjust the volume.
- If you are using a Bluetooth connected device, check the volume on the secondary device and on your Bluetooth speaker.
- Your Bluetooth speaker may need to be recharged.

Unable to play TF card/USB flash drive:

- Check that card/USB is formatted in FAT32, not NTFS.
- Check that your card/USB capacity does not exceed 32 GB.
- Check that your audio files are in MP3/WMA formats. (Not all formats are supported by the speaker).

6

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.


Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

7

8

anko

USER'S MANUAL

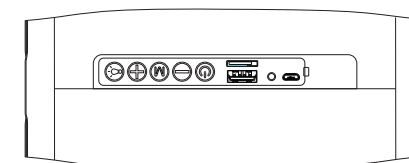

Bluetooth Speaker

Keycode:
42896135

PLEASE READ CAREFULLY BEFORE OPERATING THIS EQUIPMENT
KEEP IT IN A SAFE PLACE FOR FUTURE REFERENCE

127.00 mm

76.00 mm

304mm