

Assembly Instructions ENTRYWAY STORAGE 42899167


 




 

 



 








 
 

 




CARE INSTRUCTIONS:

WIPE CLEAN WITH A DAMP OR DRY CLOTH. DO NOT USE ABRASIVE MATERIALS AND SOLVENTS. DO NOT PLACE HOT ITEMS SUCH AS COFFEE CUPS DIRECTLY ON THE SURFACE OF THIS FURNITURE ITEM. KEEP AWAY FROM WATER AND DIRECT SUNLIGHT. STORE IN A DRY PLACE. FOR INDOOR USE.

WARNING:


DO NOT STAND OR SIT ON THIS ITEM. DO NOT KNOCK OR DRAG THIS ITEM. USE ONLY ON A FLAT SURFACE. THIS PACKAGE CONTAINS SMALL PARTS AND SHARP POINTS. KEEP AWAY FROM CHILDREN AND BABIES. ADULT ASSEMBLY REQUIRED. **MAXIMUM SAFE LOAD: 5KGS PER LAYER, 2KGS FOR THE HOOKS.**

Hardware List

A		1pcs	P		1pcs
B		1pcs	Q	 M5x40mm	24pcs
C		1pcs	R	 M8x30mm	8pcs
D		1pcs	S	 M4x12mm	6pcs
E		1pcs	T	 M4x12mm	4pcs
F		1pcs	U	 M4x12mm	2pcs
G		1pcs	V	 M4x10mm	2pcs
H		4pcs	W		6pcs
I		1pcs	X		4pcs
J		1pcs	Y	 M6x25mm	8pcs
K		1pcs	Z	 Tool	4pcs
L		1pcs	a		⊗ pcs
M		1pcs	b	 M4x40mm	⊗ pcs
N		1pcs	d		⊗ pcs
O		1pcs			

Step:1

 
Wx6pcs Dx1pcs
Ex1pcs Fx1pcs
Px1pcs Xx4pcs
Sx4pcs Ax1pcs
Bx1pcs Cx1pcs

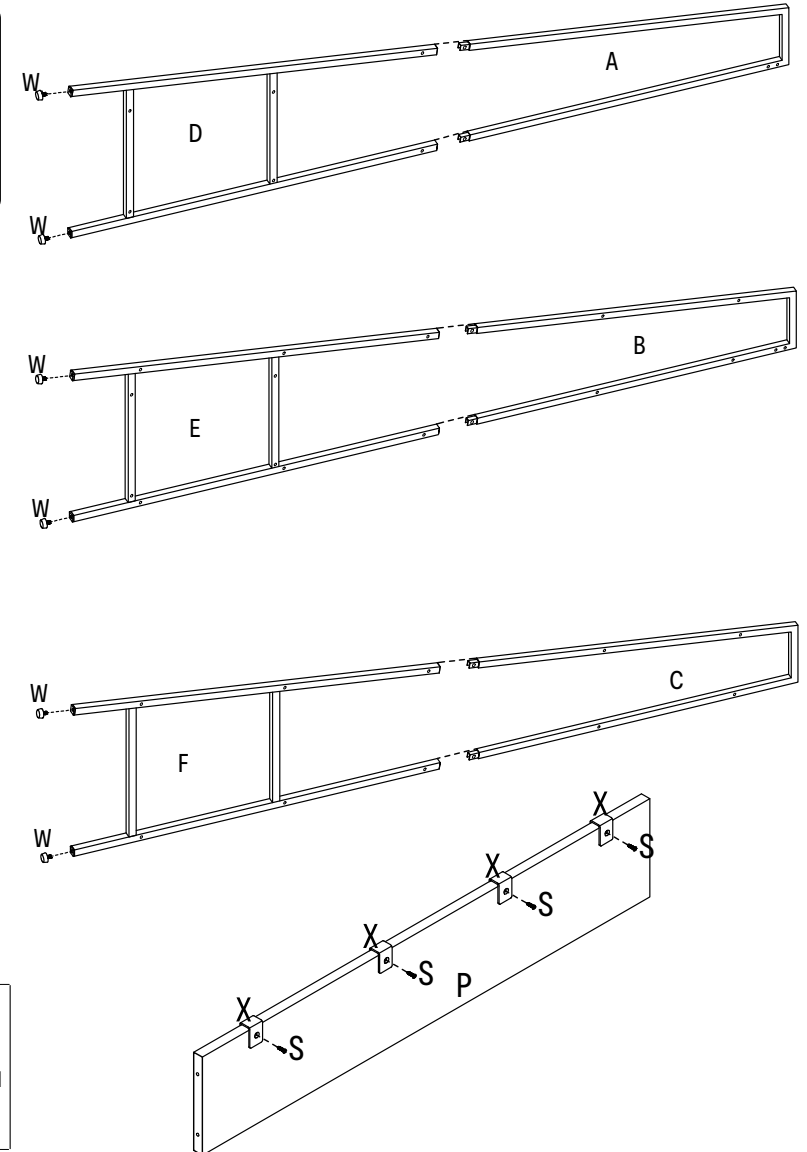

ATTENTION:
DO NOT TIGHTEN THE
SCREWS FULLY DURING
ASSEMBLY. FULLY TIGHTEN
SCREWS AFTER THE FINAL
ASSEMBLY STEP.


Step:2

 Qx4pcs Ux2pcs
Vx2pcs Rx8pcs
Hx4pcs

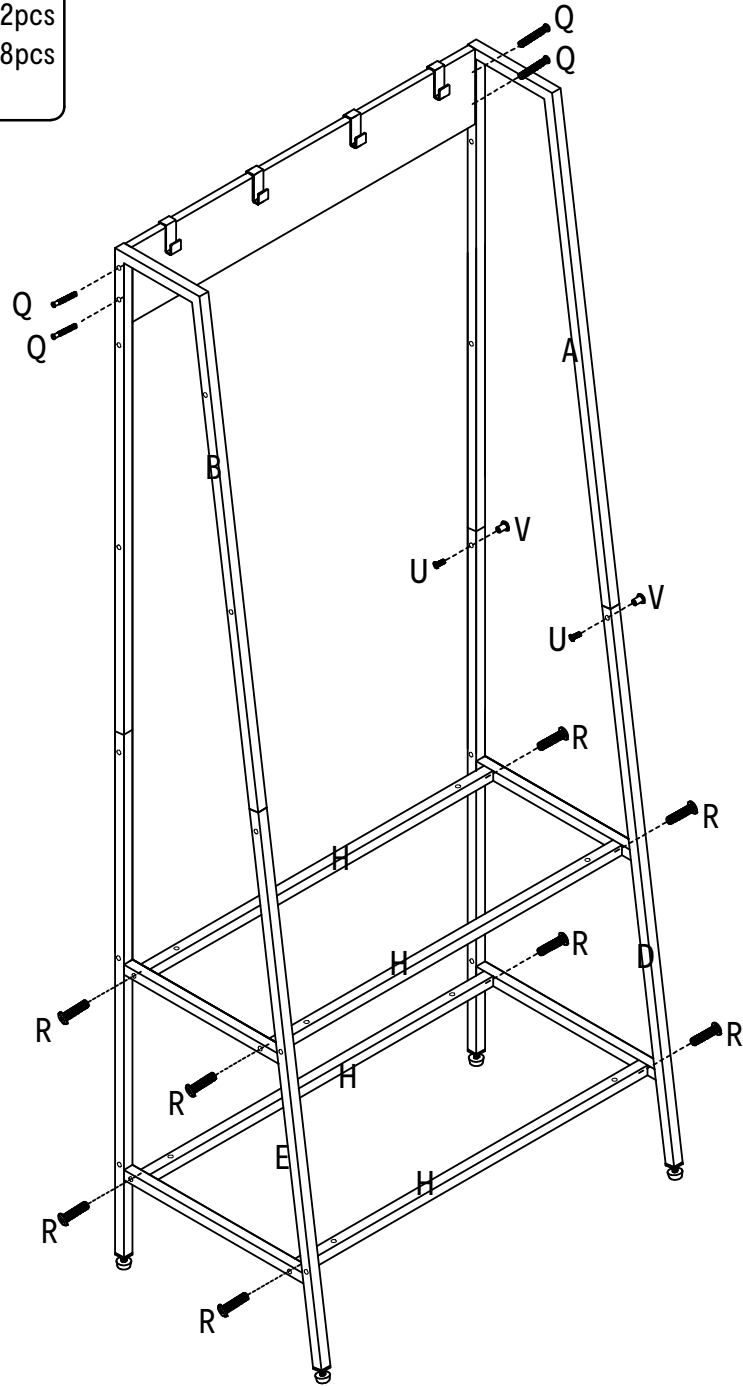


Step:3

 Qx20pcs Ix1pcs
Jx1pcs Kx1pcs
Lx1pcs Mx1pcs

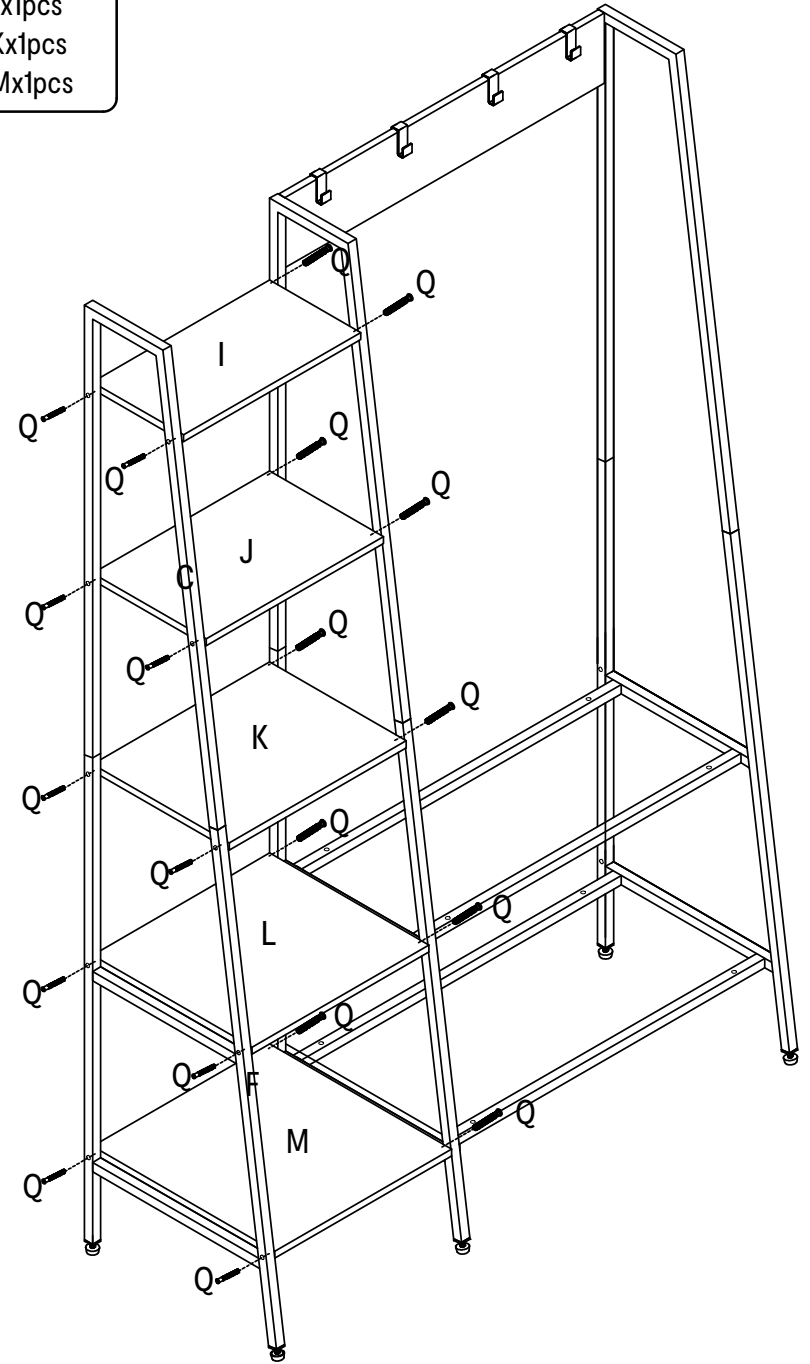


Step:4

 Nx1pcs Oxl1pcs
Yx8pcs

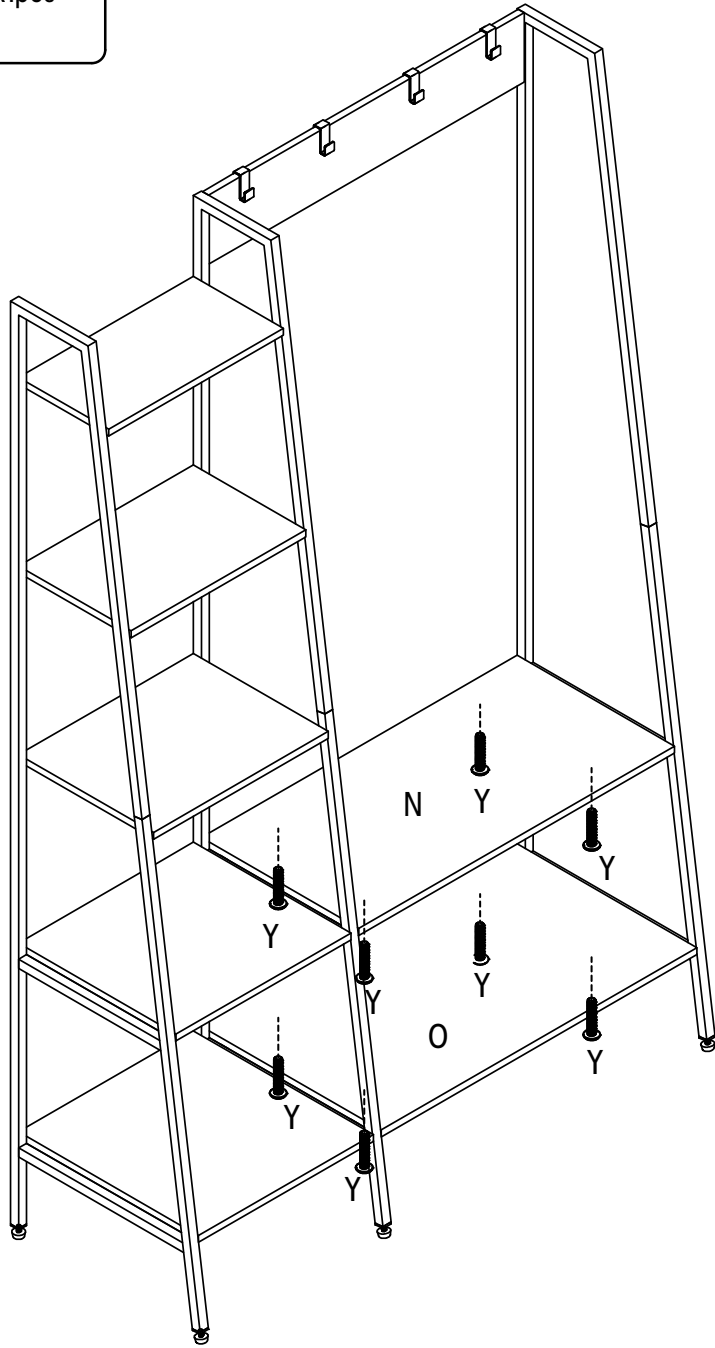


Step:5

 Gx1pcs Tx4pcs

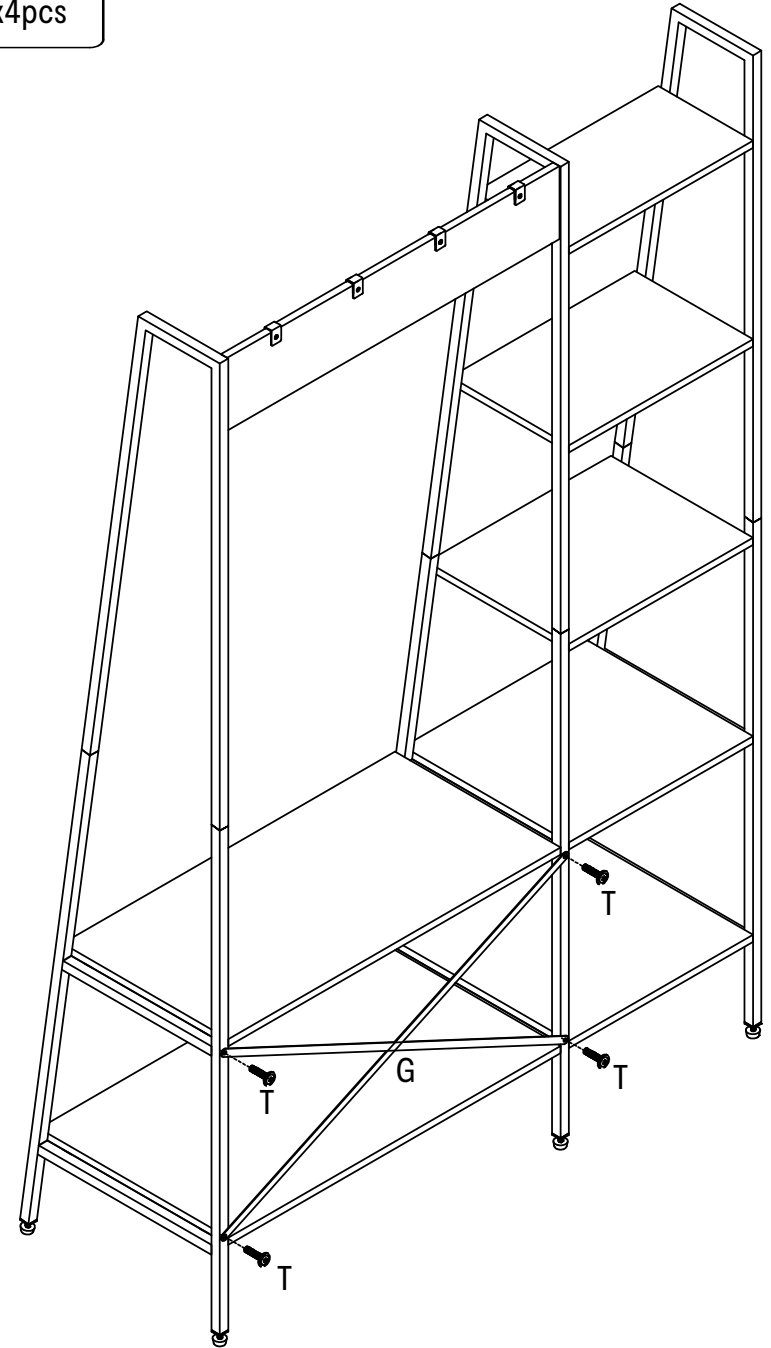

Step:6

 Sx2pcs ax2pcs
bx2pcs dx2pcs

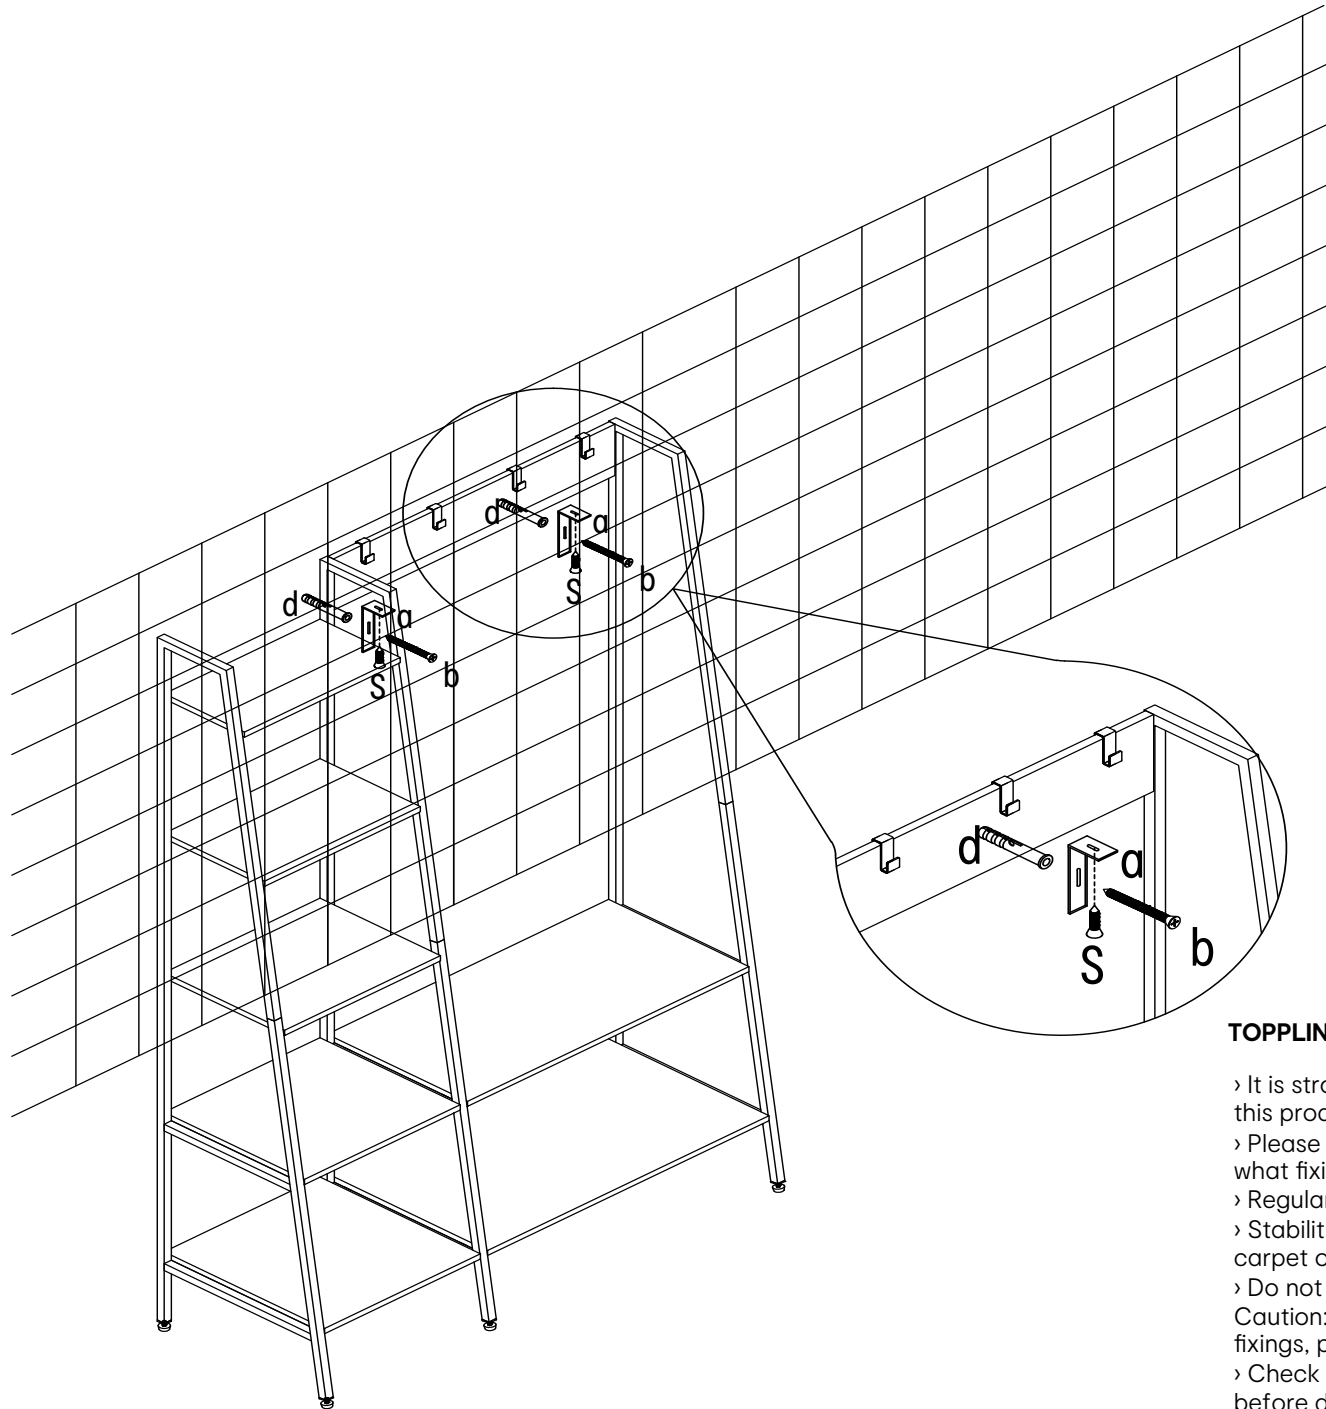

TOPPLING FURNITURE WARNING:

- › It is strongly recommended that this product is permanently fixed to the wall.
 - › Please seek professional advice if you are in doubt of what fixing device to use.
 - › Regularly check that anchors are securely maintained.
 - › Stability of tall items may be affected by thick pile carpet or uneven floors.
 - › Do not place unanchored televisions on furniture.
- Caution: for your safety when attaching the anchor fixings, please note the following:
- › Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson)