Assembly Instructions

CARE INSTRUCTION:

WIPE CLEAN WITH A DRY CLOTH. DO NOT USE ABRASIVE MATERIALS AND SOLVENTS. KEEP AWAY FROM WATER AND DIRECT SUNLIGHT. DO NOT PLACE HOT ITEMS SUCH AS COFFEE CUPS DIRECTLY ON THE SURFACE. STORE IN A DRY PLACE, FOR INDOOR AND DOMESTIC USE ONLY.

WARNING:

DO NOT STAND OR SIT ON THIS ITEM. DO NOT USE UNTIL ALL SCREWS ARE FIRMLY SECURED. THIS PACKAGE CONTAINS SMALL PARTS AND SHARP POINT. KEEP AWAY FROM CHILDREN AND BABIES. USE ONLY ON A FLAT SURFACE. ADULT ASSEMBLY REQUIRED. FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY. MAXIMUM SAFE LOAD: 15KGS FOR TOP PANEL 5KGS FOR EACH SHELF.

 



Hardware List


	а	6x35mm	14pcs
®	b	15x9.5mm	14pcs
	С	6x30mm	20pcs
	d		1рс
~	е	4x12mm	2pcs


E	f		3pcs
•	g	4x12mm	18pcs
8	h		4pcs
S	i	2x16mm	18pcs
\	j	6x25mm	6pcs

/	k		1pc
STATE OF THE PARTY	1	4x35mm	6pcs
V	m	5x25mm	8pcs
V	n		3pcs
0 >	0	4x12mm	2pcs




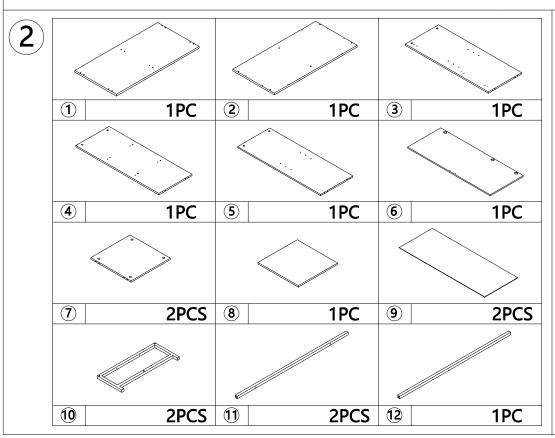

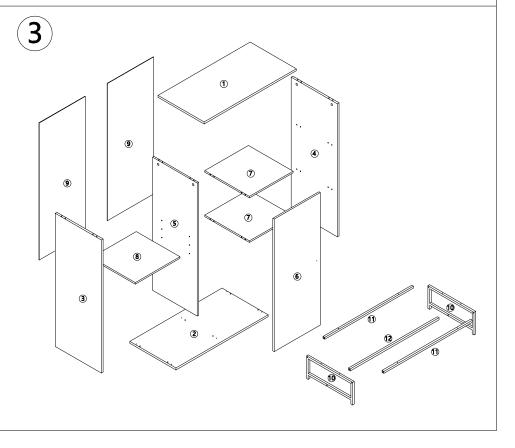


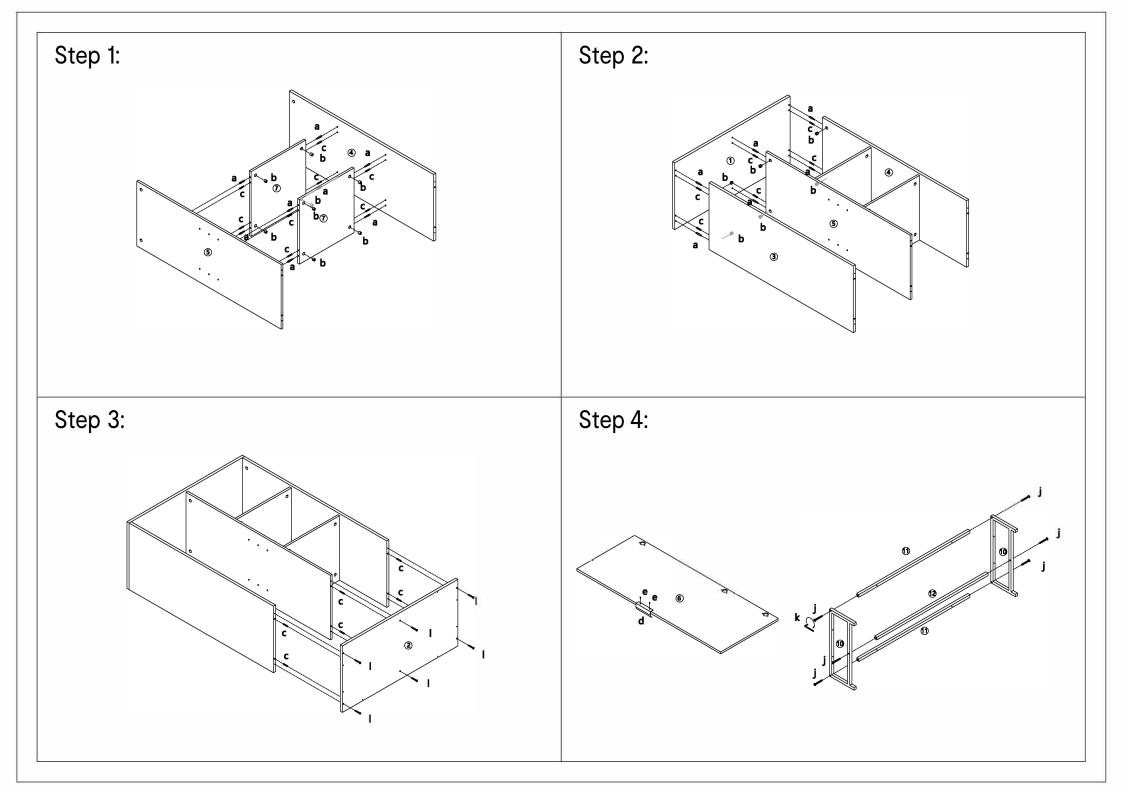


Step 5:

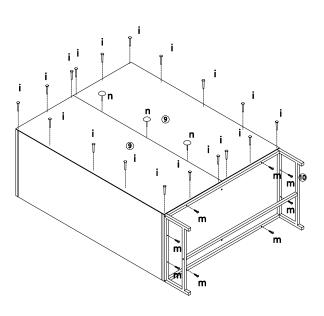

Step 6:

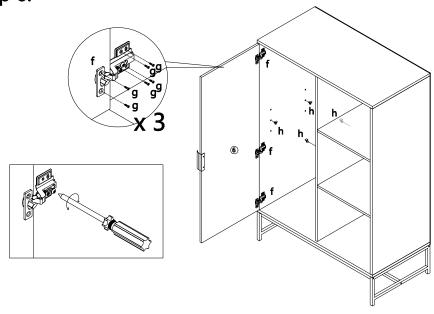

Step 7:

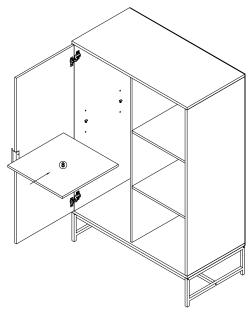

Step 8:

TOPPLING FURNITURE WARNING:

- It is strongly recommended that this product is permanently fixed to the wall.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- > Stability of tall items may be affected by thick pile carpet or uneven floors.
- Do not place unanchored televisions on furniture.

Caution: for your safety when attaching the anchor fixings, please note the following:

before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson)

