

# Manual - MIC ONLY

## A6 105 x 148mm

### Product Details

File name: 5060\_MAN\_IE\_42901938\_MIC\_Only\_v5

Artwork Proof Date: 20.04.2020

Number of artboards: 1

### Printing Details

Print Colours: Single colour black

Do Not Print: **Dieline, Info**

Flat Size: 105 x 148mm

ARTWORK SHOULD NOT BE AMENDED  
WITHOUT PRIOR AGREEMENT FROM CREST.  
ALL ARTWORK **MUST** BE APPROVED BY  
CREST PRIOR TO MASS PRODUCTION.  
THANK-YOU.

IF THERE ARE QUERIES ABOUT THIS ARTWORK PLEASE CONTACT:

EMAIL: [design@crest.com.au](mailto:design@crest.com.au)



### Special Instructions

**Please use 200gsm bright white coated paper**

© The Crest Company 2020. All rights reserved.

anko

Thank you for choosing our Anko headphone/earphone. We hope you enjoy using it.

This headphone/earphone has an in-line music control function along with a call answering function that will work on most IOS and Android device

#### Overview:

1. Call answer and music control button
2. Microphone

\*The position of the call answer button and microphone position are for illustration purposes only, the exact positions in different models may vary slightly.

#### How to use the In-line control functions:

##### A. Call answer

With the headphone/earphone connected to your device via the 3.5mm headphone socket.


Note: If you wish to make a call using the in-line microphone function the microphone will automatically activate whilst the headphone/earphone is connected to your device via the 3.5mm socket.

Function	Operation
Call Answer	Short press the call answer/music control button to answer calls on your device
Hang Up	Short press the call answer/music control button to hang up your phone call

##### B. Music Control Function

With the headphone/earphone connected to your device via the 3.5mm headphone socket.

Function	Operation
Pause Music	Short press the call answer/music control button once to pause music Short press the call answer/music control button once to resume music
Skip Track	Short press the call answer/music control Forward button twice rapidly to skip track forward
Skip Track	Short press the call answer/music control Backwards button 3 times rapidly to skip track backwards

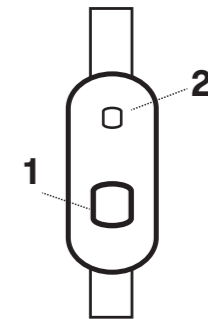

**WARNING** › Do not dispose of unit in fire or water. › Never attempt to disassemble and reassemble. Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. Check with your local authority for recycle advice. › Keep your device and all accessories out of the reach of children and animals. Small parts may cause choking or serious injury if swallowed. › Avoid exposing your device to very cold or very hot temperatures (below 0°C or above 45°C). › Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. › Do not allow your device to get wet—liquids can cause serious damage. Do not handle your device with wet hands.