

12 month warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with the accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on **1800 124 125 (Australia)** or **0800 945 995 (New Zealand)** or alternatively, via Customer Help at **kmart.com.au** for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.



CAUTION

During Use, Storage or Transportation the battery should not be subjected to extremely low temperatures, or low air pressure at high altitude. › If the battery is exposed to extremely high temperatures it could result in an explosion or the leaking of flammable liquid or gas. › Please take care when disposing of the unit; disposal in a fire, oven, mechanically crushing or cutting machine could result in the battery exploding.

WARNING Do not dispose of unit in fire or water. › Never attempt to disassemble and reassemble. › Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. › Check with your local authority for recycle advice. › Keep your device and all accessories out of the reach of children and animals. › Small parts may cause choking or serious injury if swallowed. › Avoid exposing your device to very cold or very hot temperatures (below 0°C or above 45°C). › Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. › Do not allow your device to get wet—liquids can cause serious damage. › Do not handle your device with wet hands.

Bluetooth® Headphones Operating instructions




includes:

- › Bluetooth headphones
- › charging cable
- › audio cable



Function overview:

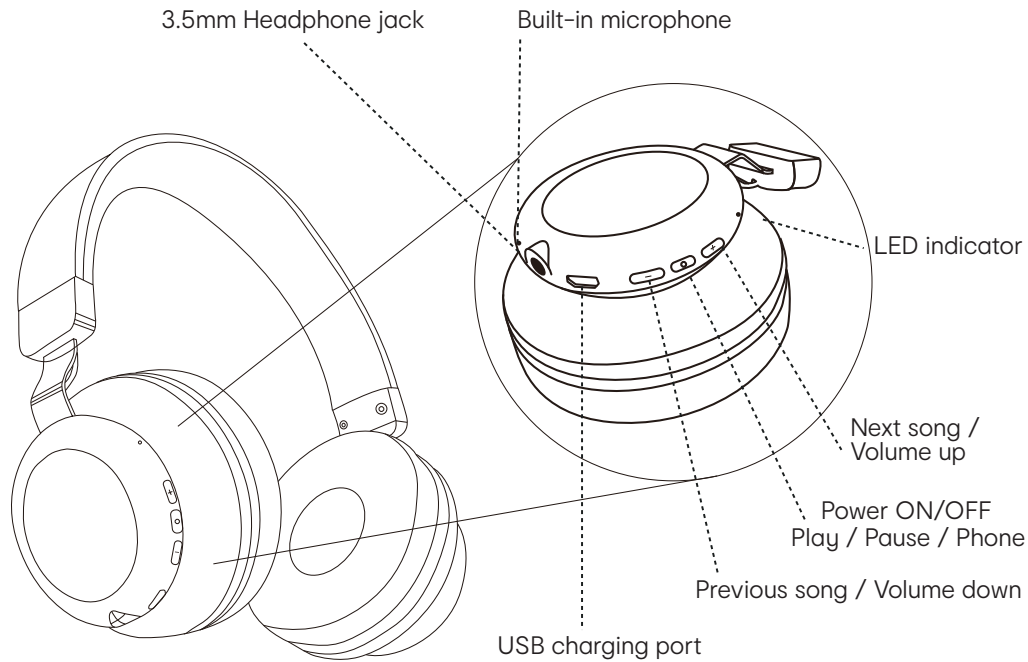

How to use these headphones:

Function Operation

Pause Press ● button

Play Press ● button

Next Song Press and hold the + button

Previous Song Press and hold the - button

Answer Call Press ● button

End Call Press ● button

Decline an Incoming Call Hold down ● for about 2 seconds

Redial Last Call Press ● twice

Activate Siri or Voice Assistant Press ● 3 times

Volume Up Press the + button once

Volume Down Press the - button once

Power ON / OFF

Power ON
Press and hold the power button until blue LED flashes

Power OFF
Press and hold the power button until red LED flashes

Pairing the headphone with Bluetooth devices

- › Once the headphone is powered on, you will hear a voice prompt "Power on", the headphone will then pair to the last paired device.
- › If not previously paired, search on your electronic device's Bluetooth menu and select the pairing name KM42901952 or KM42901969.
- › Once connected you will hear a voice prompt "The device is connected successfully".
- › To shut down the Bluetooth function on the current connected device, the headphone will go to pairing mode again with red and blue light flashing and is available to be connected with a different device.

Phone calls

- › Press power button to pick up /hang up phone calls.
- › Press and hold power button for 2 seconds to reject calls.
- › Press power button twice to call the previous number called.

Voice Activating

- › Press the power button 3 times to activate your phone assistant to play music, make phone calls or respond to message, etc.

Playing music

- › When the headphone connects with the electronic device via Bluetooth you can enjoy music through the headphone wirelessly.

Battery Charging

- › Please use the provided USB cable to charge the battery.
- › Insert the micro USB cable end into the headphone charging port
- › Insert USB charging cable into an appropriate 5V 1A USB port.
- › The light will turn red when charging and turn blue when the headphone is fully charged.
- › It takes about 3.5 hours to fully charge the battery.

Specifications:

Model No:
42901969, 42901952

Version:
V5.0

Support profiles:
A2DP1.3/HFP1.6/HSP1.2/AVRCP1.6

Working Distance:
10 Meters

Music Time:
≈20 Hours

Talk time:
≈13 Hours

Standby time:
~6 Months

Charging voltage:
5V d.c.

Battery capacity:
450mAh

Charge time:
3.5 hours

Cable length:
1m

Pairing window time:
5 Minutes