

# anko

## User Manual

Bluetooth® Clock Radio with White Noise & LED color

42902157



### Notice :

Please read user manual carefully before any operations and keep it for your records.

### Safety instructions:

Please read all safety instruction warnings carefully before using this product. Improper use of this product may result in damage to this or attached products. To ensure the production works well, please never use this in the following conditions:

1. Moist or underwater conditions.
2. Conditions near heater or high temperature service.
3. Conditions with direct and strong sunshine.
4. Do not use chemical solvent on cleaning this product.

### CAUTION

Danger of explosion if battery is incorrectly replaced. Do not try to replace the battery by yourself.

Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.

Replacement of a battery with an incorrect type that can result in an explosion or the leakage of flammable liquid or gas.

Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.

**Packing contents:**


Bluetooth® Clock Radio White Noise Machine x 1


Micro USB charging cable x 1

3.5 to 3.5mm Aux cable

User manual x 1

**Product Overview:**

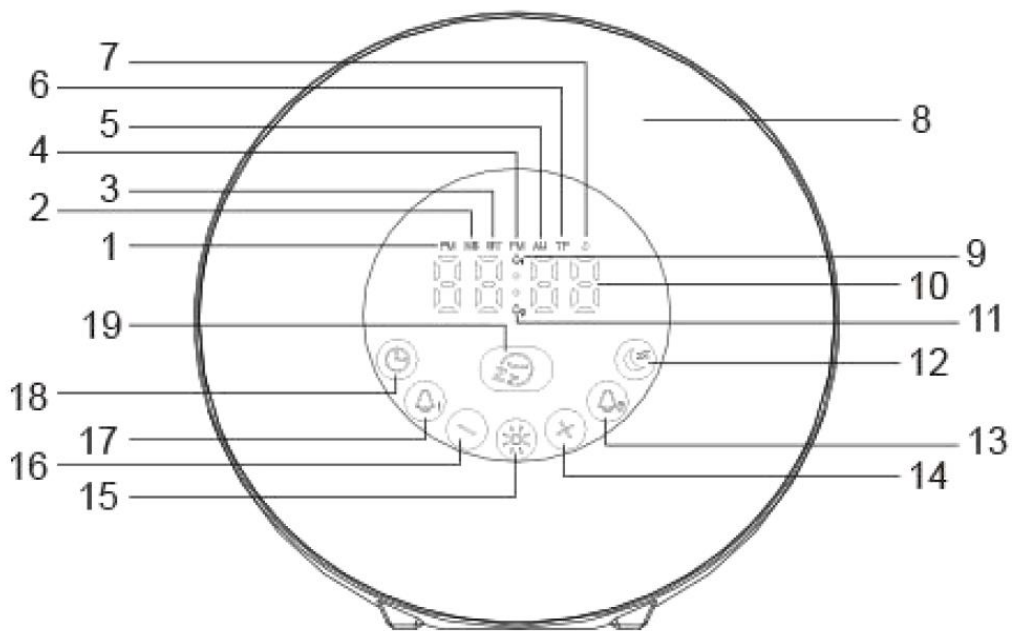

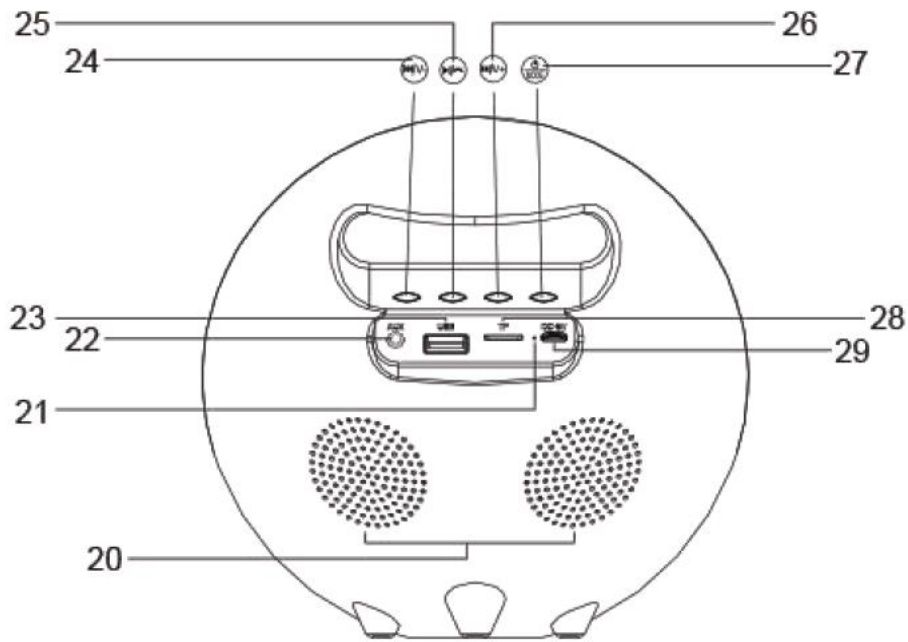

1. PM icon	Show time of the afternoon when 12h display. Long press “18” button to change 12h or 24h display.
2. NS icon	White noise sound
3. BT icon	Bluetooth mode
4. FM icon	FM mode
5. AU icon	Aux mode
6. TF icon	TF/USB card mode
7. Sleep icon	Sleep mode
8. LED light	LED light
9. Alarm Clock 1 icon	Alarm clock 1(the icon display means the alarm 1 is enabled)
10. Digital Display	LED display
11. Alarm Clock 2 icon	Setting FM Radio as alarm (the icon display means the alarm 2 is enabled)
12. Sleep mode button	Short press to enter sunset light mode, with timer option 30mins/60mins/90mins. When the set time arrives, the light, radio and music will be turned off. When powered off, clock can display 20 seconds by pressing any button on the front panel. To turn on the product, press and hold the power button.
13. Alarm Clock 2 button	<ol style="list-style-type: none"> <li>1. Short press to enter FM radio alarm setting mode, then short press the “+/-” button to change hour digits when digits flash.</li> <li>2. Short press to complete and switch to minute setting, then press the “+/-” button to change minute digits.</li> <li>3. Short press to complete hour and minute setting and select radio station by F01/ F02/ F03/ F04/.../ , press the “+/-” button to select a FM station as alarm source.</li> <li>4. Short press again to confirm FM station selection. Alarm clock 2 is now activated.</li> </ol>

	5. Press and hold 1 second to turn off alarm 2.
14. Brilliance control button “+”	Press this button increase LED brightness or adjust time
15. Light button	<ol style="list-style-type: none"> <li>1. Short press to turn on LED</li> <li>2. Press the “+/-” button to adjust brightness.</li> <li>3. Short press again to enter color LED mode, press the “+/-” to change color or light.</li> <li>4. Short press again to tur off light.</li> </ol> <p><b>The wake-up light starts operation 30 minutes before alarm rings.</b></p> <p><b>The light turns off automatically when switching to snooze mode. The light automatically turns on again when alarm rings.</b></p>
16. Brilliance control button “-”	Press this button to decrease brightness or adjust time
17. Alarm clock 1 button	<p>Setting 7 kinds of natural sounds as alarm source.</p> <ol style="list-style-type: none"> <li>1. Short press to enter hour setting mode, then press the “+/-” button to change hour digits when digits flash.</li> <li>2. Short press to enter minute setting mode, then press the “+/-” button to change minute digits.</li> <li>3. Short press this button again to complete hour and minute setting, and the display show NS 01/ NS 02/ NS 03/ NS 04/NS 05/NS 06/NS 07 for you to select a natural sound, then press the “+/-” button to select one.</li> <li>4. Short press this button to confirm the sound selection. Alarm clock 1 is now activated</li> <li>5. Press and hold this button to activate or deactivate the alarm, press this to turn off the alarm sound when alarm rings.</li> </ol>
18. Clock button	<p>Works only when the unit is switched on:</p> <ol style="list-style-type: none"> <li>1. Long press to toggle 12 or 24hour format.</li> <li>2. Short press to enter hour setting mode.</li> <li>3. Short press to enter minute setting mode.</li> <li>4. Short press to complete clock setting.</li> </ol> <p>To change hour and minute digits, press the “+/-” button.</p>
19. Snooze button	<p>Short press to enter snooze mode when alarm rings. The alarm rings again after 9 minutes.</p> <p>The unit enters snooze mode automatically if the alarm rings 3 minutes without any operation. This cycle repeats three times at most.</p>
20. Speakers	Speaker
21. Mic	Microphone
22. AUX connector	Connect to an external audio device.
23. USB port	Connect a USB flash drive to play music
24. Button for previous track, or volume decreasing	<p>Press to skip to the previous track or stored radio channel</p> <p>long press to decrease volume.</p>
25. Button to play/pause music, answer phone call	<p>In Bluetooth mode, press this button to start/pause/resume play.</p> <p>In radio or music mode, short press to answer phone call.</p> <p>In radio mode, long press to auto search and store FM radio station. Up to</p>

	15 FM radio station can be stored.
26. Button for next track, or volume increasing	Press to skip to the next track or stored radio channel long press to decrease volume.
27. Power/MODE button	Long press to power on or off. When power on: Short press this button to toggle the modes in the following sequence: "Natural Sound, Bluetooth, FM radio" , plug AUX cable to enter AU mode, plug TF card to enter TF mode directly. When power off, press any button on the front panel to display clock for 20 seconds, and feature operation is not available.
28. TF card slot	Connect Micro SD card to play music
29. DC 5V port	Connect to the power supply.

### Charging the speaker.

Plug the provided USB charging cable into a USB charging port rated DC5V.

While charging, the LED indicator turn red.

When low battery, it will prompt with a low battery reminder. Please keep it connected to a USB charging port.

### To use Bluetooth function:

Pairing a Bluetooth device for the first time

1. Turn the unit on.
2. Turn on your external device. Refer to its user manual for instructions on pairing and connecting Bluetooth devices.
3. Using the native controls on your Bluetooth device, select Bluetooth device name
4. 'KM42902157" in your Bluetooth settings menu to pair.
5. When successfully paired and connected, a sound will issue from the unit.
6. After initial pairing, the unit will stay paired unless unpaired manually.
7. If your device asks for a pairing password, use "0000" or "1234" to complete the pairing
8. If you have used Bluetooth connection before, the system will start searching for the device last connected. When the device is found, the system will re-connect automatically.

NOTE: Should your device become unpaired or you are not able to connect it, repeat the above steps.

**Natural Sound:** Press the mode button to natural sound mode. Press "+" / "-" button to select the natural sound. Press and hold "+" / "-" button to increase or decrease volume.

**FM Radio:** To Listen radio, MicroUSB cable must connect as antenna. Pres the MODE button to switch to FM radio mode. Long press Play button to auto scan. FM stations will be stored after performing auto searching FM stations.

**Play music with AUX:** Using 3.5mm audio cable, connect your device (smartphone or MP 3 player) to the AUX jack.

**Play music with microSD card and USB drive.**

When the unit is on, insert the microSD card/USB disk into the slot, music will play automatically when there is MP3 files stored

**Specification:**

- Bluetooth version: V5.0
- Bluetooth Protocol: AVRCP,HFP,A2DP
- Product Input:5V/1.2A
- Built-in rechargeable Lion Battery: 3.7V.
- Music Format: MP3
- Micro SD Card( Max capacity): 64GB
- USB Disk (Max capacity): 64GB
- Upto 40 radio channel storage.
- Product size: 168 \* 110 \* 160mm
- Product weight: 450g

## **12 Month Warranty**

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at [Kmart.com.au](http://Kmart.com.au) for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.