

# anko

## Bluetooth® Wireless Mouse

### Instruction Manual

Keycode: 42902263



## **Safety Instructions:**

Please read the instruction manual before using this device and follow all the safety instructions to avoid damage caused by improper use.

- ▶ Keep the instruction manual for future reference. Should this device be given to a third party, then this instruction manual must also be handed over.
- ▶ This device is intended for household use only.
- ▶ Only use this appliance indoors.
- ▶ Keep the appliance away from all hot surfaces and naked flames.
- ▶ Always put the appliance on a level, stable, clean, dry surface. Protect the appliance from extreme heat and cold, dust, direct sunlight, humidity and drops or jets of water.
- ▶ Do not immerse the appliance in water or in other liquids.
- ▶ Do not open the housing under any circumstances. Do not introduce any objects into the interior of the housing.
- ▶ Should the device malfunction due to electrostatic discharge or a short power surge, disconnect it from your computer and then reconnect it again.

## System requirements:


Compatible with Windows XP SP3 / Vista 7 / 8 / 10 Mac OS X10.8 or later, Android 3.2, IOS 13.4 or later Phone & Tablet.

Please ensure that your computer supports Bluetooth® 3.0 or Bluetooth® 5.0 technology.

## Before first use:

1. Unpack the device and check if all parts are there and undamaged. Should this not be the case, return the product to Kmart for replacement.
2. **Danger of suffocation!** Keep all packaging materials away from children.
3. Dispose of the packaging materials properly. Inform yourself at the local authorities regarding collection points or garbage separation.
4. Remove all protective foils and packaging material prior to use.

## Product overview:

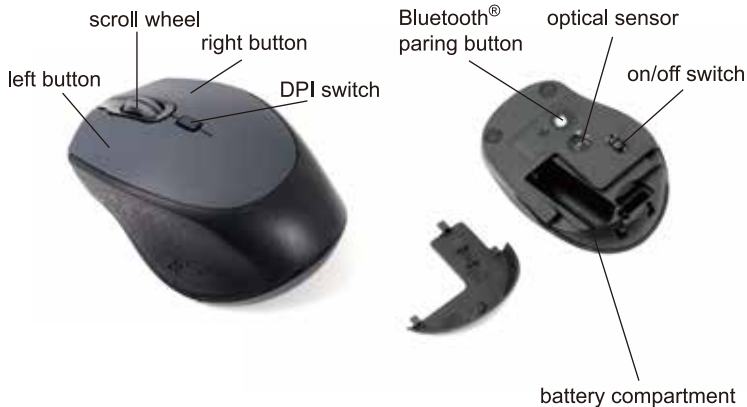

## Inserting the Batteries

1. Remove the battery compartment covers of mouse and insert 1 x 1.5V AA battery. Please note the polarity diagram printed inside the battery compartments. **Caution!** Danger of explosion if the batteries are incorrectly replaced.
2. Replace the battery compartment cover again.

### Notes on batteries

- ▶ Only use top-quality batteries. Cheap batteries could leak and damage the device as a result.
- ▶ If the batteries leak, remove them with a cloth and dispose of them accordingly. Ensure that leaking battery acid does not come into contact with skin and eyes. If you do get battery acid in your eyes, flush them thoroughly with lots of water and consult a physician immediately! If battery acid comes into contact with your skin, wash the affected area with lots of water and soap.
- ▶ If the device is not to be used for an extended period of time, then the batteries should be removed, as the device could become damaged should they leak. If the device functions weaken, replace all batteries.
- ▶ Batteries do not belong in household waste! Expired batteries must be disposed of in an environmentally friendly way and according to the applicable legal regulations.
- ▶ Batteries are very dangerous if swallowed. Please keep the batteries and the device components away from children at all times. If a battery is swallowed, seek medical attention immediately.
- ▶ Batteries must not be recharged or activated with other means, dismantled, thrown into fire or short-circuited.
- ▶ Do not use old and new batteries or batteries of various types together.
- ▶ Remove the batteries prior to disposing of the device.

## Connecting Mouse

1. Push the mouse ON/OFF switch to ON.
2. Press and hold the bluetooth pairing button for 5 seconds, then the green indicator light of the Bluetooth® pairing button flashes quickly.
3. Click Bluetooth® icon on the task bar on your laptop.
4. Click "Add a Device"
5. When your tablet search and if the "KM BT3.0" and "KM BT5.0" appear simultaneously, means the tablet support higher BT version, please directly click "pairing" to "KM BT5.0" due to the stability performance. If only "KM BT3.0" appear, means the tablet support low BT version only, no need to do any selection, please click "pairing" to "KM BT3.0" for connection.
6. Your tablet get "connected" with "KM BT3.0" or "KM BT5.0" successfully.

## In Mac OS System

1. Please finish previous step 1 and 2 before paring.
2. Click the Bluetooth® icon on you laptop or in the system bar.
3. Search and if find the "KM BT3.0" and "KM BT5.0" appear simultaneously, please directly click "pairing" to "KM BT5.0". If only KM BT3.0 appear, please click "pairing" to "KM BT3.0" for connection.
4. Your tablet get "connected" with "KM BT3.0" or "KM BT5.0" successfully.

## Power saving mode

If the device is not used for minutes, it switches to power saving mode. Just move the mouse, or press any key to reactivate it.

## Changing DPI

The default DPI for the mouse is 1600.

Click the DPI switch repeatedly to change the setting in the following order: 1600dpi → 800dpi → 1200dpi → 1600dpi

## Care and maintenance

Wipe all parts with a dry soft cloth.

## 12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at [Kmart.com.au](http://Kmart.com.au) for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.