

Manual and Warranty Folded 105 x 150mm


Product Details
File name: 5060_MAN_IE_42913436_TWS G3_Black_V 12
Artwork Proof Date: 03.08.2020

Number of artboards: 1

Printing Details
Print Colours: Single colour black
Do Not Print: Dieline, Info
Flat Size: 105 x 148mm

ARTWORK SHOULD NOT BE AMENDED WITHOUT PRIOR AGREEMENT FROM CREST. ALL ARTWORK MUST BE APPROVED BY CREST PRIOR TO MASS PRODUCTION. THANK-YOU.


Special Instructions
Please use 200gsm bright white UNCOATED paper



IF THERE ARE QUERIES ABOUT THIS ARTWORK PLEASE CONTACT:
EMAIL: design@crest.com.au

© The Crest Company 2020. All rights reserved.


Double sided print
Z-fold

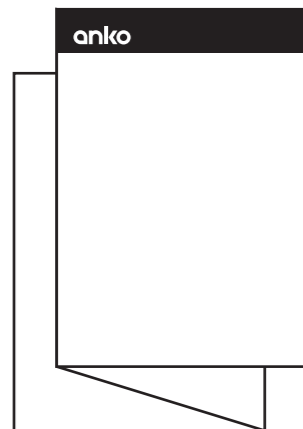

BACK

This product shall be supplied by a power source not exceeding PS1 only. This BT earpiece shall be charged by the supplied charging unit only.
CAUTION The batteries in this product are not replaceable. > During Use, Storage or Transportation the battery should not be subjected to extremely low temperatures, or low air pressure at high altitude. > If the battery is exposed to extremely high temperatures it could result in an explosion or the leaking of flammable liquid or gas. > Please take care when disposing of the unit; disposal in a fire, oven, mechanically crushing or cutting machine could result in the battery exploding.

Function overview:

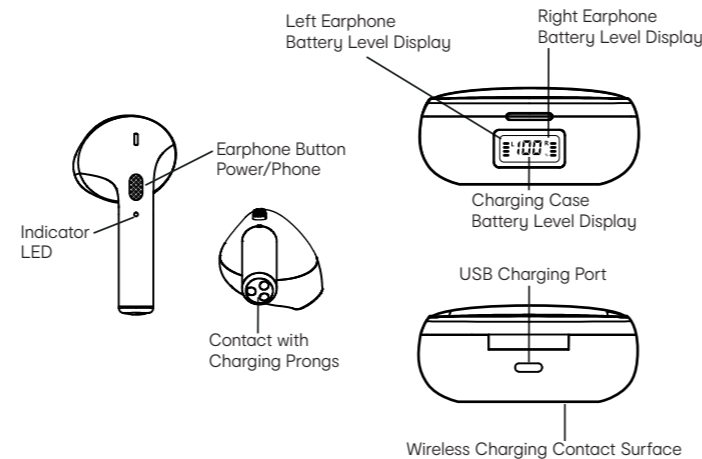

How to use these Earphones:

Earphone Function Operation

Pause Press either button

Play Press either button

Next Track Press right button 3 times in quick successions

Redial Last Call

Press either button 2 times in quick successions

Power ON

Press and hold button (on each earphone) for 5 seconds!

Previous Track Press left button 3 times in quick successions

Answer Call
Press either button

Reject Call
Press and hold either button

End Call
Press either button

Power OFF
Press and hold button (on each earphone) for 5 seconds

Activating Phone Assistant
Press and hold either button for 3 seconds

Pairing the Earphones with Bluetooth® devices

> Take out the earphones from the charging case and they will automatically power on. You can also press and hold the earphone power button for 5 seconds until the earphone's LED flashes blue and red alternatively. The right and left earphones will automatically sync to each other.

> Go to "Bluetooth" settings on your Bluetooth device (phone, tablet, etc.)

> Turn the Bluetooth ON on your device.

> Once synced, on your Bluetooth device, select KM42913436 on the list of available devices. Blue lights of earphones will flash from time to time after connected successfully.

> **Trouble shooting tips of earphones disconnecting or un-syncing**

> Solution 1

Switch OFF Bluetooth on the device; press and hold the earphones for about 5 seconds to power off the earphones, then press and hold the buttons to power on again; wait till left and right earphones are synced, then switch Bluetooth ON on the device to connect the TWS. Then repeat above mentioned pairing process to pair the earphones with the device again.

> Solution 2

Put the earphones back into the charging case then take them out again, the earphones will enter pairing mode again, both earphones will flash red and blue alternatively. If they sync up successfully, only one earphone will flash this way and the other will flash blue once every 5 seconds. Turn on the Bluetooth of the device and follow above pairing process to find KM42913436 and connect up again.

Phone Calls

Press either button to answer or end call. Press either button twice to redial the last called number.

Battery charging (Charging Case)

> Connect the USB-C charging cable into the charging port on the charging case.

> Plug the other end of the cable into a standard USB 5V power output, or place the Wireless charging contact surface of the charging case on a wireless charger.

> The number of charging case battery level display will flash when charging.

> When fully charged, the battery level number on the case will be 100 and stop flashing. Unplug the charging cable from the power socket.

Battery Charging (Earphones)

> Put the earphones into the charging case, ensuring that the charging prongs make full contact.

> The red LED will illuminate while the earphones are charging and will turn off when fully charged.

Note: the earphones come with a built-in rechargeable battery. Before using them for the first time, we recommend you fully charge the battery. A full charge takes around 1 hour.

> The L and R earphone battery level display on the charging box will be changing when charging.

FRONT

Trouble shooting tip: if charging does not begin, please remove the earphones from the case, and then place them back again.
Note: when connected with a mobile phone, there will be a symbol on upper right of phone screen showing earphone battery level.

> **Warning:** the earphones are to be used with the provided charging case only.

Specifications:

Model No:
42913436

Version:
V 5.0 Bluetooth® chipset

Support profiles:
A2DP, AVRCP, HFP

Working distance:
10 Meters

Music time:
>4 Hours

Standby time:
>100 Hours

Charging voltage:
5V d.c.

Charge time (Charging Case):
2.5 Hours

Charge time (Earphones):
1 Hour approx

Pairing window time:
5 Minutes

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under licence.
iPhone, iPad and Mac is a trademark of Apple Inc., registered in the U.S. and other countries.

WARNING Do not dispose of unit in fire or water. > Never attempt to disassemble and reassemble. > Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. > Check with your local authority for recycle advice. > Keep your device and all accessories out of the reach of children and animals. > Small parts may cause choking or serious injury if swallowed. > Avoid exposing your device to very cold or very hot temperatures (below 0°C or above 45°C). > Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. > Do not allow your device to get wet—liquids can cause serious damage. > Do not handle your device with wet hands.

12 month warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with the accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on **1800 124 125 (Australia)** or **0800 945 995 (New Zealand)** or alternatively, via Customer Help at kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave VIC 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

anko

True Wireless Earphones Operating instructions



Includes:

- > True wireless earphones
- > Charging case
- > Charging cable (USB-C)



42-913-436

Bluetooth name is KM42913436