 


## READ AND SAVE IMPORTANT SAFETY INSTRUCTIONS

### USB Mini Humidifier

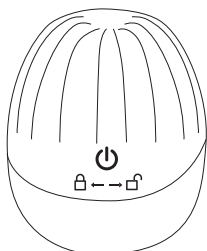


Model A-1969-2  
Keycode: 42913443

**WARNING-** TO REDUCE THE RISK OF BURNS, FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS:


- DO NOT** use the humidifier on flammable surfaces or near flammable materials, heat sources or open flames.
- DO NOT** use if the USB cable or humidifier is damaged. If the humidifier malfunctions, is damaged or is immersed in water, stop using the humidifier.
- Only use with the USB cable provided.
- Indoor dry location use only.
- DO NOT** touch the ultrasonic disc with a finger or scrape it with metal tools to avoid damage to the disc.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- DO NOT** immerse the humidifier in water or any other liquid.
- DO NOT** leave the humidifier on or unattended overnight.

- The appliance is only to be used with the recommended vaporizing medium. The use of other substances may give rise to a toxic or create a fire risk.

- Humidifier
- Plastic pipe
- Spring
- Water absorber (2pcs included)
- USB cable
- Ultrasonic disc
- Power button

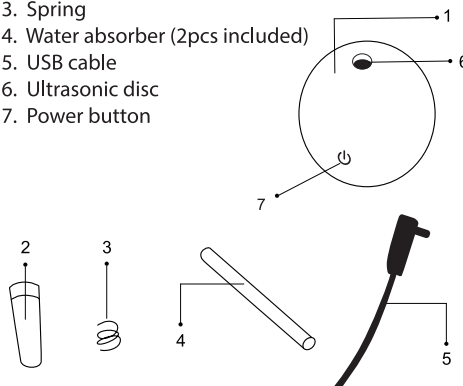


### GETTING STARTED OPERATING INSTRUCTIONS

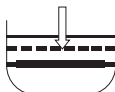


- Before operating the humidifier, please put the water absorber into water and wait for over 10 seconds until it is completely soaked. Fill the water reservoir with room temperature water. **DO NOT** over fill the reservoir.

**Caution:**  
**DO NOT** use distilled water or pure water as this will reduce the mist output.


- Rotate and open the top of the humidifier, put the spring inside the plastic pipe.

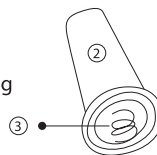

- Insert the soaked water absorber into the small hole at the top of the humidifier. The other end of the water absorber is inserted into the spring-loaded plastic tube area.

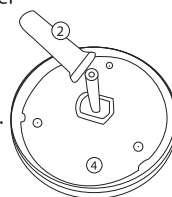

- Turn the humidifier clockwise.

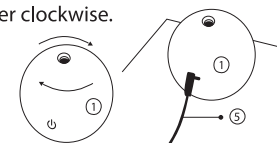

- Plug the USB cable into the humidifier and plug another USB end into any USB power supply.
- Place it on a stable and level surface.
- Press the power button.  
Press once - both the light and humidifier will power on  
Press twice - only the humidifier will power on  
Press three times - all will switch off

### LIGHT SETTINGS

The light colour changes automatically during operation, you cannot set a chosen colour. The colour sequence is Red - Purple - Blue - Green - Yellow - Orange.

### NOTES

#### 4-hour auto off function:

When the humidifier is switched on, it will run for 4 hours before switching off. If there is a water shortage and no mist emitted, the light will still stay on for 4 hours.

- There might be no mist emission for around 3 minutes - this is normal because it can take time for the water absorber to release water to the ultrasonic disc.
- If there is no mist emission or mist emits unstably during operation, please make sure the water container is full with water, the water absorber is soaked, the aged water absorber is replaced, or the water hole and ultrasonic disc are clean.
- DO NOT** use essential oils, perfume or distilled water as this will cause the cotton swab to clog and the humidifier to be unusable.
- Please make sure the cotton core has soaked a few minutes before you turn it on.

### MOVING AND STORAGE INSTRUCTIONS

- DO NOT** move the humidifier while in use. Spillage may cause damage to the humidifier and other parts.
- Always hold both the base and the cover when moving the humidifier.
- Empty the reservoir and clean the humidifier before storing.

## CARE AND MAINTENANCE

1. Always turn OFF and unplug the humidifier for care and maintenance.
2. Clean the humidifier with a soft cloth.
3. Clean scale deposits on the ultrasonic disc with clean water.
4. **DO NOT** use metal or hard abrasive to scrape the ultrasonic disc.
5. Clean the ultrasonic disc regularly to avoid scale building up.
6. If the ultrasonic disc becomes excessively scaled, clean it repeatedly to descale.
7. Dry the diffuser completely before using it again.
8. **DO NOT** use vinegar or other corrosive cleaning agents.

## 12 Month Warranty:

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

## Troubleshooting

Problem	Possible Reasons	Solution
Unit does not work	USB power not connected	Connect power with provided USB cable and press the button
	USB power device failure	Change USB power device
Unable to Spray mist	Water reservoir might be dirty	Clean the water reservoir
	Too much water inside the reservoir	Make sure water inside the reservoir is not over max water level
	Cover is not closed properly	Make sure the cover is tightened
	Water level very low	Fill with more water
	Water absorber dirty	Clean water absorber, if still poor mist, change to new water absorber
<b>Caution:</b> <b>DO NOT</b> shake or tilt the product when there is water in the reservoir or else the product will not work properly		