

1

### Before You Begin...

**CAUTION**  
To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, adapters, accessories, and supplies.

- **READ THIS MANUAL AND SAVE FOR FUTURE REFERENCE**
- THIS DEVICE IS NOT A TOY, do NOT allow children or pets to use or play with this device.
- Do not disassemble, modify, or repair the device.
- Do not expose the unit to extreme temperatures (heat or cold), open flames, humid, or wet conditions.
- Do not submerge in water.
- Do not allow the power part or the connectors of the supplied power adapter to be exposed to dust, or water, or come into contact with any conductive materials such as liquids, metallic powders, etc.

**What You Get**

- SBT1048 – Tower Speaker (x1)
- Power Adapter (x1)
- 3.5 mm AUX Cable (x1)
- Remote Control (x1)
- Wooden Base (x1)
- Base Screws (x2)
- Instruction Manual (x1)

**Product Specification**

- Bluetooth version: V 5.0
- Input: DC 9V2A
- Only use with provided AC adapter Model: CW0902000AU

2

### Location of Controls

**(Top of Speaker)**

- [M] Button: Pause/resume playback (BT), search FM radio stations, switch input modes
- [<<-] [>>] Buttons: Skip Tracks/FM Stations, Adjust Volume
- [\*] Button: Cycle through light modes
- LED Indicator

**(Side of Speaker)**

- 3.5 mm AUX Input
- [Power] Switch

3

**[⏻] Button**  
· Enter/leave standby mode

**[⏸] Button**  
· Play/pause (Bluetooth)  
· Search FM stations (FM Radio)

**[⏭] Button**  
· Skip to next track (Bluetooth)  
· Tune to next station (FM Radio)

**[⏮] Button**  
· Skip to previous track (Bluetooth)  
· Tune to previous station (FM Radio)

**[🔆] Button**  
· Change light modes

**[🔇] Button**  
· Mute/unmute volume

**[VOL-] and [VOL+] Buttons**  
· Adjust volume

4

### Getting Started

**Installing the Base**

1. Remove the speaker and contents from its packaging.
2. Carefully turn the speaker upside down and place the wooden base on the underside, aligning the screw holes on the base with the screw holes on the speaker.
3. Screw the base to the speaker with the supplied base screws.

When properly installed, the non-slip feet on the underside of the wood base should be touching the floor.

**CAUTION**  
The speaker should be placed ONLY on a level, sturdy floor. Do NOT place on a table or other piece of furniture.

**Powering the Speaker**  
Insert the pin of the supplied power adapter into the DC power jack on the **back of the speaker**. Plug the adapter into an electrical outlet.

- Move the **[Power]** switch to the ON position to power the speaker on. A tone will be heard, the lights will turn on, and the speaker will enter Bluetooth pairing mode.
- Move the **[Power]** switch to the OFF position to power the speaker off.
- Press the **[⏻]** button on the remote control to put the speaker into standby mode.

**Adjusting Volume**

- Press and hold the **[<<-]** and **[>>]** buttons on the speaker or press the **[Vol-]** and **[Vol+]** buttons on the remote control to adjust speaker volume.
- Press the **[🔇]** button on the remote control to mute/unmute volume.

5

### Changing Input Modes

- Press and hold the **[M]** button on the speaker to switch between Bluetooth, AUX, and FM radio mode.
- The speaker will automatically switch to AUX mode when a 3.5 mm cable is inserted into the 3.5 mm AUX input.

**Using the Lights**

- Press the **[\*]** button on the speaker or on the remote control to cycle through light modes.

**Bluetooth Pairing**

1. Power the speaker ON. A tone will be heard and the LED indicator will **quickly flash BLUE**.
2. Set your mobile device to search for Bluetooth devices. When it appears, select **KM42925576** from the list of found devices.
3. After a successful pairing, a tone will be heard and the LED indicator will **slowly flash BLUE**.

Once paired, audio playback and volume can be adjusted via the controls below, on your paired media-playing device.

- Press the **[M]** button on the top of the speaker or on the remote control to pause/resume music playback.
- Press the **[<<-]** and **[>>]** buttons on the speaker or the **[<<-]** and **[>>]** buttons on the remote control to skip tracks.

**LED Indicator**

- Quickly Flashing BLUE**  
Speaker is ready to pair
- Slowly Flashing BLUE**  
Speaker is paired
- Solid BLUE**  
Using FM Radio/3.5 mm

127.0mm

6

### Using with a Wired Device

Insert one connector of the included 3.5 mm audio cable into the 3.5 mm input jack. Insert the other connector into the headphone jack or audio output jack of your media playback device.

The LED indicator will **turn solid BLUE** while in use.

While connected via the 3.5 mm input jack, playback and volume can be adjusted with the controls on your connected device.

**FM Radio**

1. Power the speaker ON. Extend the FM antenna cable on the back of the speaker toward an open window or an area with direct line of sight toward the sky.
2. Press and hold the **[M]** button on the speaker until the speaker switches to FM radio mode. The LED indicator will **turn solid BLUE**.
3. Press the **[M]** button on the speaker while in FM radio mode to have the speaker scan for FM radio stations. The speaker will scan for all nearby stations with a strong enough signal strength and save them as presets. While scanning, the LED indicator will **quickly flash BLUE**.

Once the speaker is done scanning and saving all nearby stations, you can skip through saved stations by pressing the **[<<-]** and **[>>]** buttons on the speaker.

7

### 12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

8

# anko

## USER'S MANUAL

Bluetooth Speaker  
42925576

PLEASE READ CAREFULLY BEFORE OPERATING THIS EQUIPMENT  
KEEP IT IN A SAFE PLACE FOR FUTURE REFERENCE

76.2mm

要求：双面印刷

尺寸：127.0mm\*76.2mm

折叠方式：风琴折

字体：按设计要求，不得改变

材质：铜版纸

排放：序号1印刷至序号8的背面，序号2印刷至序号7的背面，序号3印刷至序号6的背面，序号4印刷至序号5的背面