

## 12 month warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with the accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on **1800 124 125 (Australia)** or **0800 945 995 (New Zealand)** or alternatively, via Customer Help at **kmart.com.au** for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under licence.



**WARNING** Do not dispose of unit in fire or water. › Never attempt to disassemble and reassemble. › Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. › Check with your local authority for recycle advice. › Keep your device and all accessories out of the reach of children and animals. › Small parts may cause choking or serious injury if swallowed. › Avoid exposing your device to very cold or very hot temperatures (below 0°C or above 45°C). › Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. › Do not allow your device to get wet—liquids can cause serious damage. › Do not handle your device with wet hands.

# Bluetooth® Kids Headphones Operating Instructions




includes:

- › Bluetooth® headphones
- › charging cable



## Function overview:

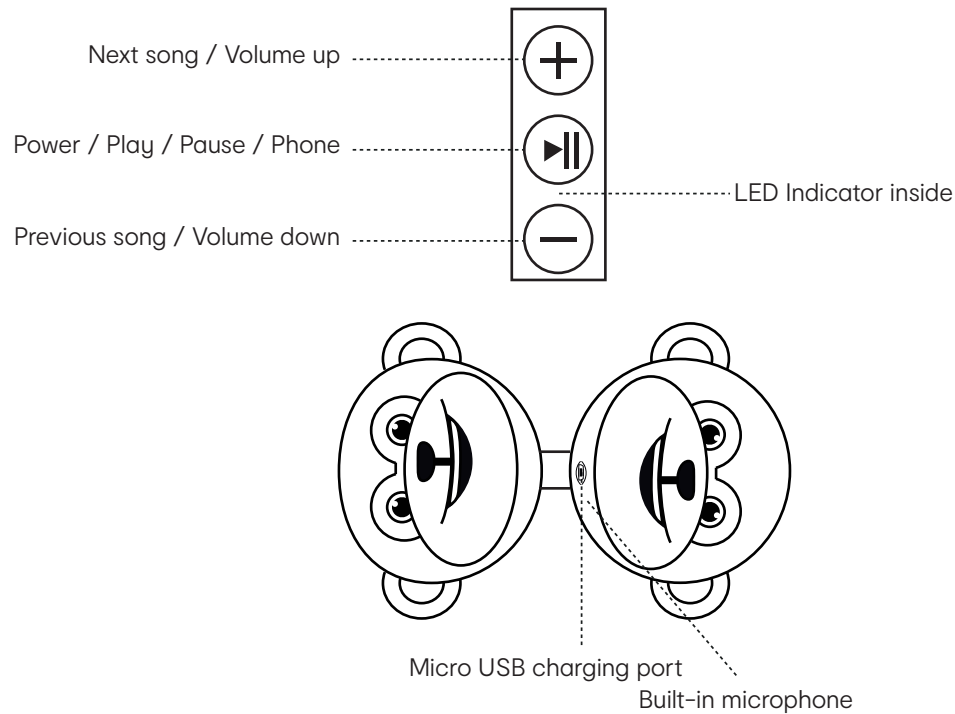

## How to use these headphones:

### Function Operation

**Play** Press ▶|| button

**Pause** Press ▶|| button

**Next Song** Press + button

**Previous Song** Press - button

**Volume Up** Press and hold + button

**Volume Down** Press and hold - button

**Answer Call** Press ▶|| button

**End Call** Press ▶|| button

**Decline Incoming Call** Press and hold ▶|| button for about 2 seconds

**Redial** Press ▶|| twice in quick succession

### Power ON / OFF

#### Power ON

Press and hold ▶|| button for about 3 seconds

#### Power OFF

Press and hold ▶|| button for about 3 seconds

## Pairing the headphone with Bluetooth® devices

- › Turn the headphone on, you will hear a voice prompt "The bluetooth device is ready to pair" and LED indicator flashes, the headphone will then pair to the last paired device automatically if available.
- › If not previously paired, search the Bluetooth list on your electronic device for the pairing name KM42930747, then click it to pair with your headphone.
- › If want to connect to another device, turn off Bluetooth function on current connected device, the headphone will enter pairing mode again with LED indicator flashing; follow above pairing process to connect it on the other device.

## Phone calls

- › Press ▶|| to pick up/hang up phone calls, press and hold to reject incoming call.
- › Press ▶|| twice to redial.

## Playing music

When the headphone connects with your device via Bluetooth you can enjoy music wirelessly.

## Battery Charging

Please use the provided USB cable to charge the battery.

- › Insert the micro USB cable end into the headphone charging port.
- › Insert USB charging cable into an appropriate 5V d.c. 1A USB port.
- › The LED indicator will be red during charging and go off when the headphone is fully charged.
- › It takes about 3.5 hours to fully charge the battery.

## Specifications:

**Model No:**  
42930747

**Version:**  
V5.0 multimedia hi-fi Bluetooth chipset

**Support profiles:**  
A2DP, AVRCP, HFP

**Volume limited:**  
82dB ± 3dB

**Working Distance:**  
10 Meters

**Music Time:**  
>10 Hours

**Talk time:**  
>Up to 10 Hours

**Standby time:**  
>100 Hours

**Charging voltage:**  
5V d.c.

**Battery capacity:**  
450mAh

**Charging time:**  
2.5 Hours

**Charging Cable length:**  
0.3m

**Pairing window time:**  
5 Minutes

Non-play automatic power save mode:  
After 30 seconds inactivity the headphone will enter power save mode and can be re-activated by pressing the ▶|| button.