
### CARE INSTRUCTIONS:


# Assembly Instructions 42937012 DESK DRAWERS OAK


TO BE ASSEMBLED ON A CLEAN, DRY AND SMOOTH SURFACE. WIPE CLEAN WITH A SOFT DAMP CLOTH. NEVER USE SCOURERS, ABRASIVES OR CHEMICAL SOLVENTS. CHECK AND TIGHTEN ALL PARTS REGULARLY. KEEP AWAY FROM MOISTURE AND DIRECT SUNLIGHT. STORE IN A DRY PLACE, FOR INDOOR USE ONLY.


#### WARNING!

DO NOT STAND, SIT OR LEAN ON THIS UNIT. DO NOT USE THIS TABLE AS A STEP LADDER OR AS A CHOPPING SURFACE. ENSURE THIS TABLE IS USED ONLY ON A FLAT SURFACE. DO NOT USE THIS TABLE UNLESS ALL BOLTS AND SCREWS ARE FIRMLY SECURED. DO NOT PLACE HOT ITEMS SUCH AS COFFEE CUPS DIRECTLY ON THE SURFACE OF THIS FURNITURE ITEM. KEEP AWAY FROM CHILDREN AND BABIES. THIS PACKAGE CONTAINS SMALL PARTS AND SHARP POINTS. ADULT ASSEMBLY REQUIRED. A MILD ODOUR MAY BE PRESENT WHEN FIRST OPENING THIS CARTON. SIMPLY ALLOW TO AIR OUTSIDE AND THIS WILL FADE. MAXIMUM SAFE LOAD LIMIT: 5KG ON TOP, 1ST, 2ND DRAWER, 10 KG ON BOTTOM DRAWER. FAILURE TO FOLLOW THESE WARNINGS COLUD PESULT IN SEPICIES IN 11 PM

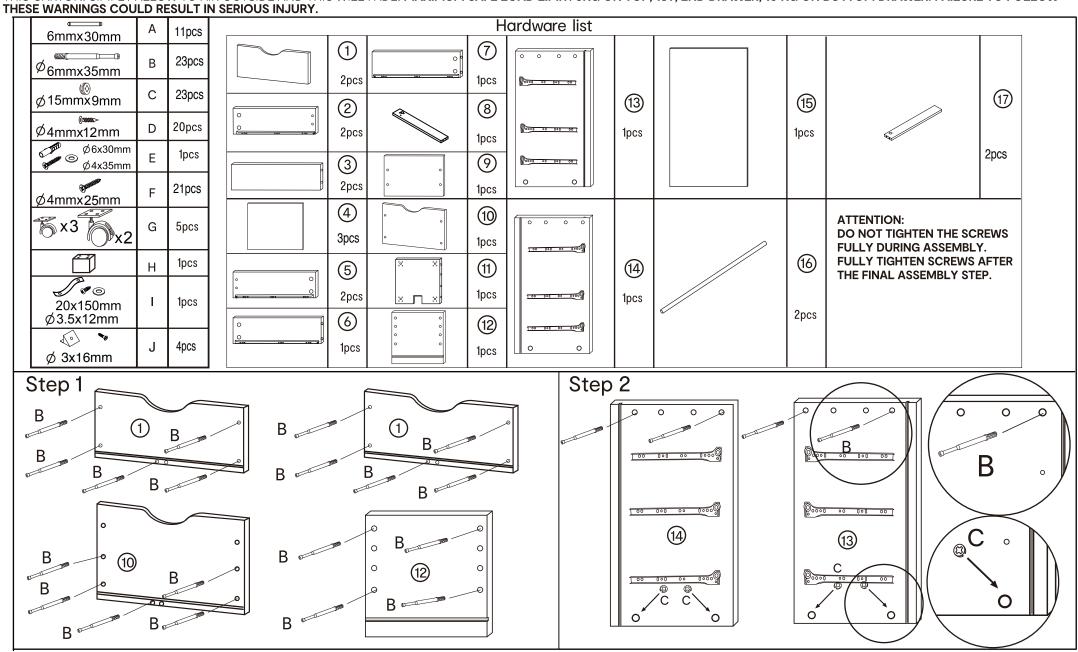

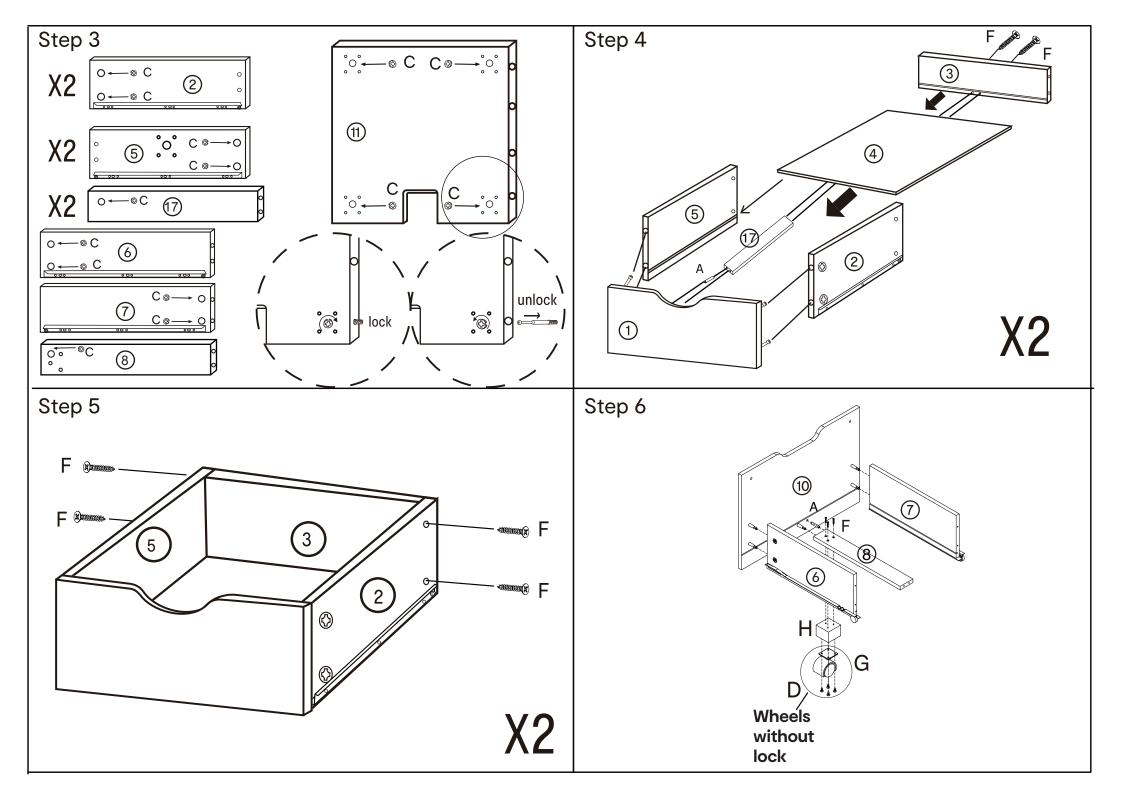


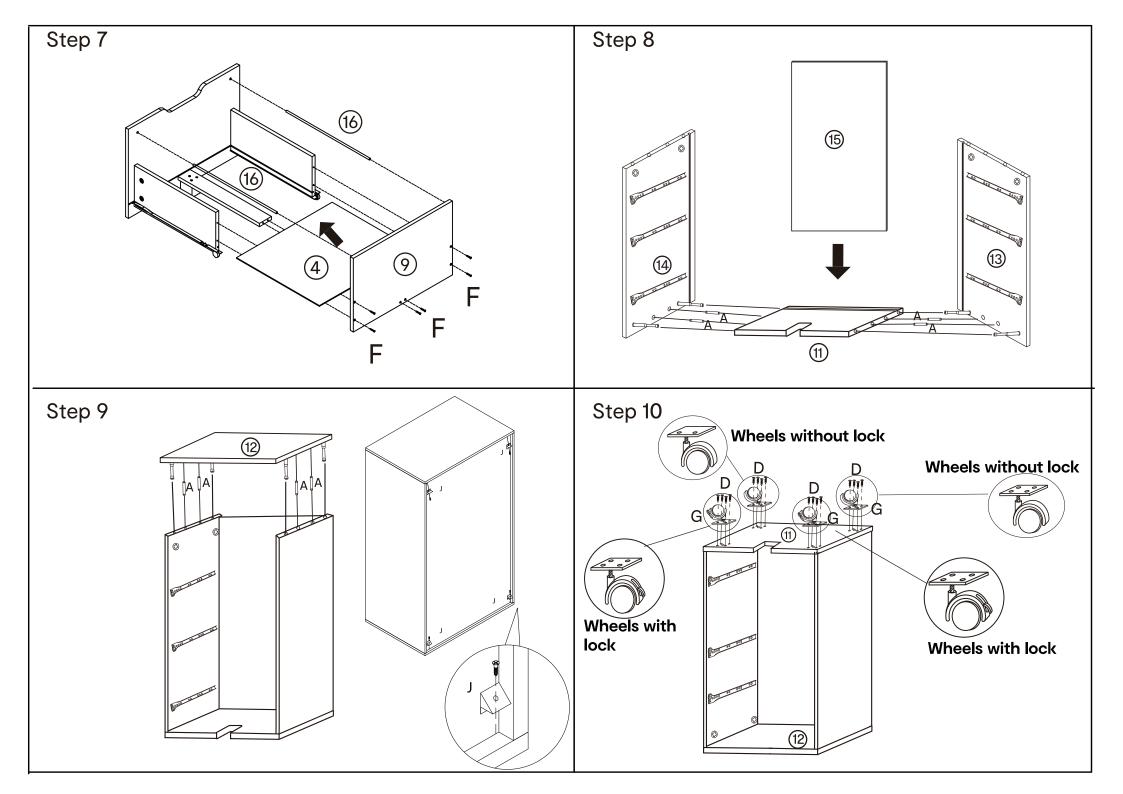

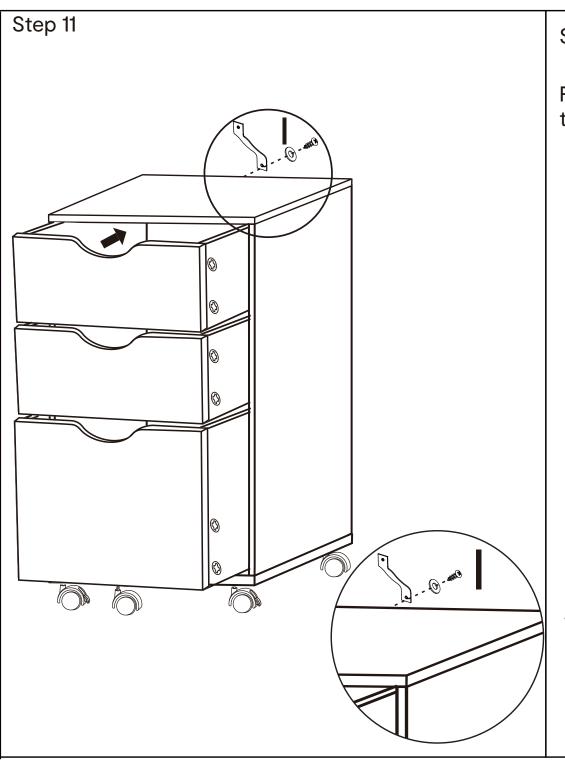

## Step 12

Fixed the whole product to the wall with part J. then the assembly is complete.

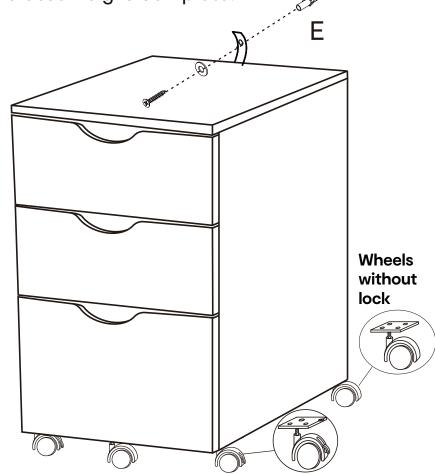

### **TOPPLING FURNITURE WARNIING:**

Wheels with lock

It is strongly recommended that this product is permanently fixed to the wall.

- > Please seek professional advice if you are in doubt of What fixing device to use.
- Regularly check that anchors are securely maintained.
- > Stability of tall items may be affected by thick pile carpet or uneven floors.
- Do not place unanchored televisions on furniture.

Caution: for your safety When attaching the anchor fixings, please note the following:

Check any electrical Wires or plumbing inside the wall before drilling any holes

(if you are unsure please seek professional advice from a qualified tradesperson)