

Assembly Instructions

42939757 / GAMING CHAIR


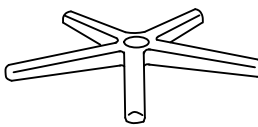 
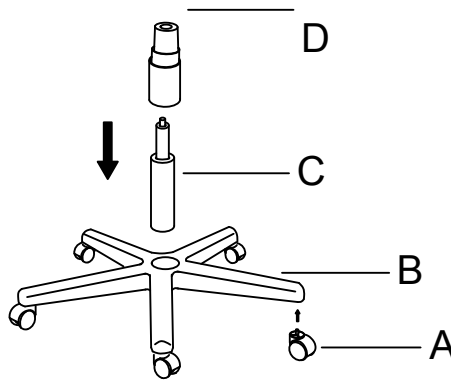 
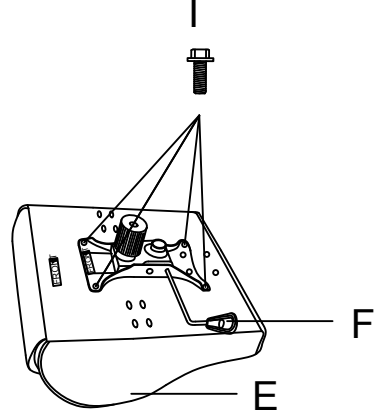 
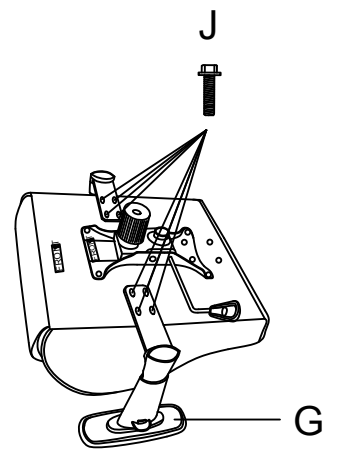 
 
 
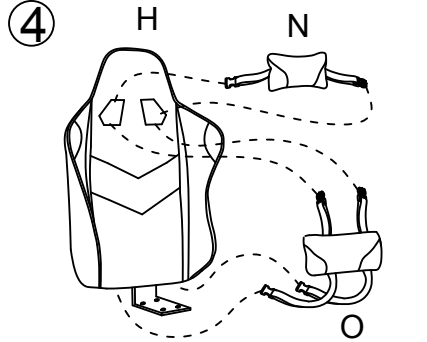 
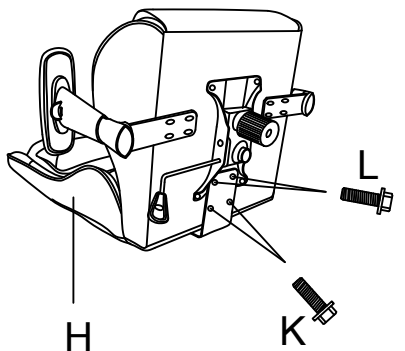 
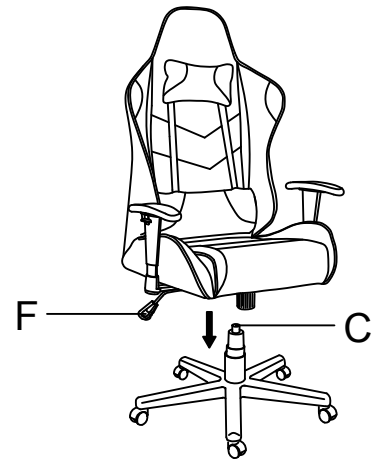 
 
 
 
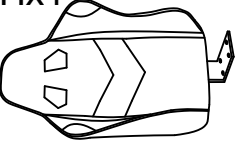 


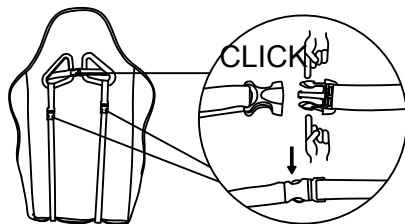 
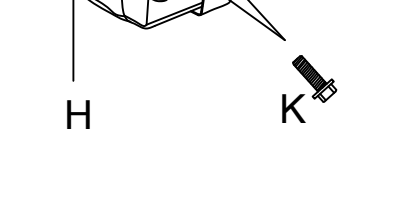 
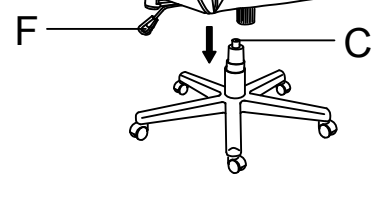 


 


CARE INSTRUCTIONS:

WIPE CLEAN WITH A DAMP CLOTH. DO NOT USE BLEACH OR DETERGENT PRODUCTS. PROTECT FROM DIRECT SUNLIGHT. INDOOR USE ONLY.

WARNING:

DO NOT STAND ON THIS CHAIR - DO NOT USE THIS CHAIR AS A STEP LADDER. USE THIS PRODUCT FOR SEATING ONE PERSON AT A TIME. DO NOT USE THIS CHAIR UNLESS ALL BOLTS, SCREWS AND KNOBS ARE FIRMLY SECURE. AT LEAST EVERY 4 MONTHS, CHECK ALL BOLTS, SCREWS AND KNOBS TO BE SURE THEY ARE TIGHT. IF PARTS ARE MISSING, BROKEN, DAMAGED OR WORN, STOP USING THIS PRODUCT UNTIL REPAIRS ARE MADE USING FACTORY AUTHORIZED PARTS.

MAXIMUM SAFE LOAD: 120KGS. FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.

<p>Ax5</p> 	<p>Bx1</p> 	<p>①</p> 	<p>②</p> 	<p>③</p> 
<p>Cx1</p> 	<p>DX1</p> 	<p>④</p> 	<p>⑤</p> 	<p>⑥</p> 
<p>Ex1</p> 	<p>Fx1</p> 			
<p>Gx1(L&R)</p> 	<p>Hx1</p> 			
<p>Ix4</p>  <p>M8x22mm</p>	<p>Jx8</p>  <p>M6x28mm</p>	<p>⑦</p> 	<p>⑧</p> 	<p>⑨</p> 
<p>Kx2</p>  <p>M8x30mm</p>	<p>Lx2</p>  <p>M8x32mm</p>			
<p>Mx1</p>  <p>M5</p>	<p>Nx1</p> 			
<p>Ox1</p> 	<p>⑩</p> 