

anko

BLUETOOTH PARTY SPEAKER



42940197



Contents

Warning _____	1
Important precautions _____	1
Package contents _____	2
Description of top panel _____	3
Description of rear panel _____	4
Description of Remote Control _____	5
Getting Started _____	6
Function Instructions _____	7
Connect Wired Microphone _____	9
Warranty _____	10

Warning

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
The lightning flash with arrowhead symbol, with an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the products enclosure that may be sufficient magnitude to constitute a risk of electric shock to persons.	CAUTION: TO REDUCE THE RISK OF SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE REFER SERVICE TO QUALIFIED SERVICE PERSONNEL.	The exclamation point within an equilateral triangle is intended alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Important precautions:

1. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
2. Minimum distances 100 cm around the apparatus for sufficient ventilation.
3. The ventilation should not be impeded by covering the ventilation opening with items, such as news papers, table-cloths or curtains.
4. No naked flame sources such as lighted candles, should be placed on the apparatus.
5. When the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
6. Working temperature: $-10^{\circ}\text{C} \sim +45^{\circ}\text{C}$.
7. Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
8. Replacement of a battery with an incorrect type that can result in an explosion or the leakage of flammable liquid or gas.
9. Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
10. Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
11. A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
12. This product shall not be connected to d.c. power supply source exceeding PS2 (12V d.c. 2A).
13. The use of apparatus in moderate climates.
14. Attention should be drawn to the environmental aspects of battery disposal.
15. Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
16. Excessive sound pressure from earphones and headphones can cause hearing loss.
17. The internal battery is non-user replaceable.
18. Do not use this apparatus near the water.

DESCRIPTION OF TOP PANEL

 
Package contents

- 1.Speaker x 1
- 2.Remote control x 1
- 3.AC power cable x 1
- 4.User manual x 1
- 5.Line In / FM Antenna Cable x 1 (the same one cable)

Product specifications


Speaker

Power Supply	:	220-240V~ 50Hz
DC Input	:	5V
FM Radio	:	87.5-108MHz
Speaker Size	:	6.5 Inch + 2 Inch
Battery	:	Rechargeable lithium battery
Line In	:	3.5mm
Microphone Input	:	6.35mm
DC Input(external)	:	12V

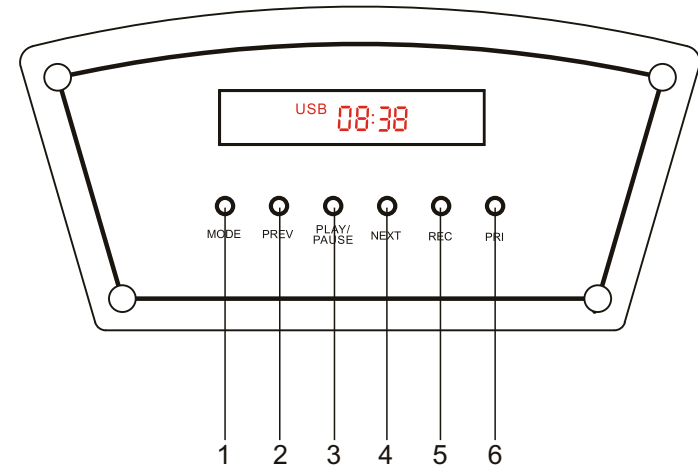


- 1.Mode Switching Button
- 2.Previous Button
- 3.Play/Pause Button
- 4.Next Button
- 5.REC Button
- 6.Microphone Priority Button

 DESCRIPTION OF REAR PANEL

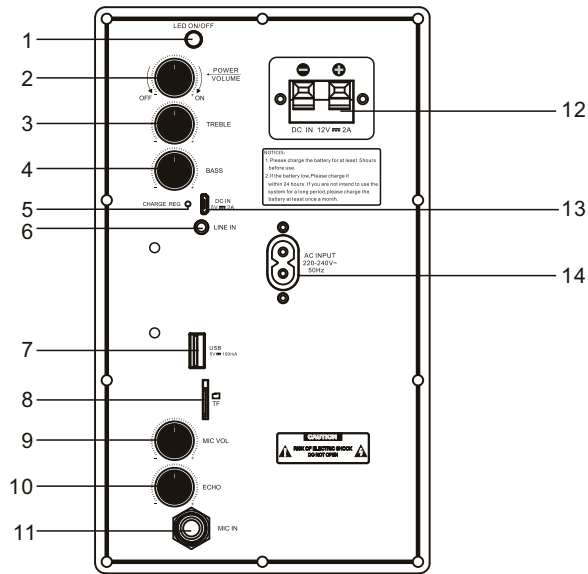

- 1.LED On/Off
- 2.Power On/Off and Volume knob
- 3.Treble Volume Knob
- 4.Bass Volume Knob+
- 5.Battery Charge light Indicator
- 6.Line in Input Jack
- 7.USB Input Slot
- 8.TF Input Slot
- 9.Microphone Volume Knob
- 10.Echo Volume Knob
- 11.Microphone Input Jack
- 12.DC 12V External Input
- 13.DC 5V Input
- 14.AC Input Socket

 DESCRIPTION OF REMOTE CONTROL

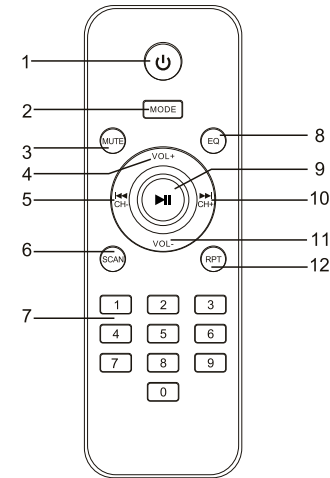

1. Power on/off
2. Mode
3. Mute
4. Volume+
5. Previous Track/CH-
6. Scan
7. 0-9 keys
8. EQ Function
9. Play/Pause
10. Next Track/CH+
11. Volume -
12. Repeat



To insert the remote control batteries:

- 1.Open the battery compartment.
- 2.Insert 2 x AAA batteries with correct polarity (+/-) as indicated.
The 2xAAA battery not include in our products.
- 3.Close the battery compartment.

CAUTION:

- Danger of explosion if battery is incorrectly replaced.
- Replace only with the same or equivalent type.

Getting Started

Connecting Power Cable

Warning: Ensure the **Power on/off switch** is in **OFF** position before plugin. Plugin the **AC connector** into the **220-240V 50Hz inlet socket** in the rear panel of the unit and the other end into the standard **AC 240V wall socket**.

1. Do not plug or unplug the power cable while you have wet hands.
2. To protect this apparatus from alightning storm, or when left unattended and unused for long periods of time, unplug power cable from the wall outlet.
3. When unplugging the power cord from a wall outlet, always pull on the power plug only. Never unplug it by pulling the power cord.

Charging the internal Battery

The speaker comes with a built-in rechargeable battery, follow the below steps to charge it:

AC INPUT(220-240V) Charging

1. Please connect the power cable on the rear panel and plugin to the 220-240V 50Hz wall socket to charge the speaker.
2. Please charge about 2-3hours to charged fully.

DC 5V IN Charging

1. Please connect USB charger to the DC 5V input slot, then plugin to the 220-240V 50Hz wall socket to charge the speaker.
2. The Red charging LED indicator on the rear panel will light up, the battery is being charge.
3. If fully charged, the RED indicator light will keep flashing slowly. Unplug the power cable to stop charging.
4. The charging time for USB input is about 4hours.

DC 12V INPUT

Connect the DC cable of the external power supply to the DC 12V IN terminals of the speaker rear panel, please corresponding connect to the Red (+) and Black (-) indicated.

Noted: This DC input is not for the battery charging, only supply the power to work for the speaker.

Intrenal Battery Level indicator

1. There is a full grid battery indicator symbol keeping static on the right bottom corner of the display screen, meaning battery capacity is full.
2. If the half grid battery indicator symbol will light on on the left bottom corner of the display screen, meaning battery capacity is low.
3. If the half grid battery indicator symbol keeping flashing on the left bottom corner of the display screen, meaning battery capacity is almost running out, please charge the battery on time.

Note: please fully charge the product when it is not going to be used for a long time and charge once a month to keep longer battery life.


Turning ON/OFF the speaker

Turn the Power ON/OFF & Volume Knob on the rear function panel to right direction to power on the Speaker, and turn to left direction to power off the Speaker.

Function Instructions

USB Operation

This unit has a USB port for play back MP3 music.

- Insert your USB device into the USB port and the unit will start playing automatically. Press the [MODE] button to USB mode is selected.
- Press the ◀◀ or ▶▶ key to the previous or next track.
- Press the ▶|| button to play or pause music
- Press  button on the remote to repeat the current track, press it again to repeat all tracks.

FM Operation

This speaker supports FM radio function.




1. Insert the Line In Cable/ FM antenna cable (supplied in the accessories) to the Line input jack on the rear panel and extend the cable.
2. Press [MODE] button on the top panel or on the remote control repeatedly until FM function is selected.
3. Short press button on the top panel to search the FM radio station automatically.
4. Press ◀◀ or ▶▶ to select the previous or next FM radio station.

Bluetooth function

1. Press [MODE] button on the top panel switch to the Bluetooth mode if the speaker on other mode, there is a prompt sound.
2. Once on the Bluetooth mode, "bLUE " will keep flashing on the display screen.
3. Open the Bluetooth function of the external device and search the Bluetooth device name "42940197 " to pair.
4. Press connect to "PAIR" with the speaker.
5. Once connected, " bLUE " will keep static on the display screen and can hear a prompt sound, you can play the music with the speaker.
6. You can use ◀◀ button or ▶▶ button on top panel to control the songs of the external device.

TWS Connecting

This speaker supports TWS pairing function, please buy two same speaker to enjoy this function.

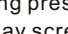
1. Turn on the Bluetooth function of the one speaker, connected the bluetooth and playing music.
2. Long press MODE button on the function panel to open the TWS function, " " will short display on the screen.
3. Turn on the bluetooth of another speaker and " bLUE " will keep flashing on the screen, then long press [MODE] button of this speaker to open the TWS function, " " will short display on the screen and "bLUE " will keep static.
4. Both speakers' TWS will pair automatically if above operation correct. Once TWS paired successfully, " bLUE " of both speaker will keep static.
5. Turn the volume knob on the function panel of any speaker increase or decrease the music volume. 6. If not using the TWS function, please long press [MODE] to deconnected TWS, " FF " will short show on the display screen, and " bLUE " will keep flashing on another speaker.

Function Instructions

Connect with AUX Line in

1. Press [MODE] button on the function panel to switch to the Line in mode, " AUH " will be displayed on the screen.
2. Connect this speaker Line in input jack and the device Earphone jack by provided Line in cable (supplied in the accessories)
3. Once connected, turn on your external device and play music.

 Caution: Please turn off the unit before connect AUX cable in order to avoiding unexpected noise.

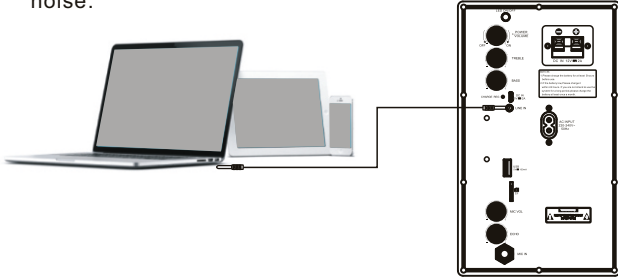

Microphone REC Function

Note:

Note: Recording function only record the voice from microphone input. Bluetooth and AUX input are not recorded.

Instruction:

1. Please must insert a USB driver to save the record file during the recording.
2. Insert a microphone and long press REC button on the top panel to turn on the recording function and the display will show " r-EC ".
2. The speaker will record and save the sound from the microphone into USB driver
3. Short press REC button can play the recorded sound from the USB driver.
4. Short press REC button again can withdraw the playing record mode and back to USB playing mode.

PRI(Priority) Function

1. Long press PRI button on the top panel to turn on the weakening of human vocal from the music when playing music, I , the display will show " RC ON "
2. Long press PRI button again to turn off the weakening of human vocal from the music , the display will show " RC OFF "
3. Short press PRI button on the top panel to turn on the microphone priority function, the display will show " o- ON "
4. Short press PRI button on the top panel to turn off the microphone priority function, the display will show " o- OFF "

Connect with Wired Microphone

Connect to Wired Microphone



MIC

Insert 6.35mm wired microphone, and use control knob to adjust the sound level.



When playing with the wired microphone, please use this knob to adjust the volume of microphone.



When playing with the wired microphone, please use this knob to adjust the echo volume of microphone.

Important Notes

While using the microphone, avoid being put the microphone opposite the bass of Party Speaker, as they may have Whistler Noisy.

To get the best singing performance, keep the microphone within 5-15cm of the mouth and at a 45 degree angle.

When using the microphone, always pay attention to the battery. If the battery is low, the indicator light will come on and the performance will progressively become poor.

Caution: Please do not put the microphone directly face to the Party speaker, it may damage the speaker.

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.