


# Platform Spin Swing Set Instruction Manual

Keycode 42949503

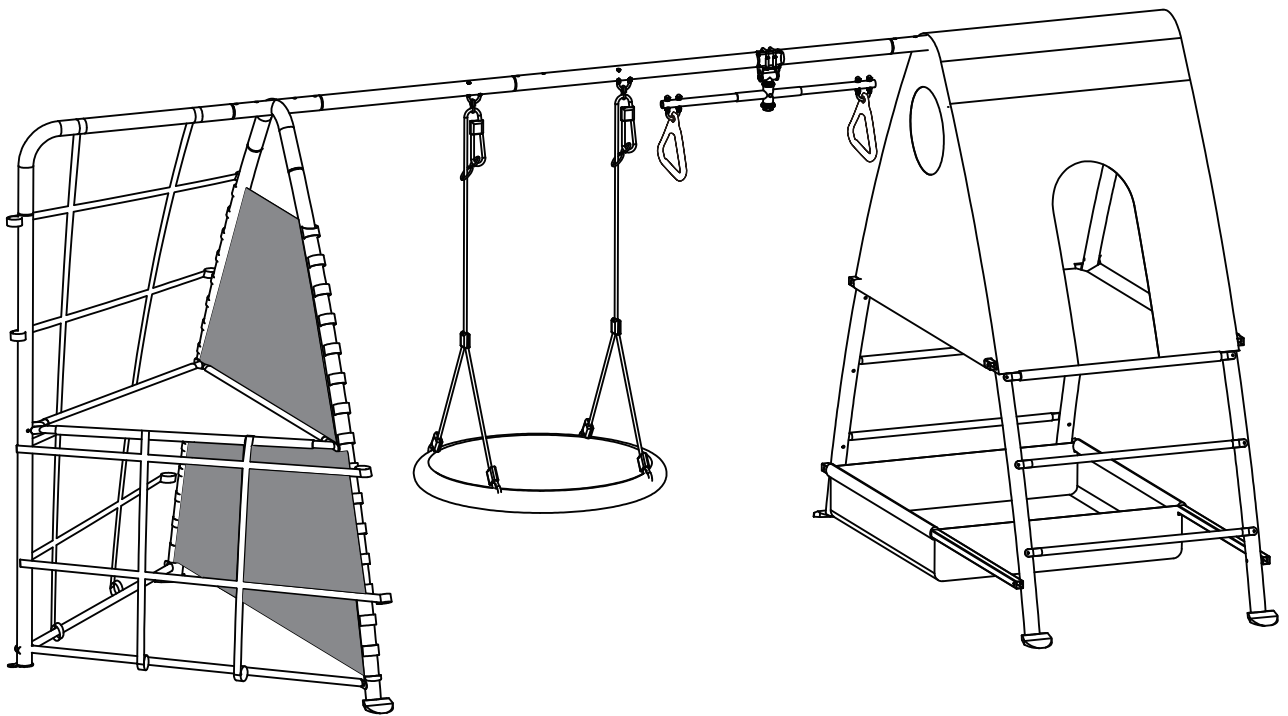

**WARNING!** Not suitable for children under 3 years. Small parts. Choking hazard. Maximum user weight 45kg for each section. This unit is designed to be used safely by up to 5 children simultaneously. Only for domestic use. Outdoor use only.

# SWING SET SAFETY INSTRUCTIONS

**WARNING!WARNING!WARNING!WARNING!WARNING!WARNING!WARNING!**

**YOUR CHILD'S SAFETY DEPENDS ON YOU!!!**

*Observing the following statements and warning reduces the likelihood of serious or fatal injury.*

1. Provide on-site adult supervision for children of all ages at all times.
2. It is recommended that the playground equipment be placed in concrete. Be certain that all anchoring devices(including concrete)are placed below the level of the playing surface or below ground level to prevent tripping.
3. Teach children to sit in the center of swing play items, with their full weight in the center of seats. NEVER allow children to stand on the seats. DO NOT allow children to lean to the side when riding on other rides, structural members or collide with other playmates.
4. Dress children appropriately while on and around this equipment. DO NOT allow children to wear ponchos, scarves, jewelry, loose shoes, jackets or clothing with loose strings, and/or clothing that might be potentially hazardous while using this equipment.
5. DO NOT let children use equipment in any manner other than intended.
6. DO anchor all gyms. DO NOT install over concrete, asphalt, gravel or any hard surface which may cause injury should a fall occur.
7. DO NOT let children use equipment until properly assembled and anchored. Place swing set on LEVEL GROUND not less than 6 feet(1.8m) from any structures or obstacles such as fences, overhanging branches, laundry or electrical lines garages, sheds or houses.
8. Instruct children to avoid swinging empty play stations. Stations may strike other children or come back and strike you .
9. Instruct children not to walk closely in front of , behind or between moving plays. Instruct children to keep a safe distance away to avoid being struck by items in play.
10. Instruct children not to twist chains or ropes or loop them over the support bar. This adds stress, reduces strength and may result in failure.
11. Instruct children not to get off play items while in motion. DO NOT allow children to jump from moving play items.
12. DO NOT allow children to climb or play on equipment while wet. (Slips or falls may occur.)
13. Instruct children not to go down slide head first.
14. Check slide bed for extreme heat before letting children use slide. (When exposed to direct sunlight.)
15. DO NOT allow children to climb on or swing from structural members (legs, top bar and chin bars). These are structural components ONLY and NOT play features.
16. DO NOT allow children to swing play items more than 60 degrees.
17. DO NOT leave bolts threads uncovered. TIGHTEN all hex nuts securely.
18. DO NOT attach items to the playground equipment that are not specifically designed for use with the equipment, such as, but not limited to, jump ropes, clothesline, pet leashes, cables, and chain as they may cause strangulation hazard.
19. Warning: Lawn swings are designed for children over 3 years of age.
20. At the end of each play season, remove all plastic plays and take indoors. DO NOT allow the use of plastic items when the temperature drops below 32 degrees Fahrenheit, (0 degrees Celsius).
21. Dispose of all packaging properly after swing set has been assembled.
22. Please retain the instruction manual for future reference and review each season.
23. This swing set complies with AS/NZS ISO 8124.6.

**WARNING:BE SURE TO FOLLOW ALL INSTRUCTIONS ABOVE**

# SAFETY INSTRUCTIONS

## WARNING!

Adult assembly required

Adult supervision recommended at all times

Maximum weight of 100 pounds(45kg) for swing section.

Only for domestic use

Outdoor use only

Not suitable for children under 36 months – fall hazard

Retain instruction manual for future use

Swing seat must be a minimum of 350mm above the ground

Place on a level surface at least 2m from any structure or obstruction

Must not be installed over concrete, asphalt or any other hard surface

It is advised that on a regular basis (i.e. at the beginning of the season and monthly thereafter) all main parts/ fixings are checked as secure, well oiled (if metallic), have no sharp points/edges and are intact. Replace, oil and/or tighten when necessary. Failure to do so may result in an injury or hazard.

Any attachments such as swings, chains, ropes, etc must be regularly examined for evidence of deterioration. Replace any attachments if there are signs of deterioration. Failure to do so may result in an injury or hazard.



## WARNING!

Unexpected movement (i.e.: tipping, lifting and overturning) of the swing set may result in serious injury or death. The swing set must be securely anchored before use.

## WARNING!

The owner should disassemble and dispose of the playground equipment in such a way that no unreasonable hazards will exist at the time the playground equipment is discarded.

**Proper Play Conditions:**

- Always use the product in a well-lit area. Do not use without lighting during dawn, dusk or in complete darkness!
- Maintain clear space on all sides of the product. Such objects include walls, fences, tree limbs/trunks, electrical power wiring, rocks, sprinkler heads or other recreational objects (i.e. swing sets, swimming pools).
- The product must not be used in windy conditions as wind can cause unexpected movement of the product.

## CONTACT US

Thank you for purchasing from Kmart.

Please contact our customer service centre

JCA Collective

Email: [service@jcacollective.com](mailto:service@jcacollective.com)

Phone Number: +61 423 259 751

Office Hours: Monday to Friday 9am to 5pm

## **SAFETY NOTES:**

- Adult assembly required.
- Adult supervision required when product in use.
- For domestic outdoor use
- Children must understand how to use the product safely.
- DO NOT allow children to play around product when in use
- DO NOT allow more than 1 child to use this product at a time.
- Do not use the mat when it is wet.
- Limit the time of continuous usage (make regular stops).

## **MAINTENANCE INSTRUCTIONS:**

- Checking fixings regularly. Injury may be a result if you fail to do so .
- Checking the nuts and bolts on a regular basis for tightness, sharp edges or deterioration.  
Tighten or replace when required.
- Check paintwork regularly and if needed touch up with enamel
- Check that all spring-loaded (pit pin) joints are still intact and cannot become dislodged during playing
- Check that mat, padding and enclosure without defects
- Check all nuts and bolts for tightness and tighten when required.
- Oil all metallic moving parts.
- Check all coverings and bolts for sharp edges and replace when required.
- Check swing seats, chains, ropes and other means of attachment for evidence of deterioration; replace when required in accordance with the manufacturer's instructions.
- Sand rusted areas and tubular members and repaint using a non-lead based paint when required.
- Retain the instructions for assembly, maintenance and safe use for future reference.

# Specifications

This swing set is designed for use by children ages 3-8 years old with a maximum weight of 45kg for each section.

The maximum fall height of this swing set is 74" (1.88m).

This product is designed for normal residential use only. This product is not designed for use in day care, nurseries, or other public places. This product is to be assembled by adults only in the manner described within this instruction manual.

This product must be anchored. Anchors are included with this swing set.

## Anchoring

Anchoring is necessary to prevent tipping, lifting, and overturning. We recommend anchoring the swing set in concrete, especially in soft or sandy soil.

To anchor the swing set in concrete, dig a hole at least 5" (12.7cm) deep and 10" (25.4cm) to 12" (30.5cm) in diameter. Place the swing set leg in the hole, preferably on a brick or stone to keep it from sinking. Be sure the swing leg is set 3" (7.6cm) below the ground. Pour concrete around the legs and fill the hole. Cover concrete adequately using the recommended surfacing instruction in this manual. Allow the concrete to cure according to the concrete manufacturer's instruction before use.

## Assembly

Only adults should assemble or disassemble the swing set. For safety reasons and ease of assembly it is recommended that two adults assemble the swing set. The swing set includes two 5mm Socket head wrenches. You will also need an adjustable wrench, a Cross head screwdriver and a needle-nose pliers.

Points to remember when locating and placing the swing set:


- Place your swing set on level ground a MINIMUM of six (6) feet (1.83m) from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.
- Do not install home playground equipment over concrete, asphalt, packed earth, grass, carpet, or any other hard surface. A fall on to a hard surface can result in serious injury to the equipment user.
- Do not place your swing set underneath electrical lines. If you must, ensure that there is a minimum overhead clearance of six (6) feet (1.83m).
- The swing set should be assembled near the location it will be permanently anchored.









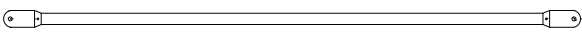


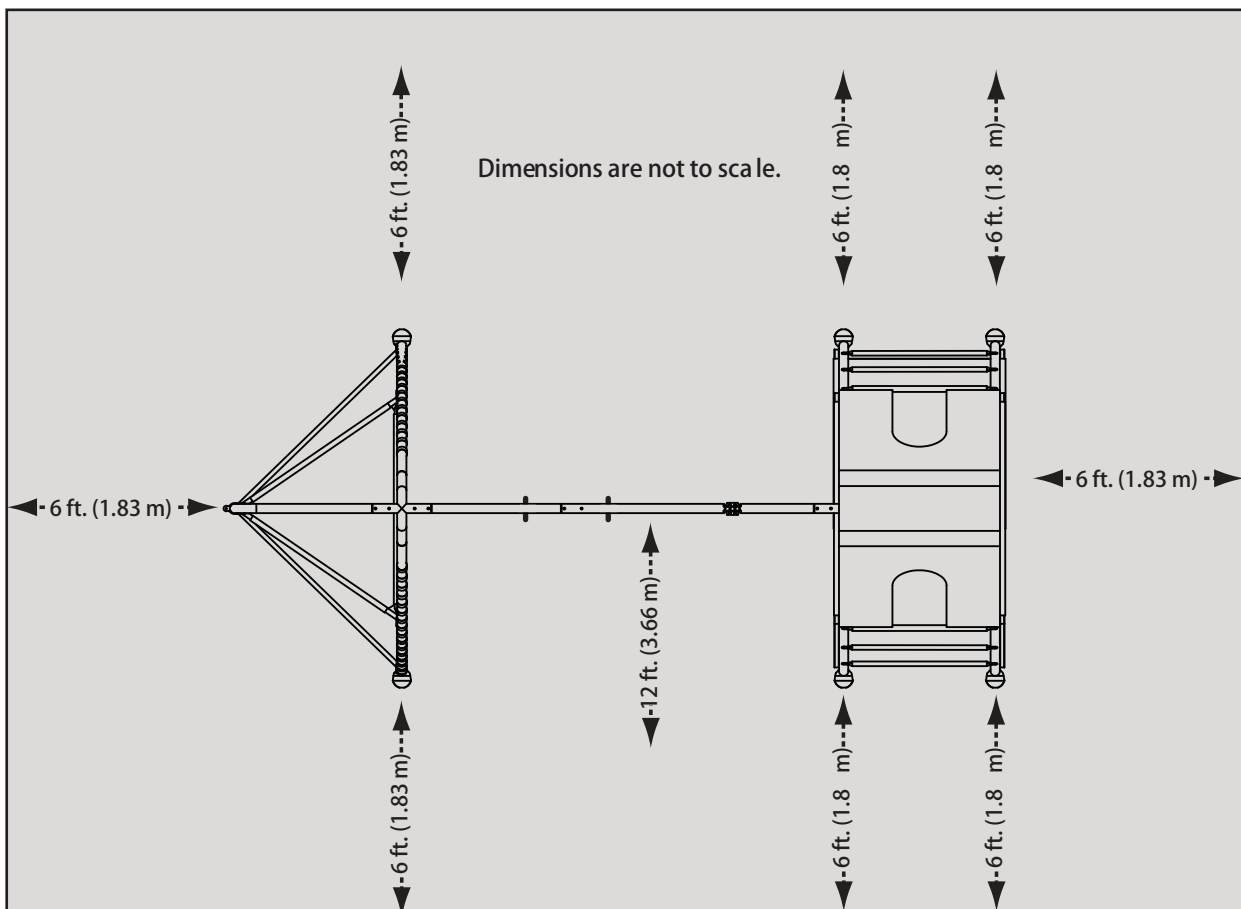



# Location and Placement of Your Swing Set

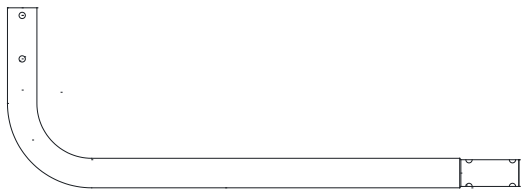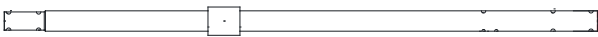Proper placement and maintenance of protective surfacing is essential.






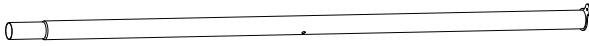
Be sure to:







- Extend surfacing at least 6 feet (1.83m) from the equipment in all directions. Swing set must be placed a minimum of 6 feet (1.83m) from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.
- Do not place your swing set underneath electrical lines. If you must, ensure that there is a minimum overhead clearance of 6 feet (1.83m).
- Do not install swing set over concrete, asphalt, packed earth, grass, carpet, or any other hard surface. A fall on to a hard surface can result in serious injury to the equipment user.
- For safe playing swings, extend protective surfacing 12 feet (3.66m) in front of and behind the point of suspension of the swing.
- The following diagram shows how much obstacle-free surfacing should be used for the swing set. The shaded portion is where the protective surfacing must be placed.





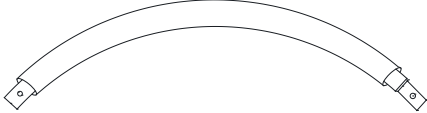
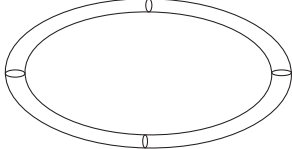


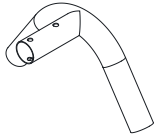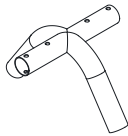


NO.	Picture	Description	Qty
A1		Top Bar A	1PC
A2		Top Bar B	1PC
A3		Top Bar C	1PC
A4		Top Bar D	1PC
A5		Leg A	1PC
A6		Leg B	2PCS
A7		Leg C	4PCS
A8		Support Bar A	2PCS
A9		Support Bar B	1PCS
A10		Support Bar C	2PCS
A11		Climbing tube	6PCS
A12		Rectangular tube A	2PCS
A13		Rectangular tube B	2PCS
A14		Connection tube(three-way)	1PCS
A15		Connection tube(four-way)	2PCS

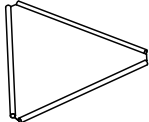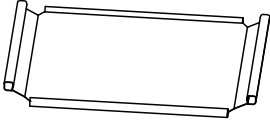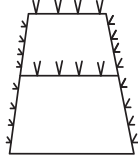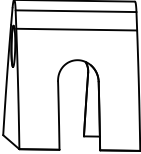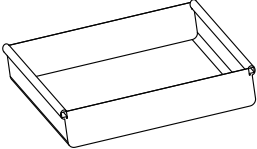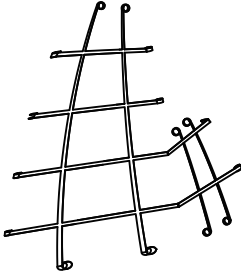


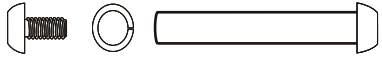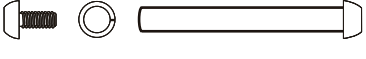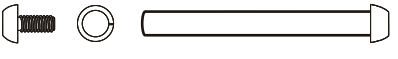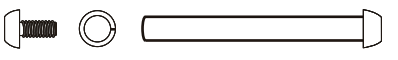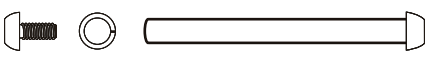NO.	Picture	Description	Qty
A16		Platform fabric	1PC
A17		Rectangular Platform fabric	1PC
A18		Protect Net	1PC
A19		Tent fabric	1PC
A20		Sandpit fabric	1PC
A21		Climbing webbing	1PC

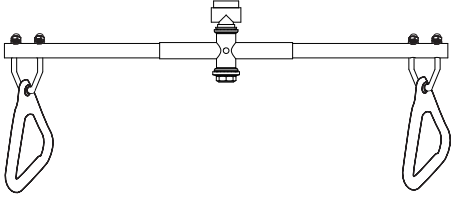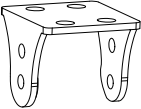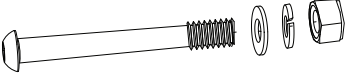
NO.	Picture	Description	Qty
a1		M10*50 (pre-assembled)	14st
a2		M8*50 (pre-assembled)	18st
a3		M8*56 (pre-assembled)	4st
a4		M8*52 (pre-assembled)	2st
a5		M8*70	8st
a6		Anchor	7pcs

NO.	Picture	Description	Qty
B1		Spin parts	1ST
B2		Connect steel plate	1PC
b1		M8*75	1st
b2		M10*30 (2PC) U screw	2st
C1		Nest swing Top rail	4PCS
C2		Nest swing set	1PC
C3		Nest swing rope	2ST
c1		M10*30 (2PC) U screw (pre-assembled)	2st
c2		Nut with washer (pre-assembled)	4st


# Platform, Climbing Ladder and Sandpit Assembly Part

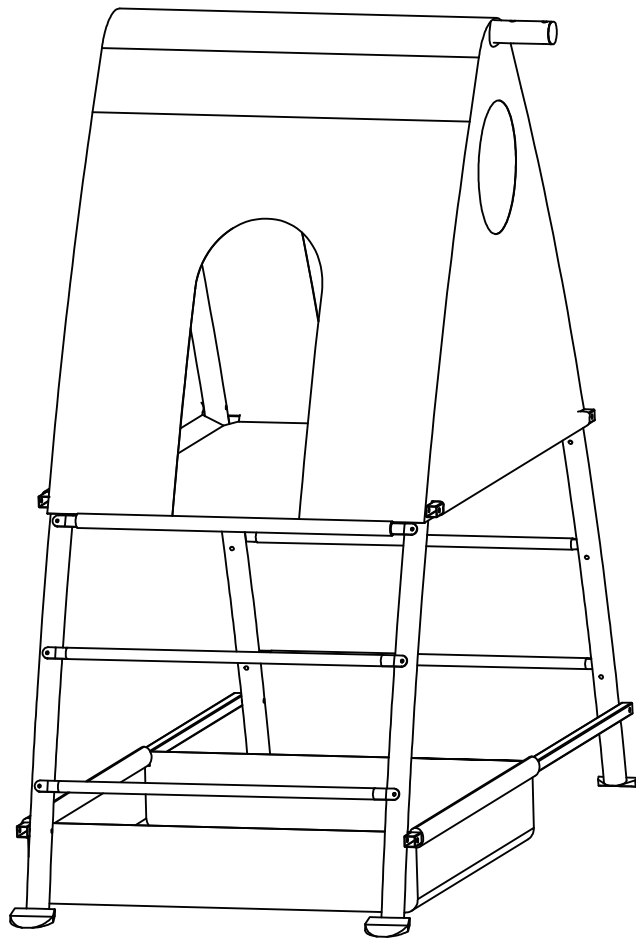


1. Connect the Top Bar D (A4) with the Connection tube (three-way) A14, and connect the other end with the Connection tube (four-way) A15, tighten them with the screw a1 (M10\*50)

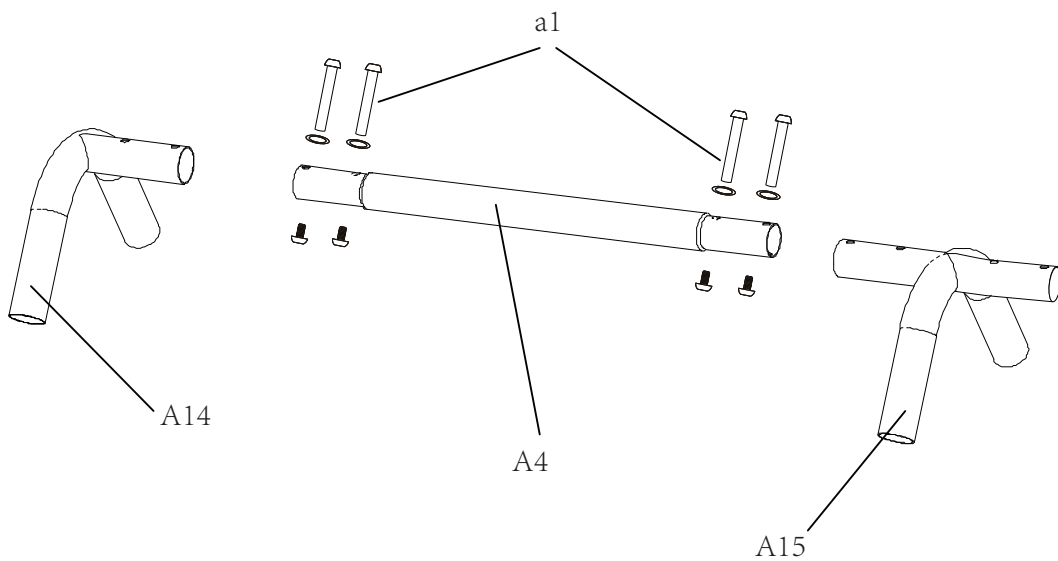


2. Connect 4pcs Leg C(A7) with Connection tube (three-way)A14 and Connection tube(four-way)A15, tighten them with screw a2(M8\*50).

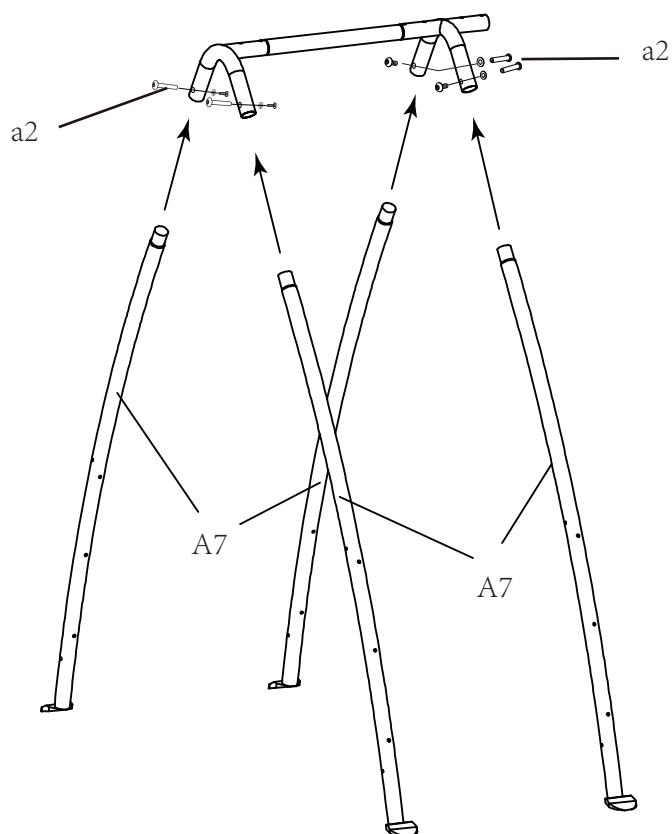


3. Put the Rectangular A(A12) go through the two longer tunnels of the Rectangular Platform fabric(A17),and connect with Leg C(A7) by tightening screw a5(M8\*70).

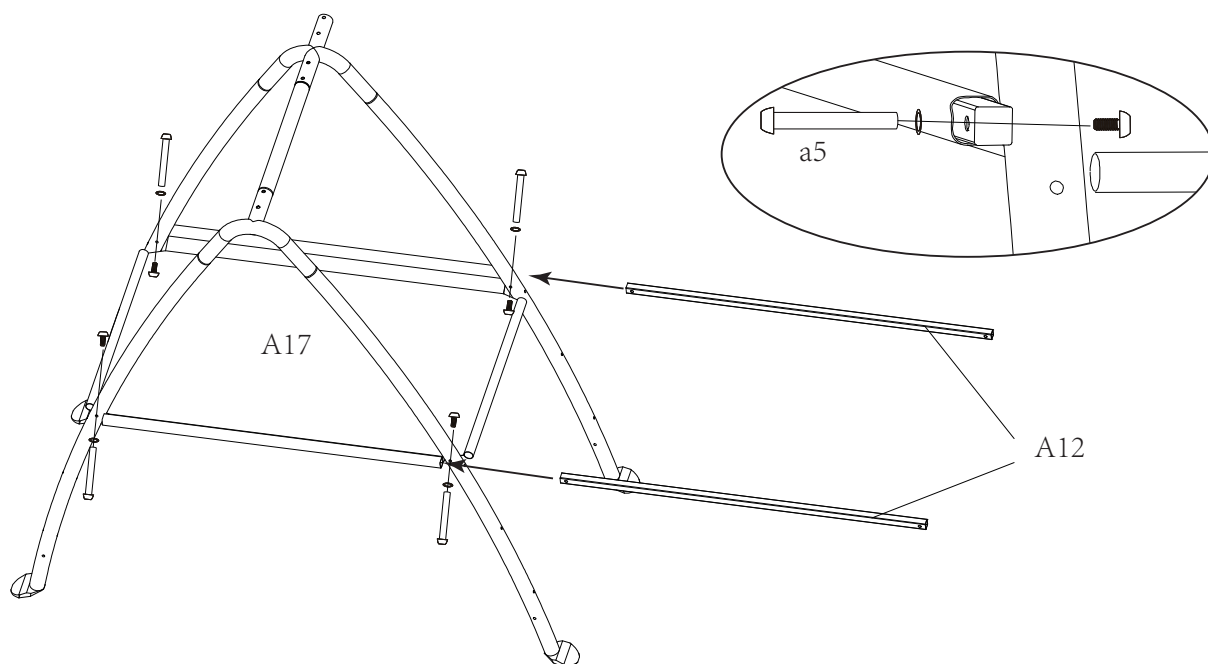



4. Connect the 6pcs climbing tube(A11) with Leg C(A7), two of the climbing tube (A11) need to go through the Rectangular Platform fabric (A17), tighten them with screw a2(M8\*50) as below picture show.

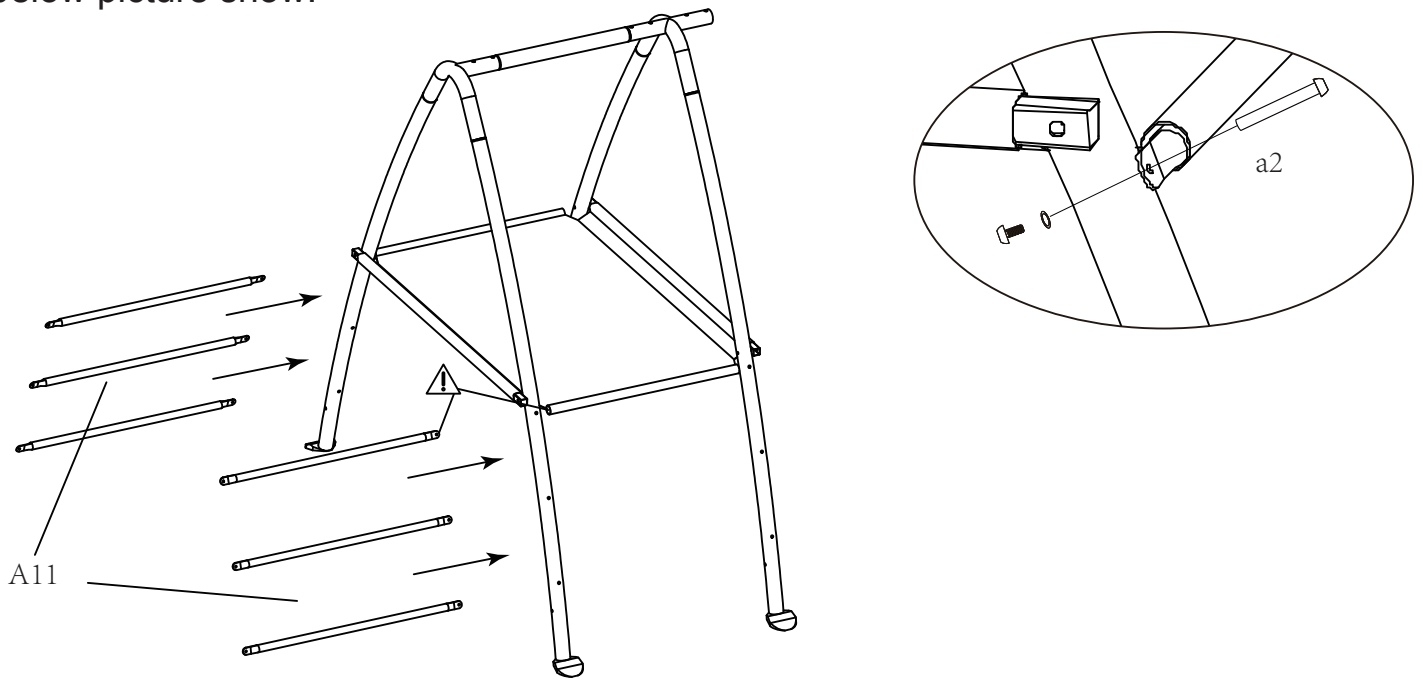


5. Put the Sandpit fabric(A20) at the bottom, two Rectangular tube B(A13) go through the Sandpit fabric (A20) from the two sides as below show, and use the screw a5(M8\*70) to tighten them.

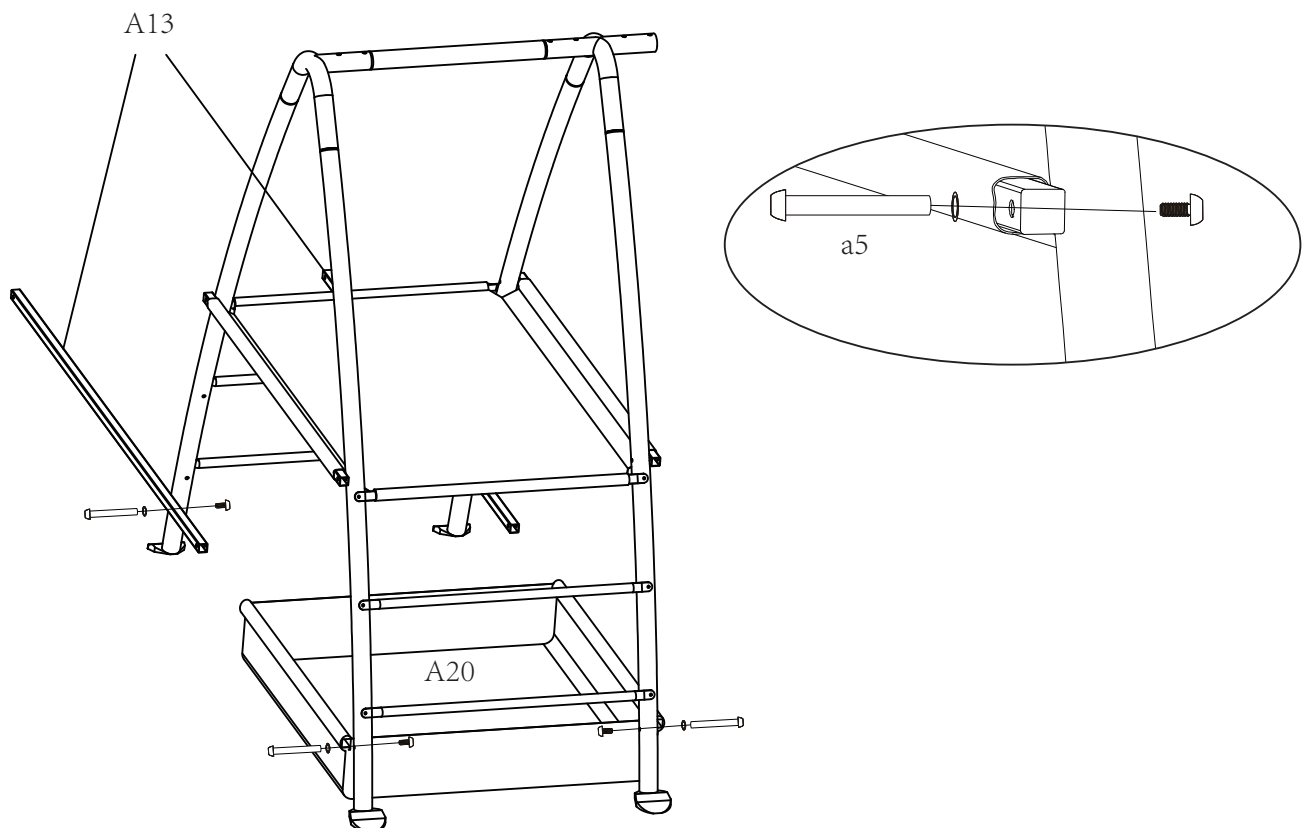


6. Open the Tent fabric(A19),the finished part go through the tunnel of it, then tighten the touch fastener one by one as below picture show.

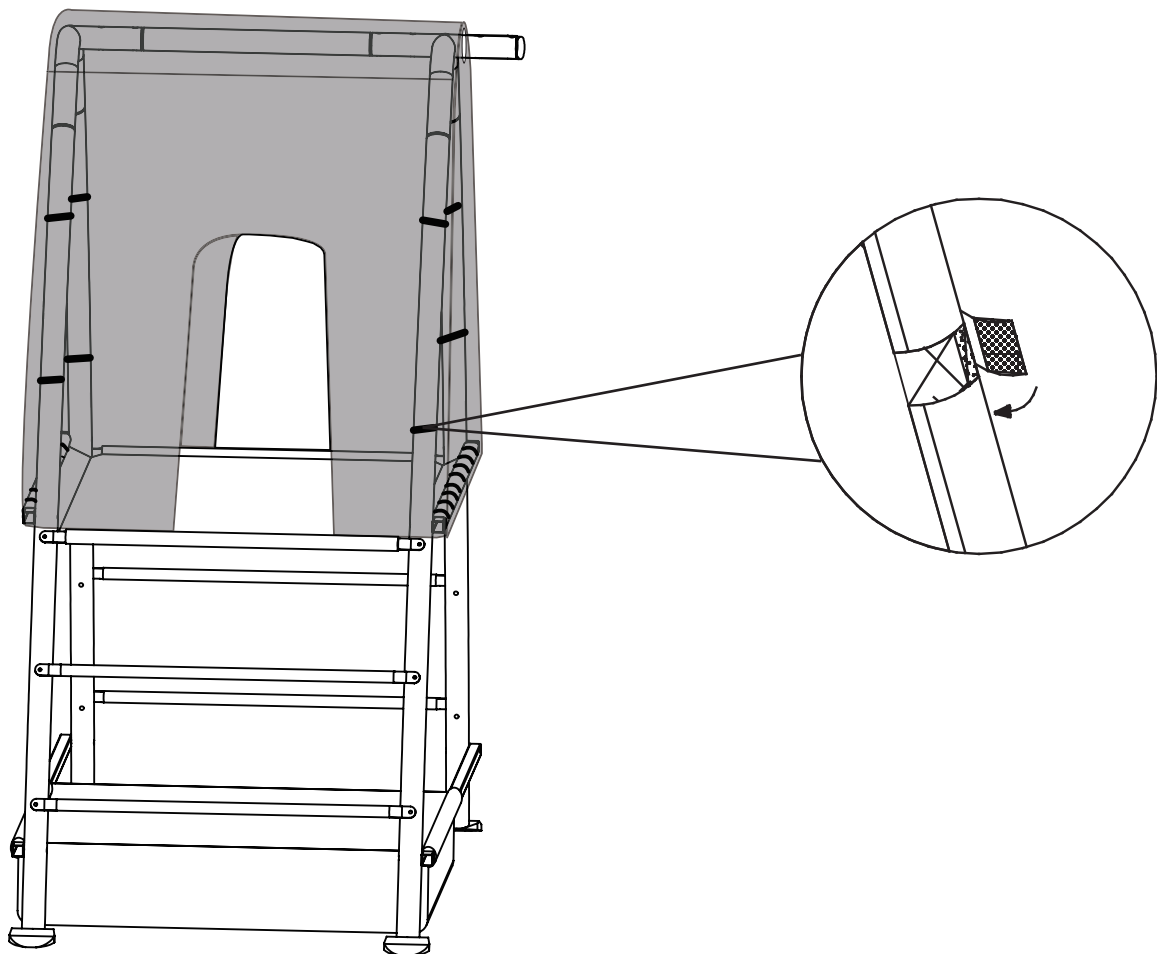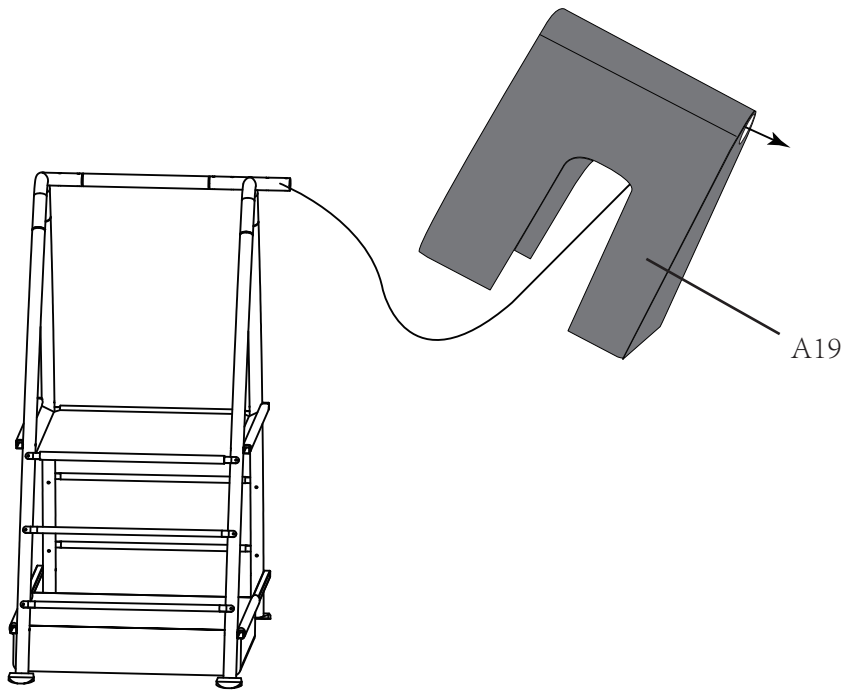

# Climbing webbing assembly part

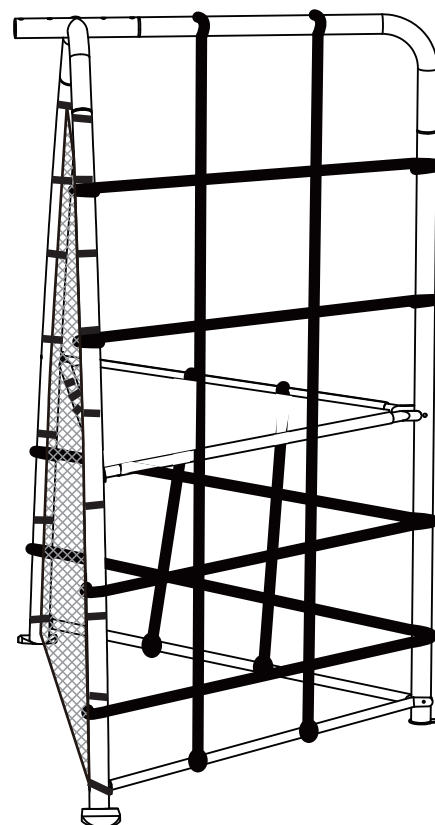


1. Put the Top Bar A(A1) go through the top hole of the Climbing webbing(A 21), then connect the Top bar A(A1) with the Connection tube(four-way)A15 by tightening the screw a1(M10\*50) as below picture show.

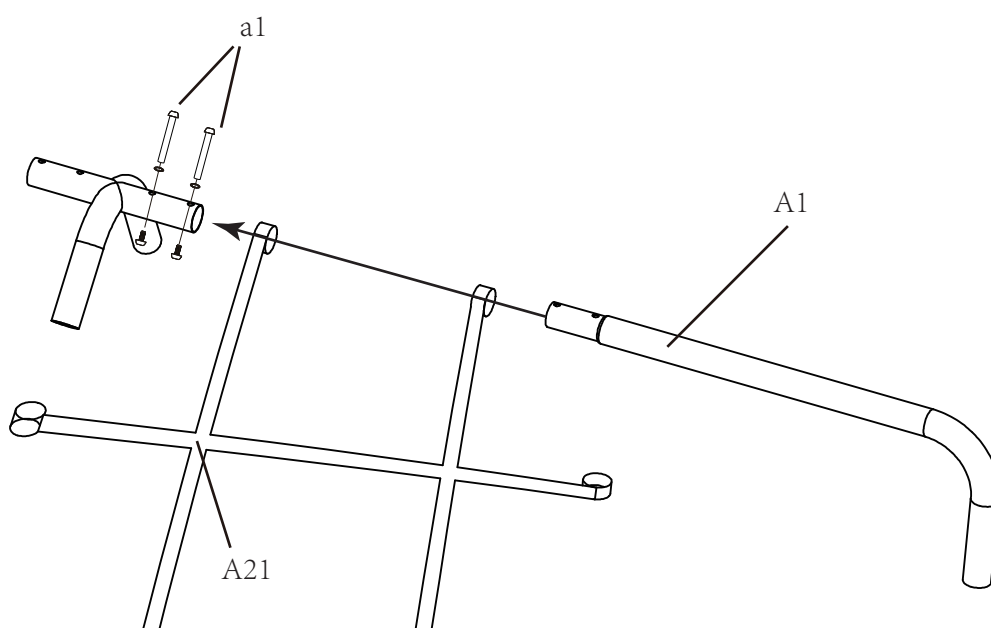





2. Put the Leg A(A5) go through the shorter end of the Climbing webbing(A21), then connect with the Top Bar A(A1) by tightening the screw a1(M10\*50) as below show.

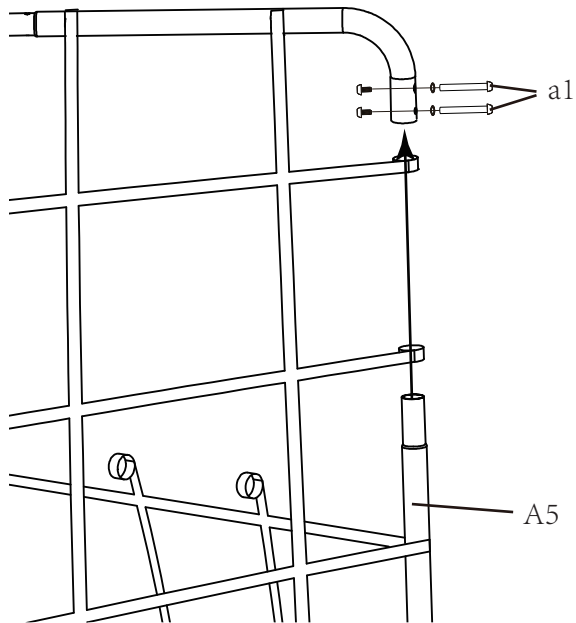


3. Put one of the Leg B(A6) go through the 4 holes of the Climbing webbing(A21) top end, the other one go through the 2 holes of the Climbing webbing(A21) low end, then connect these two Leg B(A6) with the Connection tube(four-way)A15 by tightening the screw a2(M8\*50) as below picture show.

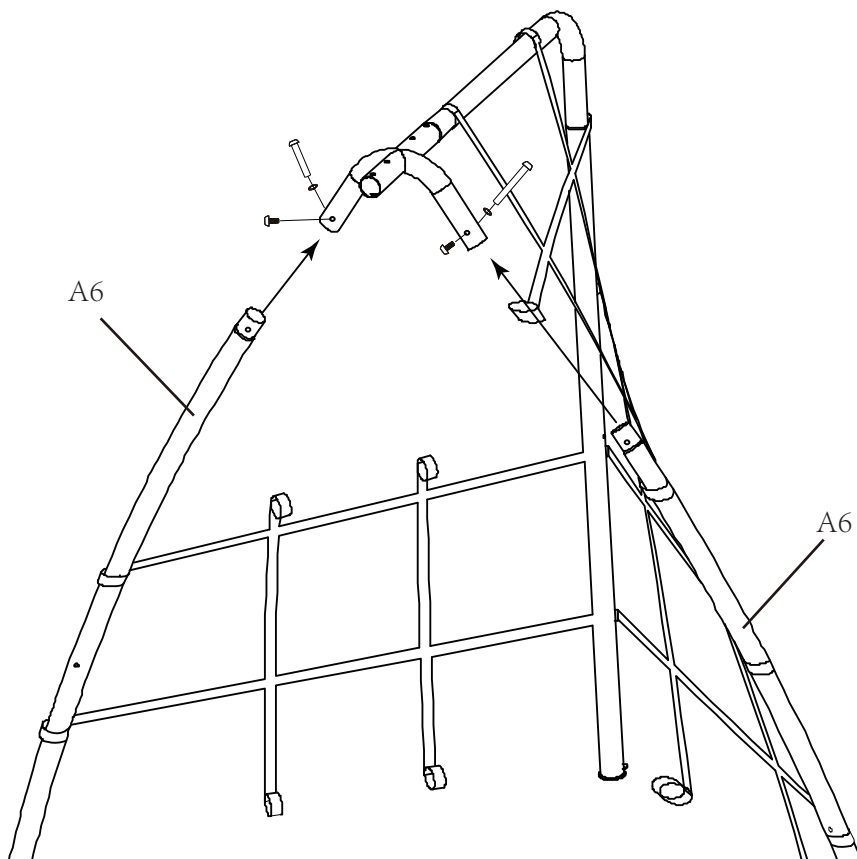


4. Put 2 Support Bar A(A8) go through the Platform fabric(A16), at the same time, one of the Support Bar A(A8) need to go through the two holes of the low section Climbing webbing(A21), the Support Bar B(A9) need to go through the other side of the Platform fabric(A16) as below picture show.

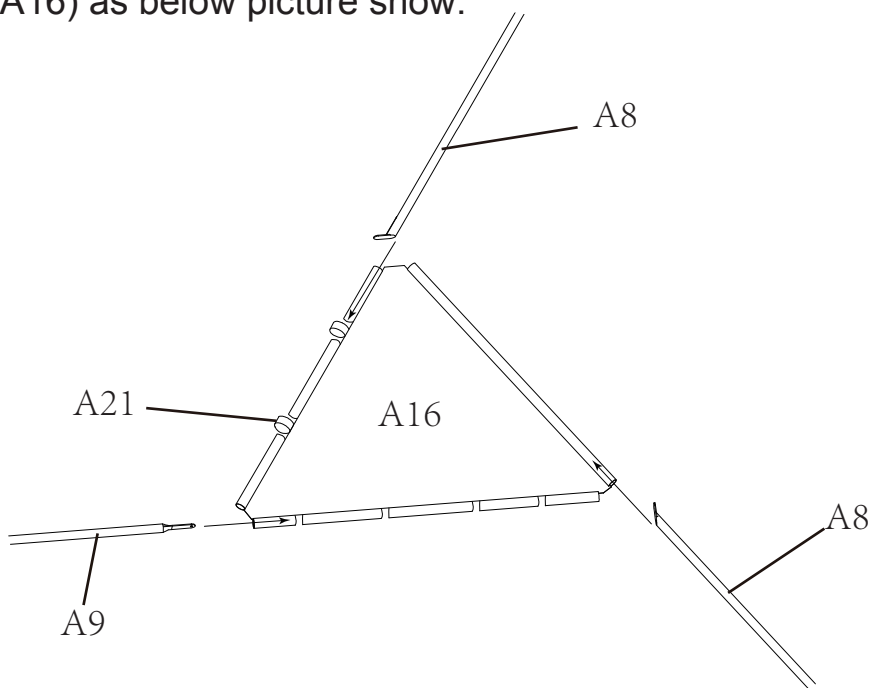


5. Connect the Platform fabric(A16) with the Leg A(A5) and Leg B(A6) by tightening screw a3(M8\*56)

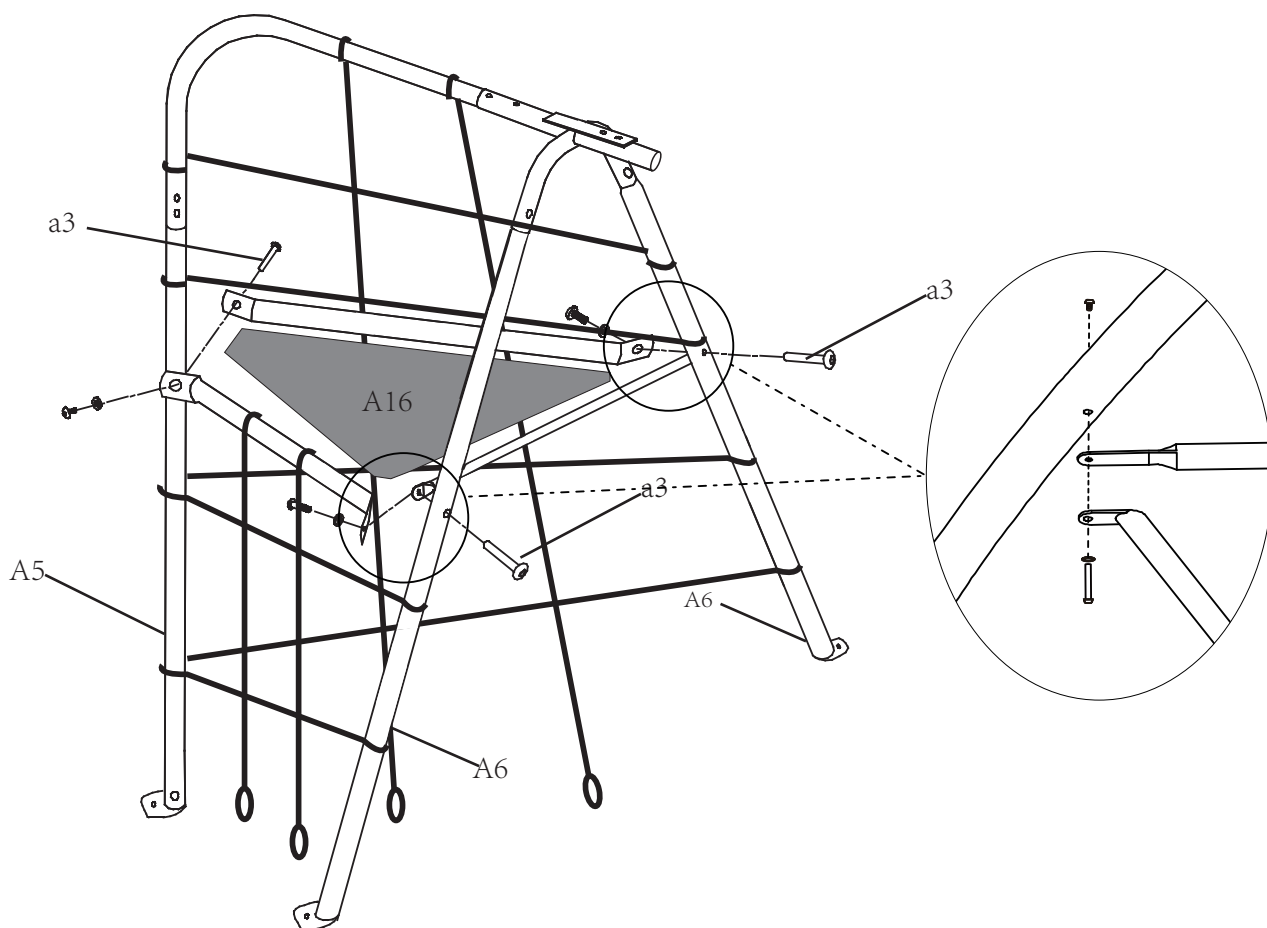

6. Connect the 2 pcs Support Bar C(A10) with the Climbing webbing(A21) by going through the two holes as below show, and connect with Support Bar B(A6) by tightening screw a4(M8\*52), connect with Support Bar A by tightening screw a3 (M8\*56).

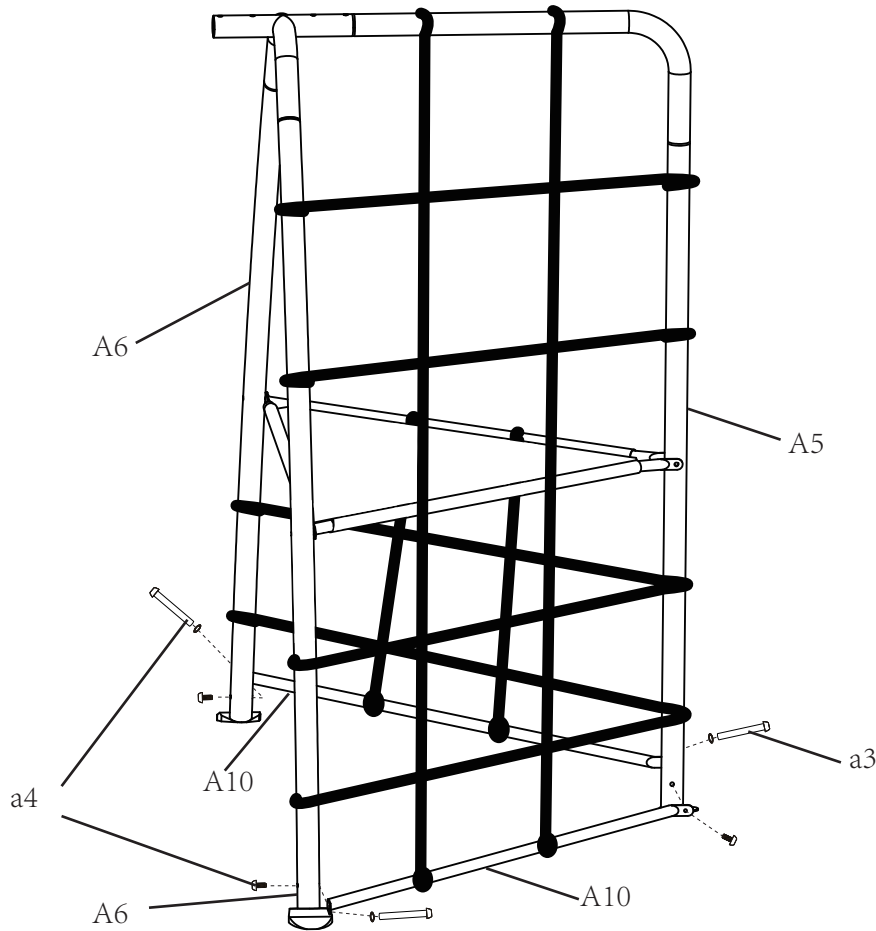


7. Connect the Protect Net(A18) with Support Bar B(A9) by the touch fasteners, at the same time. Also connect the Protect Net(A18) with the Support Bar B(A9) by touch fasteners.

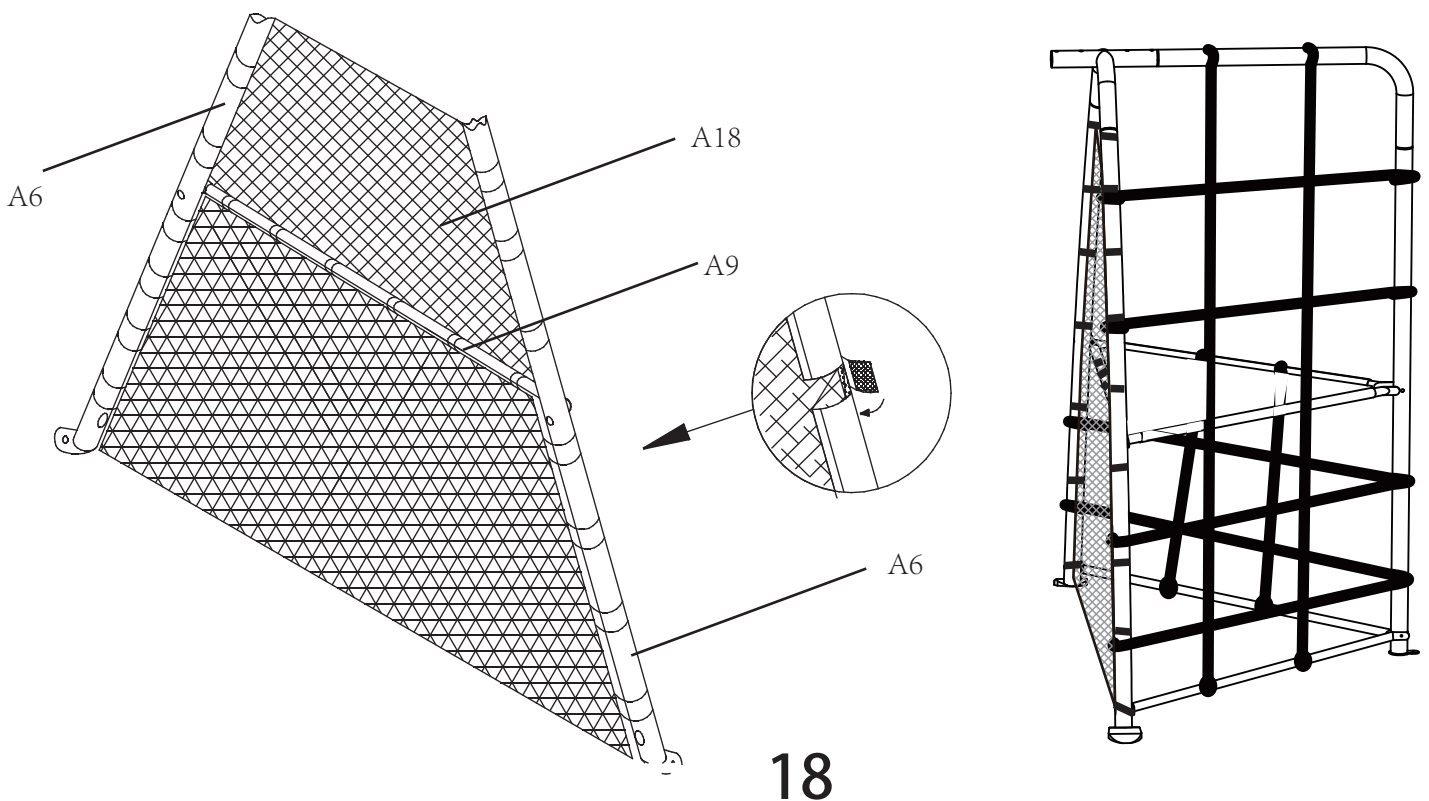


# Spin Parts and Nest swing set assembly parts


1. Take down the bigger Pin from the assembled spin parts(B1).

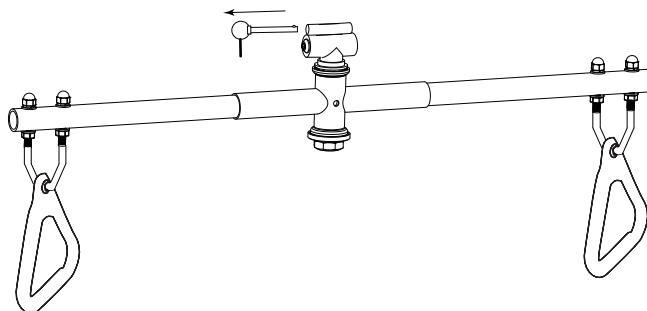

2. Assemble the U screw(b2) on the Top BarB(A2) which has slot, and put the Connect steel plate (B2) under the Top Bar B(A2) accordingly, then connect them together as below shows (Attention! The direction of the Top Bar B, there are 5 holes in the top and 6 holes in the bottom).

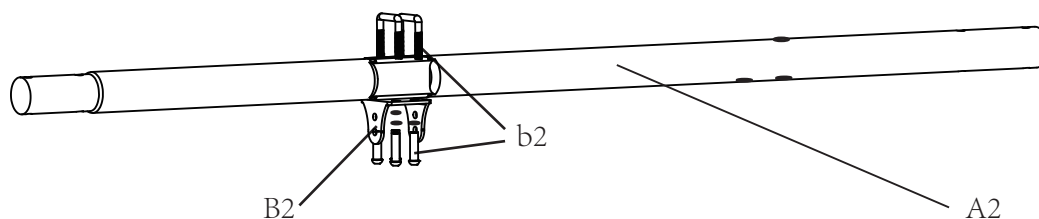



3. Connect the Spin parts(B1) with the Connect steel plate by tightening screw b1(M8\*65), and assemble the bigger pin again as below show.

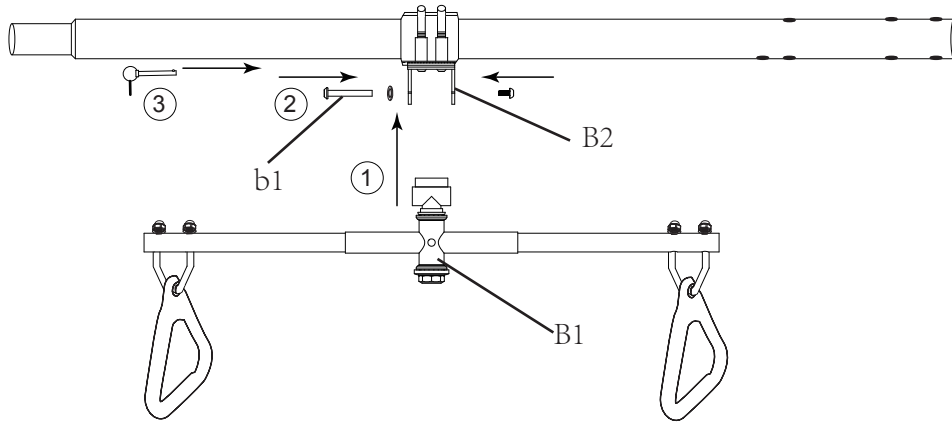


4. Connect the assembled parts by last step with the finished Platform, climbing ladder parts together, connect the Top Bar B(A2) with shrink end together with the Connection tube(four-way)A15 by tightening screw a1(M8\*50), then connect the Top Bar C(A3) with the finished Climbing webbing parts together by tightening the screw a1(M8\*50), then all the Top bar will be finished connecting as below show.

**Attention! Pay attention to direction of the Top Bar C(A3), the end of the through-hole next to the Spin parts.**

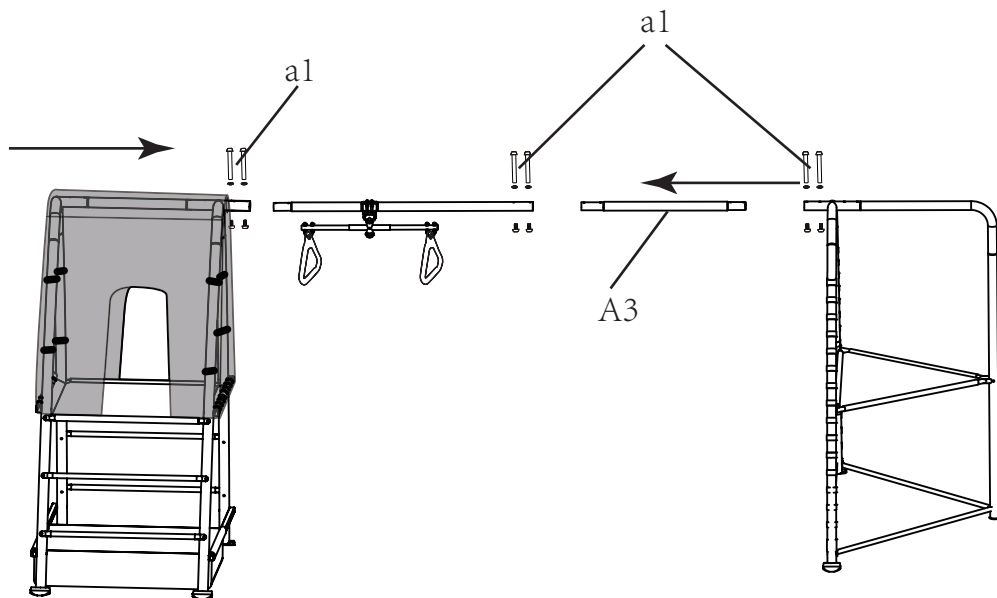


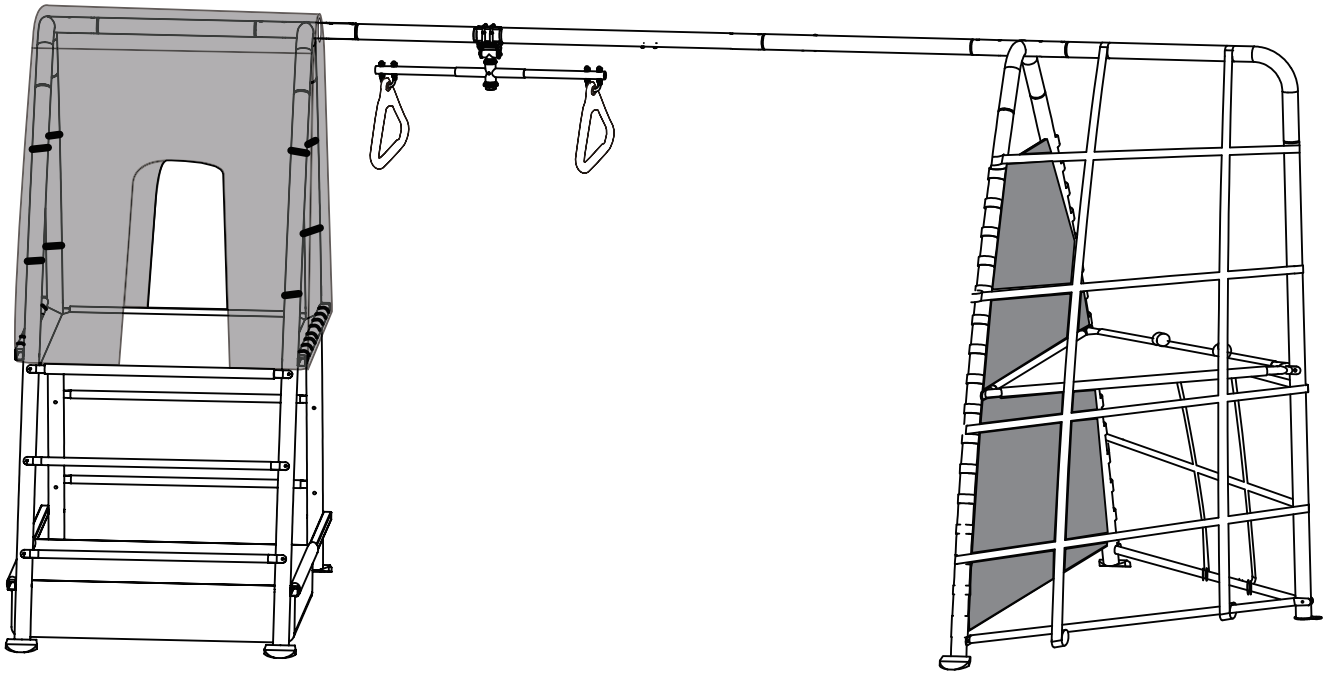


6. Put the Nest swing Top tail (C1) go through the tunnel of the Nest swing set(C2) as below show

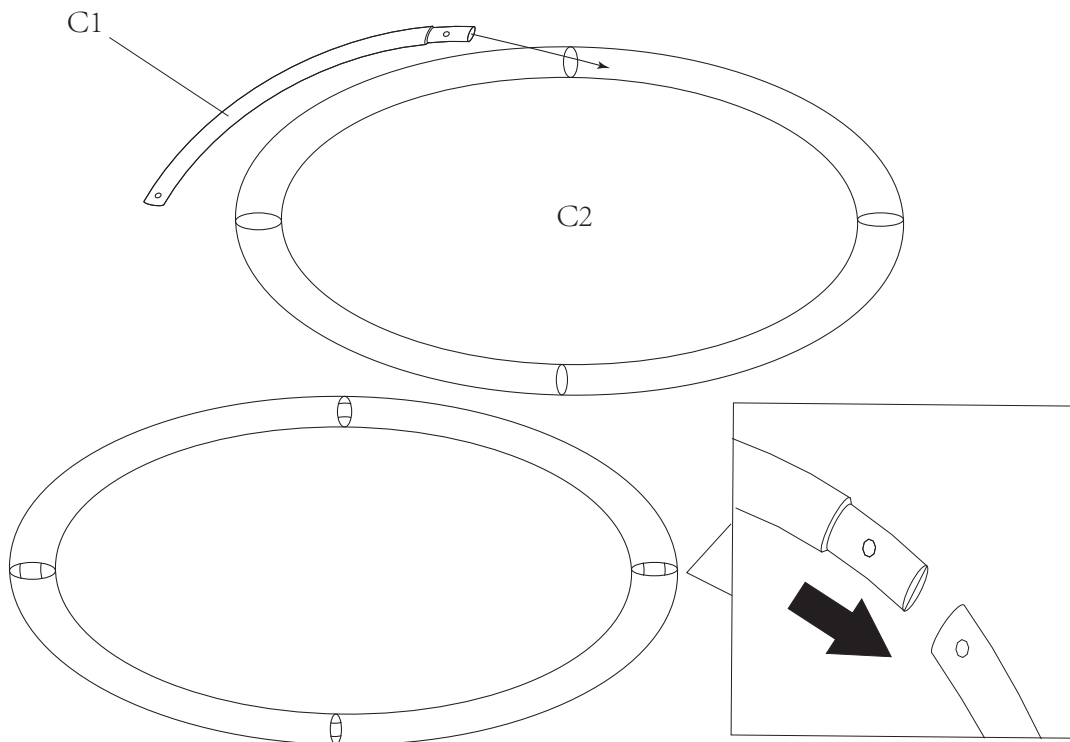

8. Assemble the Nest swing Top rail(C1) by tightening the screw on the Nest swing rope(C3) and the Nut with washer(C2).

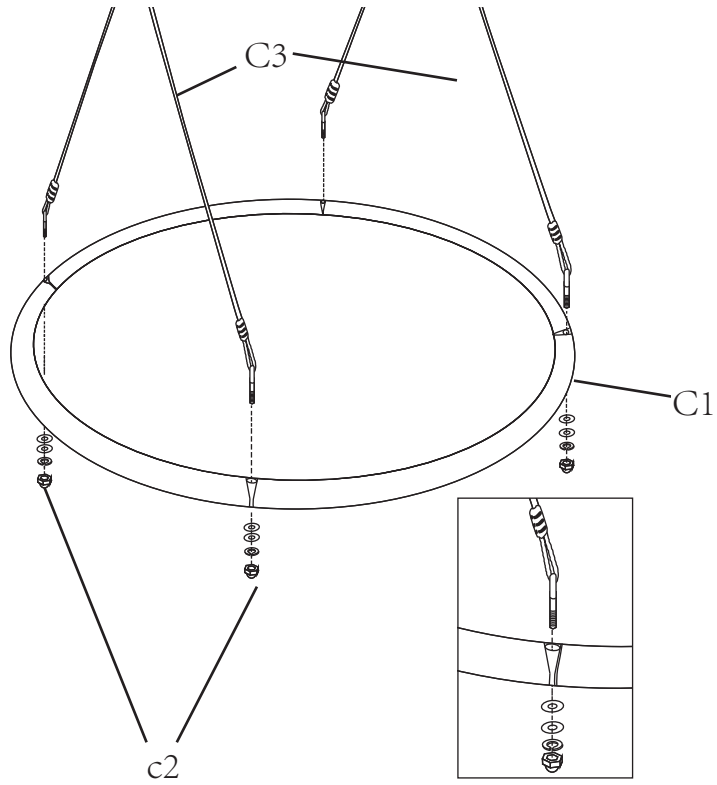


9. Assemble the finished Nest swing set on the Top Bar by tightening the U screw(M10\*30)c1

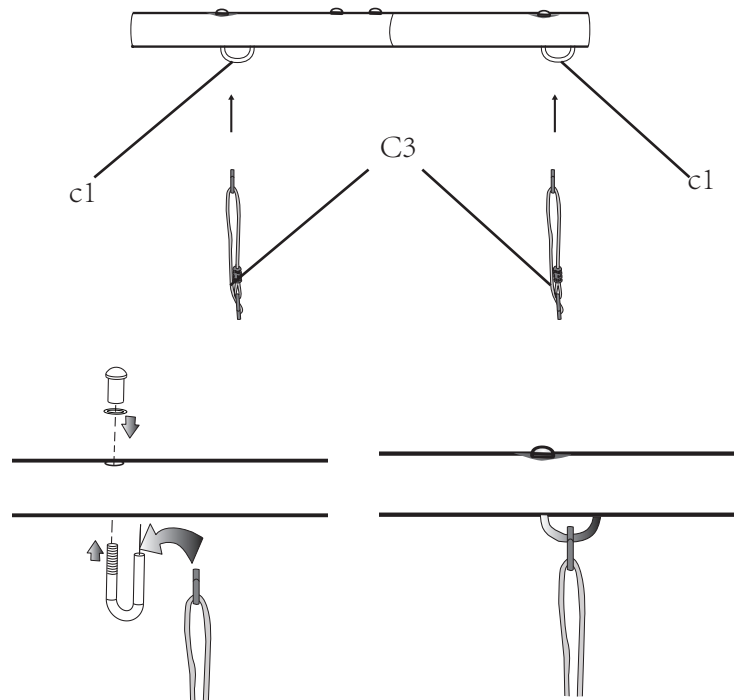

# Anchor Assembly part

Connect the anchor (a6) through the hole on the Leg and insert it into the ground as below picture show.



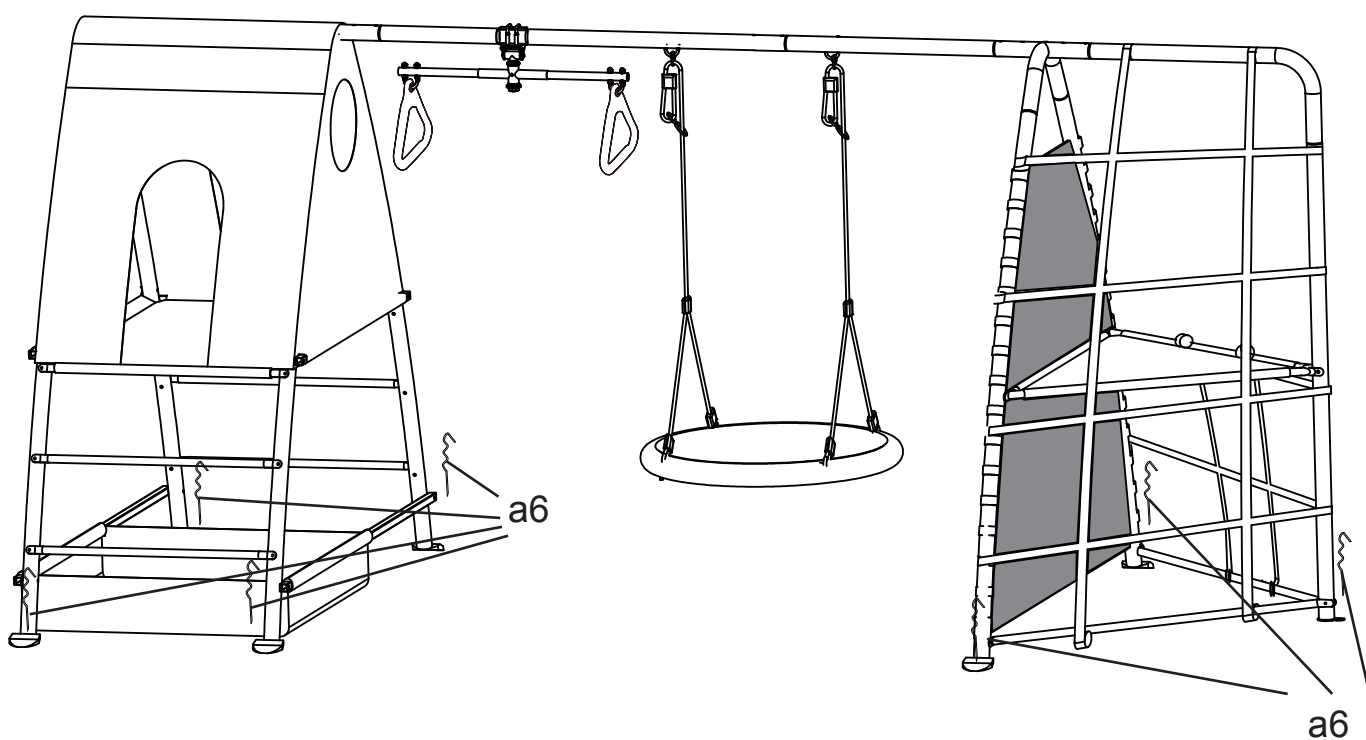




# Spin Part Instructions

1. Take down the bigger Pin (Spin part can swing back and forth)
2. Take down the smaller Pin (Spin part can swing 360 degrees)

**ATTENTION! CAN NOT TAKE DOWN THESE TWO PINS AT THE SAME TIME!**

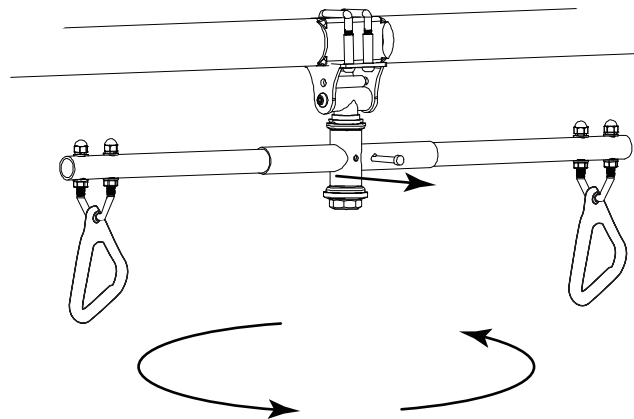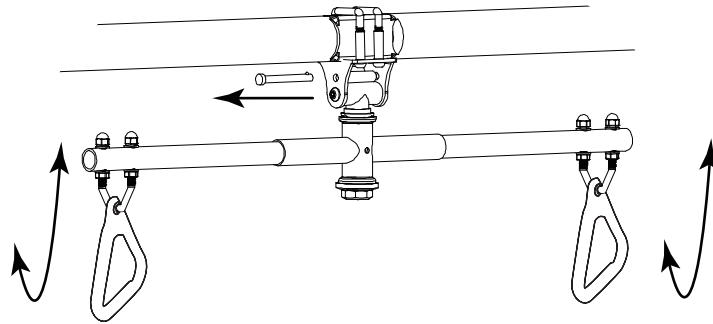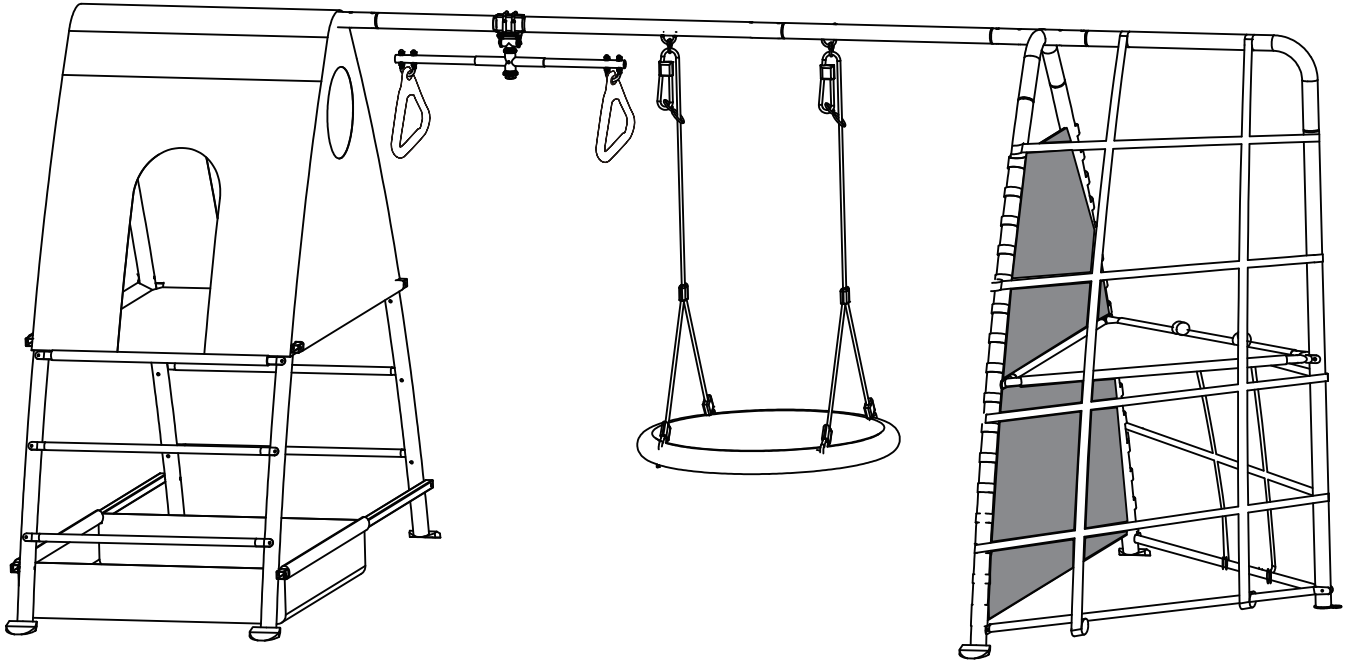

# Information on Playground Surfacing Materials

## Select Protective Surfacing

One of the most important things you can do to reduce the likelihood of serious head injuries is to install shock-absorbing protective surfacing under and around your play equipment. The protective surfacing should be applied to a depth that is suitable for the equipment height in accordance with ASTM Specification F1292. There are different types of surfacing to choose from; whichever product you select, follow these guidelines:

### Loose-Fill Materials:

Maintain a minimum depth of 9 inches of loose-fill materials such as wood mulch/chips, engineered wood fibre (EWF), or shredded/recycled rubber mulch for equipment up to 8 feet high; and 9 inches of sand or pea gravel for equipment up to 5 feet high. NOTE: An initial fill level of 12 inches will compress to about a 9-inch depth of surfacing over time. The surfacing will also compact, displace, and settle, and should be periodically refilled to maintain at least a 9-inch depth.

Use a minimum of 6 inches of protective surfacing for play equipment less than 4 feet in height. If maintained properly, this should be adequate. (At depths less than 6 inches, the protective material is too easily displaced or compacted.)

NOTE: Do not install home playground equipment over concrete, asphalt, or any other hard surface. A fall onto a hard surface can result in serious injury to the equipment user. Grass and dirt are not considered protective surfacing because wear and environmental factors can reduce their shock absorbing effectiveness. Carpeting and thin mats are generally not adequate protective surfacing. Ground level equipment – such as a sandbox, activity wall, playhouse or other equipment that has no elevated play surface – does not need any protective surfacing.

Use containment, such as digging out around the perimeter and/or lining the perimeter with landscape edging. Don't forget to account for water drainage.

Check and maintain the depth of the loose-fill surfacing material. To maintain the right amount of loose-fill materials, mark the correct level on play equipment support posts. That way you can easily see when to replenish and/or redistribute the surfacing. Do not install loose fill surfacing over hard surfaces such as concrete or asphalt.

### Poured-In-Place Surfaces or Pre-Manufactured

Rubber Tiles—You may be interested in using surfacing other than loose-fill materials – like rubber tiles or poured-in-place surfaces.

Installations of these surfaces generally require a professional and are not “do-it-yourself” projects.

Review surface specifications before purchasing this type of surfacing. Ask the installer/manufacture for a report showing that the product has been tested to the following safety standard: ASTM F1292 Standard Specification for Impact Attenuation of Surfacing Materials within the Use Zone of Playground Equipment. This report should show the specific height for which the surface is intended to protect against serious head injury. This height should be equal to or greater than the fall height – vertical distance between a designated play surface (elevated surface for standing, sitting, or climbing) and the protective surfacing below – of your play equipment.

Check the protective surfacing frequently for wear.

## **MADE IN CHINA**

### **12 Month Warranty**

**Thank you for your purchase from Kmart.**

**Kmart Australia Ltd** warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

**Kmart** will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on

**JCA Collective**

**Email: [service@jcacollective.com](mailto:service@jcacollective.com)**

**Phone Number: +61 423 259 751**

**Office Hours: Monday to Friday 9am to 5pm**

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

**The date of purchase:**

**The components will deteriorate over time.**