



anko

Cat Scratcher Box Plane

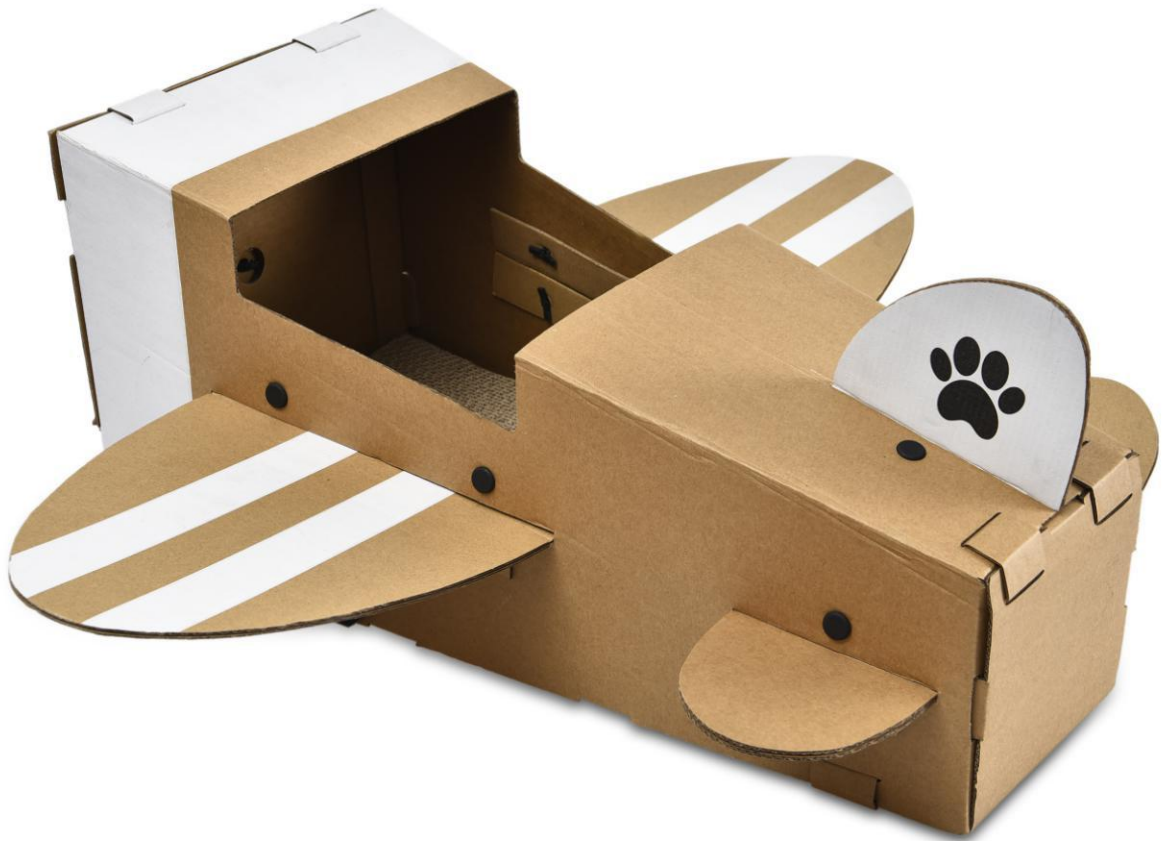

Contents

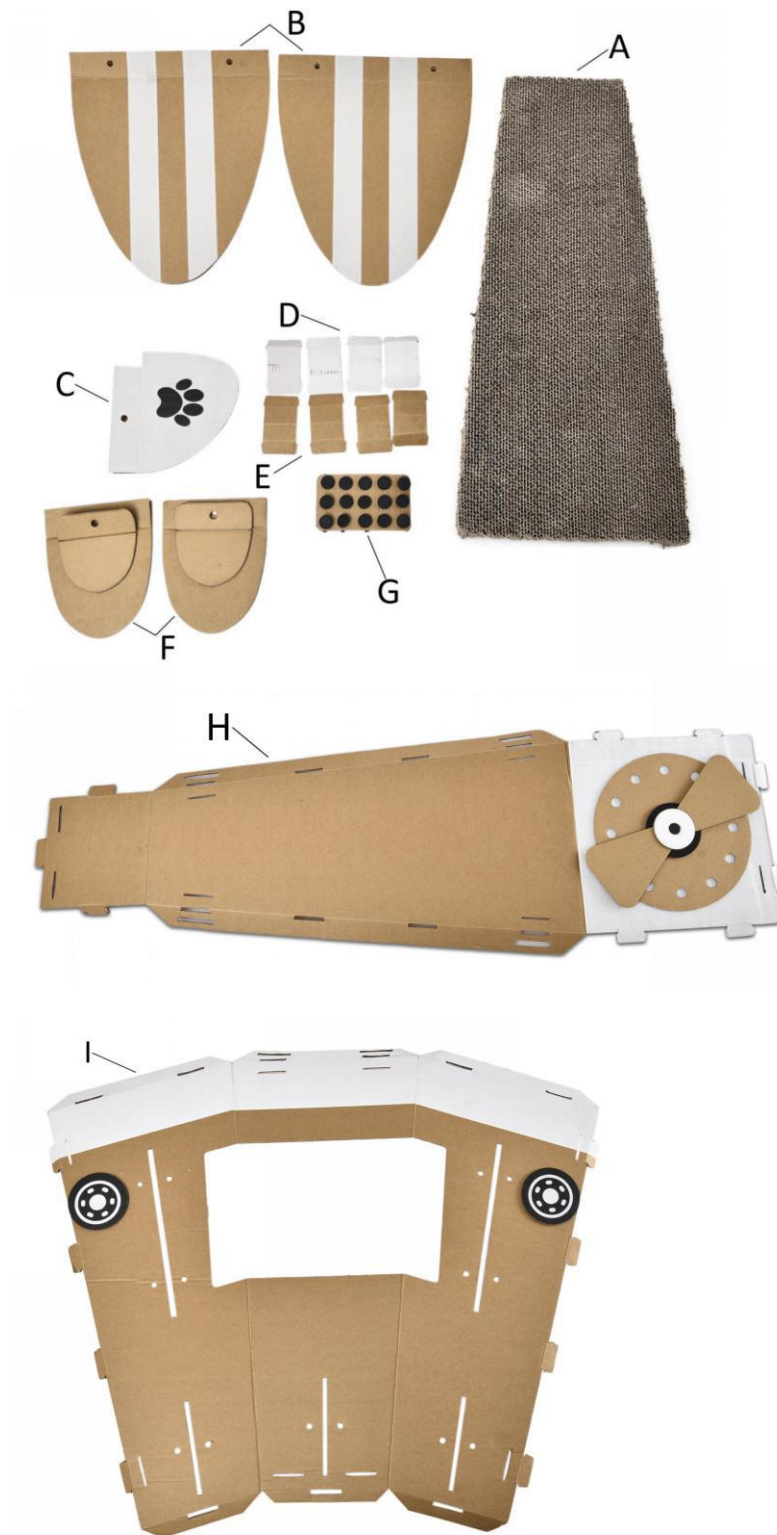

A. Scratcher x 1 pc	B. Long wing x 2pcs	C. Fin x 1pc	D. Connector (white) x 4 pcs	E. Connector (brown) x 4 pcs
F. Short wing x 2 pcs	G. Plastic buckle x 15 pcs	H. Fuselage (bottom) x 1pc	I. Fuselage (top) x 1pc	

Assembly Instructions

Step 1.

Put the scratcher A on the fuselage (bottom) H. Place the fuselage (top) I on fuselage(bottom) H.



Step 2.

Connect fuselage (H & I) with connector (white x 4 pcs & brown x 4pcs) as below images. Please fasten them firmly.



Step 3.

Insert those long wings and short wings into long slots and short slots respectively on both sides of fuselage I. Then, insert the fin C into the slot at the top as the third image below.



Step 4.

Stabilise the wings and fin by using black plastic buckle G as below. Press the plastic buckle firmly until you hear a “click” sound.



WARNING: Pet toy – Not intended for children.

It is the responsibility of the pet owner if this toy is suitable for their pet's style of play.

No pet toy is indestructible and can be damaged during play.

For your pet's safety, inspect regularly and remove if damaged.

Always supervise your pet during play.