

ASSEMBLY INSTRUCTIONS

 

 


 
CARE INSTRUCTIONS:

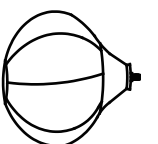
 
 



WIPE CLEAN WITH A SOFT DAMP CLOTH. DO NOT USE SCOURERS, ABRASIVES OR CHEMICAL SOLVENTS TO CLEAN. CHECK AND TIGHTEN ALL PARTS REGULARLY. ENSURE PUNCHBALL STAND IS CLEAN AND 100% DRY BEFORE STORING TO PREVENT MOULD AND MILDEW. STORE IN A DRY PLACE.

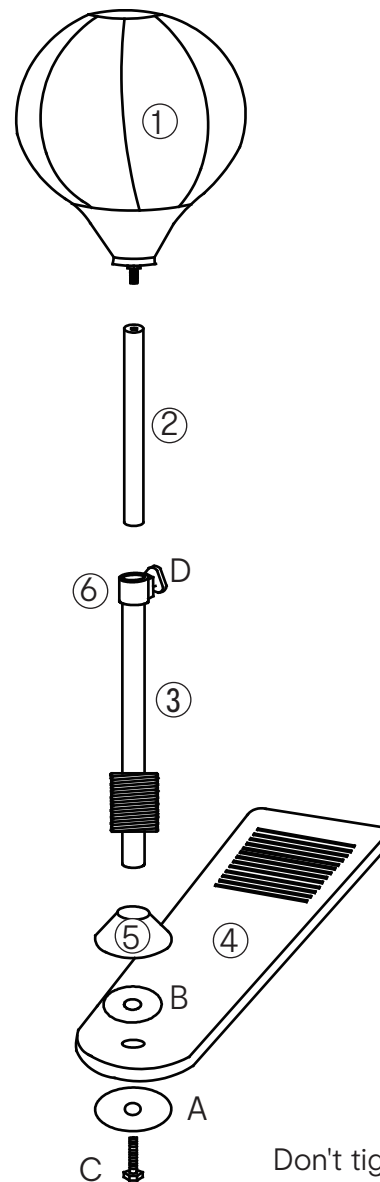
WARNING:

TO BE ASSEMBLED BY ADULT ONLY. STAND ON THE BASE TO FIX THE PRODUCT DURING USE. THIS PACKAGE CONTAINS SMALL PARTS AND SHARP POINTS. KEEP CHILDREN AWAY WHEN ASSEMBLING. DO NOT LET CHILDREN USE THIS PRODUCT UNSUPERVISED. NOT SUITABLE FOR CHILDREN UNDER 3 YEARS. CHECK AND TIGHTEN ALL PARTS REGULARLY.

Spare part

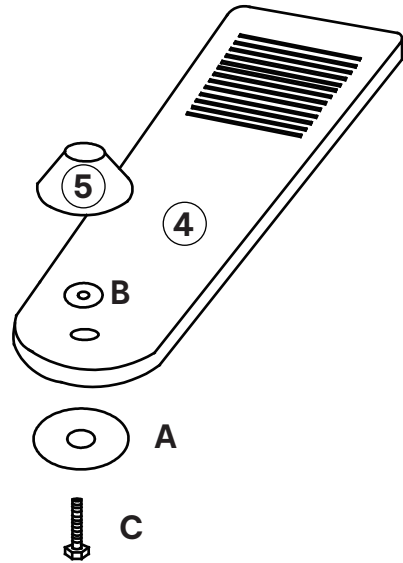
	A	Dia 10/50	1 pc
	B	Dia 15/35	1 pc
	C	M7 x 35mm	1 pc
	D	W24xH20mm	1 pc
	E	Tool	1 pc
	F	Tool	1 pc

					
1	1 pc	2	1 pc	3	1 pc
					
4	1 pc	5	1 pc	6	1 pc

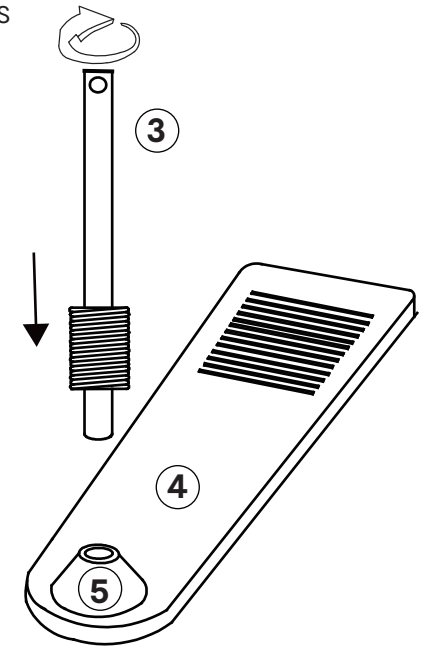


Don't tighten the screws until the assembly is complete.

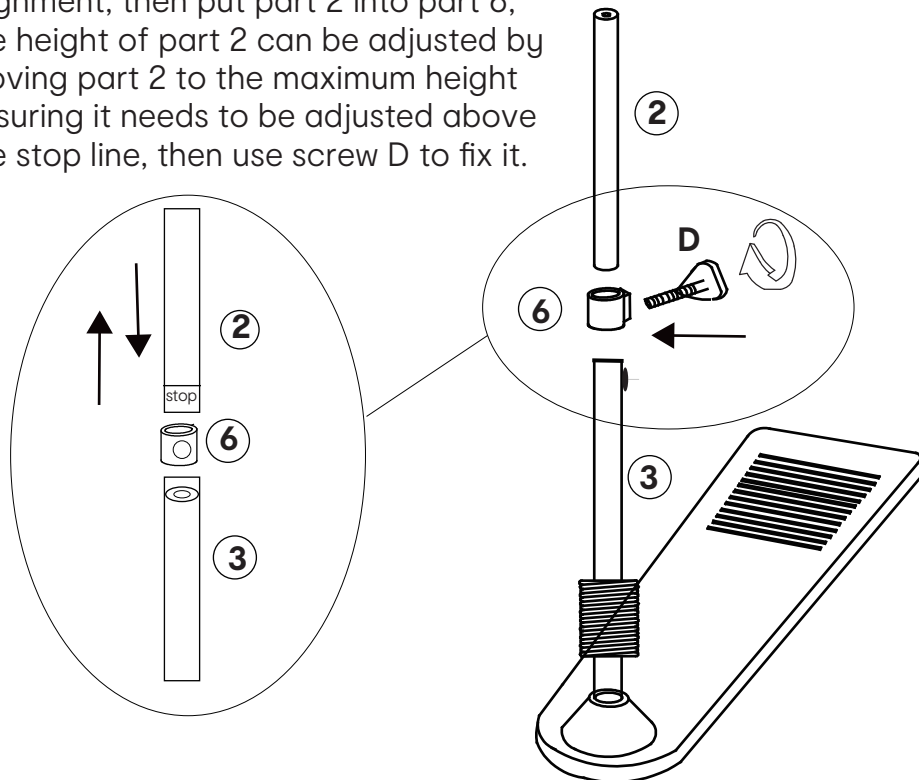
Step 1: Fix part 5 on part 4 with washers A & B, screw C (as per below diagram).



Step 2: Tighten the part 3 on part 5 (as per below diagram).



Step 3: Fit part 6 into part 3, ensure the screw position of part 3 & 6 alignment, then put part 2 into part 6, the height of part 2 can be adjusted by moving part 2 to the maximum height ensuring it needs to be adjusted above the stop line, then use screw D to fix it.



Step 4: Tighten part 1 on part 2(as per below diagram).

