

INSTALLING BATTERIES & FILLING THE GRINDER:

1. UNSCREW THE UPPER CAP ANTI-CLOCKWISE AND REMOVE IT FROM THE BODY.
2. LOAD 6 X "AAA" BATTERIES INTO THE BATTERY COMPARTMENT, ENSURING THAT THE POLARITIES ARE CORRECT. THEN PUT CAP BACK ON, TIGHTENING IT CLOCKWISE.
3. UNSCREW THE LOWER PART OF TRANSPARENT CHAMBER CLOCKWISE AND REMOVE IT FROM THE BODY.
4. FILL THE CHAMBER (80% MAX.) WITH PEPPER CORNS OR SEA SALT. DON'T OVER FILL. REPLACE THE CHAMBER TO THE BODY AND UNSCREW IT TO FIX.

OPERATING YOUR SALT & PEPPER GRINDER:

- ADJUST THE TOP GREY ADJUSTER TO GRIND YOUR PEPPER CORNS OR SEA SALT FROM FINE TO COARSE.
5. TURN THE GRINDER UPSIDE DOWN AND IT WILL AUTOMATICALLY START GRINDING.

NOTES:

IF MACHINE STICKS DURING USE, ADJUST THE TOP GREY ADJUSTER IN AN ANTI-CLOCKWISE DIRECTION, OR BATTERIES MAY NEED REPLACING (ALKALINE).