

# anko

## Instruction manual



**Keycode: 42967309**

**Bluetooth® Headphone with Speaker**

Please read all the information carefully before you use the product and keep the manual for future reference.


## Product Features:

- Charge Voltage: DC5V/1A
- Charging time: 2-4 hours
- Play time: **up to 2.5 hours play time in external mode and 7 hours in headphone mode**
- Speaker mode: 3 hours at max volume
- BT version: 5.0
- FM RANGE: 87.5-108.0MHZ
- Microphone sensitivity: -32db
- Working range: 10 meters without blocking

## OPERATION

Fully charge the headphone battery for the first use, insert the micro USB cable into the charging port, and connect to a power source, when it is charging, the indicator light will glow red, after it had finished charging, the indicator light will go off, it takes 2-4 hours to charge.

When the headphone is running out of battery, an alarm sound will be heard. Please charge the battery immediately. If the headphone are used after this warning, will be automatically turn off after 5 minutes.

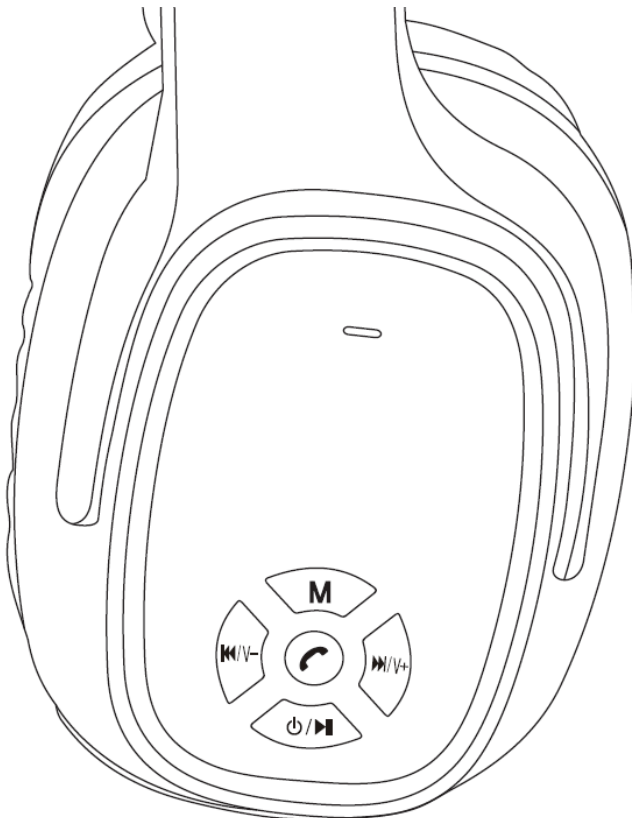

1. Mode button
2. Volume+/NEXT
3. Phone button
4. Volume-/PREV
5. Play/Pause button
6. Indicator light

## POWER ON/OFF

Power on: Press and hold the play/pause button  for 3 seconds, then the indicator light will glow Red / Blue. It is ready for Bluetooth connection.

Power off: Press and hold the play/pause button for 3 seconds, then the indicator light will go off.

## BLUETOOTH GUIDANCE

Bluetooth mode offers the features of hands free function and wireless music player.



When you press and hold the play/pause button for 3 seconds to turn on the headphone, the indicator light glow blue and red, turn on the Bluetooth function on your phone, search the device name KM42967309 and select it to connect. After successful connection, the indicator light will turn blue and you can play music and make the phone call.

## BLUETOOTH MODE


### ANSWER/END A CALL

When a call comes in, quick press the Phone button  once to answer, press again to end the call.

### Adjusting the volume

Long press and hold the  or  button to obtain the volume level you want to be.


### To make a phone call


While the headphone is in Bluetooth mode, double short press the phone button  to make a call which the last number you dial or answer list on your phone.


### Reject a call

Hold the PHONE button  for 2 seconds and then release.

### Music playing

1. Play/Pause: Short press the play/pause button ;

2. PREV: Short press  to select the previous song;

3. NEXT: Short press  to select the next song;

4. VOL+: Long press  to increase volume;

5. VOL-: Long press  to decrease volume.


## MP3 MODE

In Bluetooth mode, insert a micro SD card with MP3 music file you want to listen into micro SD card slot, music will play automatically.







Short press forward  and skip forward  button to select the song you desired.



Long press and hold the forward  or skip forward  button to obtain the voice level you want to be.

If you want stop playing music, press the play/pause button  once to stop, want to listen again, press the play/pause button again to go on playing music.

## FM MODE

Press the Mode button  to enter FM mode, then press the play/pause button  to scan FM channel and store the FM radio stations automatically.

Short press back forward  and skip forward  button to select the desired channels.


Long press and hold the forward  or skip forward  button to adjust the volume.

## Mode switching

To switch from MP3 mode to FM mode or from FM mode to Bluetooth mode, you need to press Mode button once until the mode you want to play with.

## SPEAKER FUNCTION

You can use the headphone as a speaker, just twist out both side of headphone.

long press and hold the Volume+ button  to raise volume

## **WIRED HEADPHONE**

Turn on the headphone, plug in the AUX 3.5mm cable (not included) to “line in” port and plug the other side to the computer or other music device.

### **WARNING**

- Working temperature: -25°C~60°C
- Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation
- Replacement of a battery with an incorrect type that can result in an explosion or the leakage of flammable liquid or gas
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery that can result in an explosion
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

## **12 Month Warranty**

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at [Kmart.com.au](https://www.kmart.com.au) for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.