



Bluetooth Speaker Clock Radio and Wireless Charge

Instruction Manual



Please read the manual carefully before use
and keep it well for further use

1

SAFETY PRECAUTIONS

- Read all the instructions carefully before using the unit and keep them for future reference.
- Check that the voltage marked on the rating label matches your mains voltage.
- Avoid extreme degrees of temperature, either hot or cold.
- Place the unit well away from heat sources such as radiators or gas/electric fires.
- Avoid exposure to direct sunlight and other sources of heat.
- To reduce the risk of fire, electric shock or product damage, do not expose this unit to rain.
- Always disconnect the unit from the mains supply before connecting / disconnecting other devices or moving the unit.
- Unplug the unit from the mains socket during a lightning storm.

 
 
 


This product is intended for use only with the adaptor provided:
 Manufacturer: SHENZHEN SHI GUANGKAIYUAN TECHNOLOGY LTD.
 Model: GKYZB0300050AU
 The socket-outlet for the AC/DC adaptor of apparatus should be easily accessed during intended use.
 Max. operating temperature: 40°C

2

PRODUCT OVERVIEW

1. Power
2. FM Auto scan
3. Station - / FR / Volume -
4. Play / Pause / Handsfree
5. Station + / FF / Volume +
6. Time setting
7. Dimmer
8. Auto sleep
9. Bluetooth
10. Snooze
11. Alarm 1
12. Alarm 2
13. Wireless Charge
14. DC Jack: 5V 3A port
15. Aux in
16. Antenna
17. Rating Label location

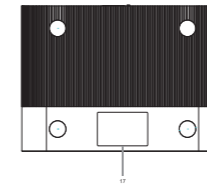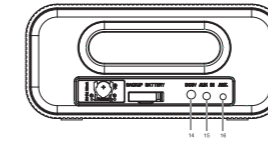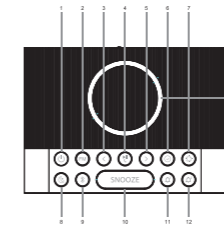

Contents

- 1 x Alarm Clock Radio with Bluetooth speaker
- 1 x A/C adapter
- 1 x Antenna
- 1 x User manual

 
3

Starting/ Turnoff/ Reset Alarm Clock Radio and BT speaker

1. Connect to the 5V 3A A/C adaptor included.
2. The LED display will show the time when connect the power.



3. Press and Hold Power Button to turn on the speaker.
4. The LED display will show "BLUE" in 3 seconds and show the time.

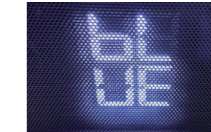

5. Bluetooth playing mode after power-on.
6. Long press Power button to turn-off the speaker.
7. The LED display will show "OFF" and then show the time automatically.



8. Unplug the A/C adaptor to power-off.

FM function

1. Press FM button to switch to FM mode.

 


4

FM Auto Tuning function

1. Under FM mode, long press FM button, speaker will search from lowest to highest FM signals.
2. If FM signal is detected, it will be presented and then search for next stations.
3. All detected signal will be presented from lowest to highest FM signals.
4. Under FM mode, double click the Station - button to previous preset station, double click the Station + button to next preset station.

Pairing with Bluetooth enabled devices (Mobile phones/Tablets etc.)

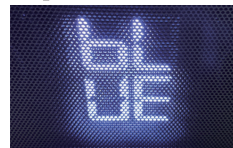

1. Keep the speaker and device within 10 meters of each other.
2. Start the Bluetooth function on your mobile device and look for "Anko BT speaker" in the Bluetooth device list. Bluetooth button flash alternately, after pairing, the button shows BT, then can start to play music.
3. Under the BT mode, short press Play / Pause button to activate play or pause the music playing.
4. Under the BT mode, short press BT button to disconnect the BT connection.
5. Under the BT mode, short press FR, FF buttons to play previous song or next song respectively.
6. Under the BT mode, unit will auto power off if left idle for 15 minutes.

Note:

1. If the pairing was not successful, turn off the speaker and re-pair again.
2. After successful pairing, paired devices will remember each other so there is no need to pair again unless pairing information is deleted.
3. To pair with a new device, just follow steps 1-2 above after UN-pairing the existing device.

Re-connecting to a paired device

If the speaker does not connect to the last used device automatically, then you will need to select it manually from the list of devices on your mobile device.

5

AUX in function



1. Plug in the AUX cable, screen will display LINE with voice "AUX input mode".

1. Connect AUX port to other audio devices via the AUX cable supplied to play music.
2. Adjust volume by either audio devices themselves or long press Volume +/- buttons.

Wireless Charge function

1. When the speaker is turned on, place the smart phone with the wireless charging function on the circle at the top of the speaker, the smart phone will charge automatically.

Note:

- Do not place too close with magnetic stripe or chip card (ID card, credit cards, etc.) to avoid magnetic failure.
- Some phone case may affect the charging performance. Ensure there is no any metal object between your phone cases or try to take it off before charging.

Dimmer function setting

1. The LED display will show 80% brightness automatically when the speaker power-on.
2. Short press the Dimmer button to adjust the brightness to off, 20%, 80%, 100%.

Time setting function

1. Long press the Time Setting button to enter setting mode. The display show "2019" and flash alternately, short press FR/FF button to choose the year.
2. Under time setting mode, short press the Time button to confirm the action, "year-date-time" can be adjusted.
3. Under time setting mode, short press the Time button after set the minute, then time saved automatically.

Notes: Please reset the time function if power cut-off.

6

Sleep time function setting

1. Press Auto Sleep button to enter system setting, short press the Auto Sleep button to select the sleep time setting. Sleep time options: Sleep off, 15, 30, 60, 90 minutes.

Alarm Clock function setting

1. Long Press Alarm 1 button to enter system setting.
2. Alarm time: long press the Alarm 1 button, the time flash alternately, short press the FR/FF button to set alarm time, press the Alarm 1 button to confirm.
3. Alarm days: Continue to Press Alarm 1 button to the date setting, short press the FR/FF button to select the alarm ringing days: 1-7 (Monday to Sunday) / 1-5 (Monday to Friday) / 6-7 (Saturday to Sunday)
4. Alarm volume: Continue to Press Alarm 1 button to the volume setting, short press the FR/FF button to select the alarm ringing volume v1 - v30.
5. Alarm tone: Continue to press Alarm 1 button to the alarm ringtone setting, short press the FR/FF button to select the alarm ringtone. Alarm ringtone options: DIDI, TONE 1, TONE 2, FM Radio.
6. Short press the Alarm 1 button to confirm, then Alarm 1 button light is on.
7. Repeat above 1-6 steps to set alarm 2 clock.

Note:

If you choose the same alarm clock time for Alarm 1 and Alarm 2, please notice that the settings of Alarm 2 will overrule the Alarm 1 setup. Please reset the alarm clock if power cut-off.

If you choose FM radio for alarm clock, the alarm clock will be playback the last FM radio channel.

Volume Tuning function

1. During the normal operation of the speaker, long press Volume +/- buttons to increase or decrease the volume.

Usage of antenna

1. Plug in the 2.5mm antenna and extend it nearby the windows.
2. Please keep the speaker far away from the electrical appliances to prevent disturbance.
3. If the radio signal is too weak, please switch audio channel from stereo to mono for receiving better sound performance.

7

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

8