

# WOODEN ROCKER BOARD INSTRUCTIONS

**Keycode: 42970316**

**WARNING!** Requires adult assembly only. Use only under adult supervision.

Not suitable for children under 5 years. Only for one child use.

Contains functional sharp point. Make sure all screws are firmly tightened before using the product. Only use on flat ground.

Not for children with a body mass of more than 40kg.

Remove the wooden board and related pieces from the box. Set all the parts out and read the assembly instructions prior to use. Keep the packaging until assembly is complete.

## CONTENTS:

The product consists of below components, please assemble each part step by step.



A. 1pcs Rectangle Wooden Board (Main board)


B. 2pcs Semicircle Wooden Board

C. 1pcs Wooden Support Bar

D. 6pcs Fixing Screw

E. 1pc Hex Wrench

## Assembly Instructions

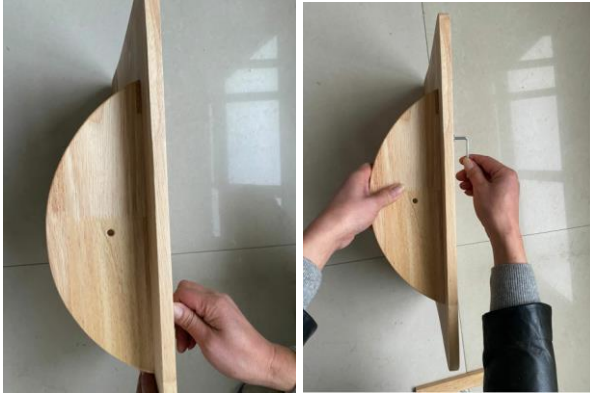

Align the semicircle board to the main board, then take the screws and pass through the hole, use the hex wrench to tighten

**Note: Please do not tighten firmly before both semicircle boards are assembled.**

After semicircle board assembled, put the support bar between two semicircle board and align the hole, use the screw through the hole and then use hex wrench to tighten.



**After all screw tighten, board is ready for use.**



**MADE IN CHINA**

FOR AU / NZ: IMPORTED FOR KMART STORES IN AUSTRALIA AND NEW ZEALAND.