

Assembly Instructions

42971030 SORTER WITH GARMENT RACK


 
CARE INSTRUCTIONS:


REMOVE LAUNDRY HAMPERS BEFORE WASHING. WARM MACHINE WASH. DO NOT BLEACH. DO NOT TUMBLE DRY. DO NOT DRY CLEAN. ☒





 
 

 


 
 
MAXIMUM SAFE LOAD:

TOTAL 25KGS: 10KG ON CLOTHES RAIL, 5KG IN EACH BAG.

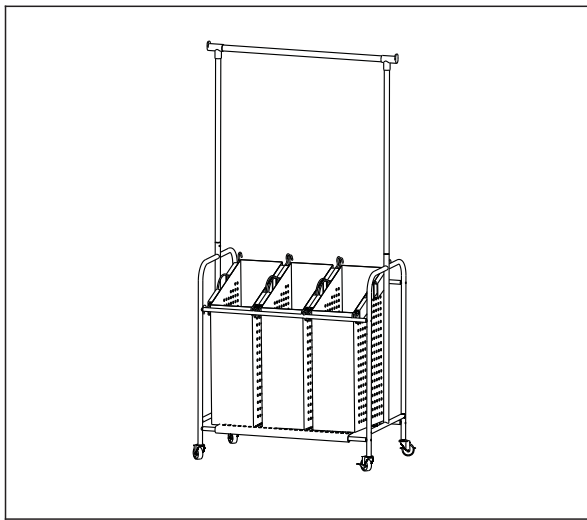
Hardware list

	L	M6x30	8 pcs
	M	M14	1 pcs

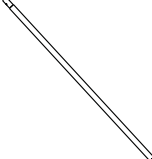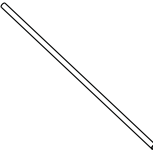


	A1	1 pcs		A2	1 pcs		B	∅22x0.6x858	2 pcs		C	∅25.4x0.5x797	1 pcs
	D	∅16x0.8x732	4 pcs		E	1 pcs		F	6 pcs		G	3 pcs	
	H	8 pcs		I	2 pcs		J	2 pcs		K	2 pcs		


STEP 1

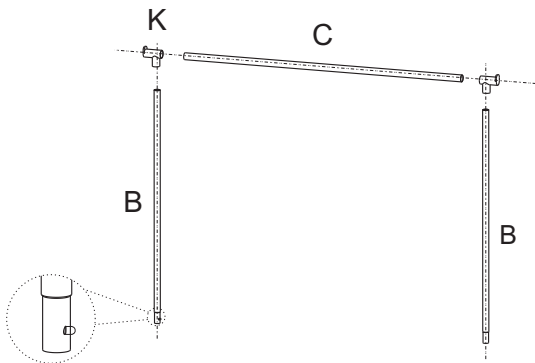

STEP 2

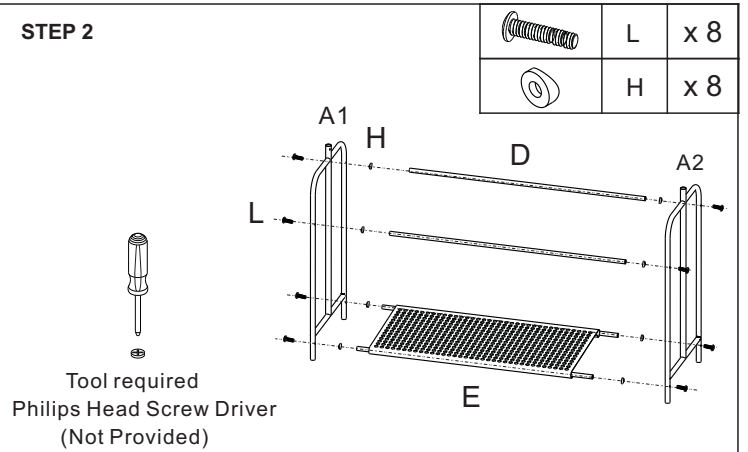

STEP 3

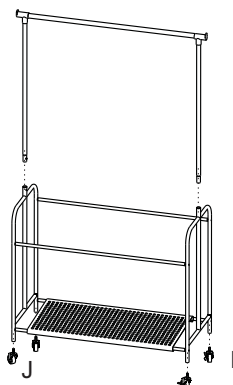

STEP 4

