

Assembly Instructions

 


42974123 KIDS TOY ORGANISER


WARNING:

DO NOT STAND OR SIT ON THIS UNIT. DO NOT USE THIS UNIT UNLESS ALL BOLTS AND SCREWS ARE FIRMLY SECURED. DO NOT KNOCK OR DRAG THIS UNIT. USE ONLY ON A FLAT SURFACE. FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY. THIS PACKAGE CONTAINS SMALL PARTS AND SHARP POINTS. KEEP AWAY FROM CHILDREN AND BABIES.


MAXIMUM SAFE LOAD: 7KG FOR EACH SHELF.

Hardware list


 
	A	∅6X30mm	14PCS
	B	M4X35mm	31PCS
	C		10PCS

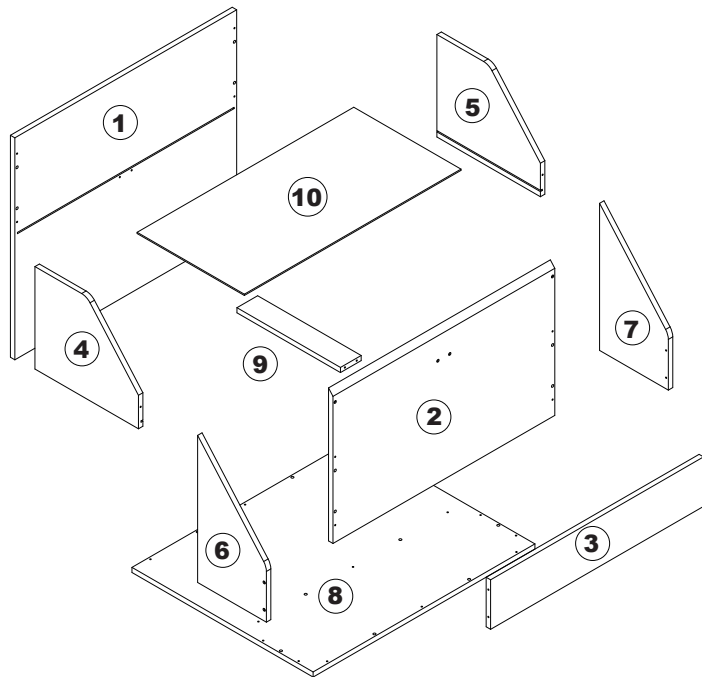


Do not tighten the screws fully during assembly.
Fully tighten screws after the final assembly steps

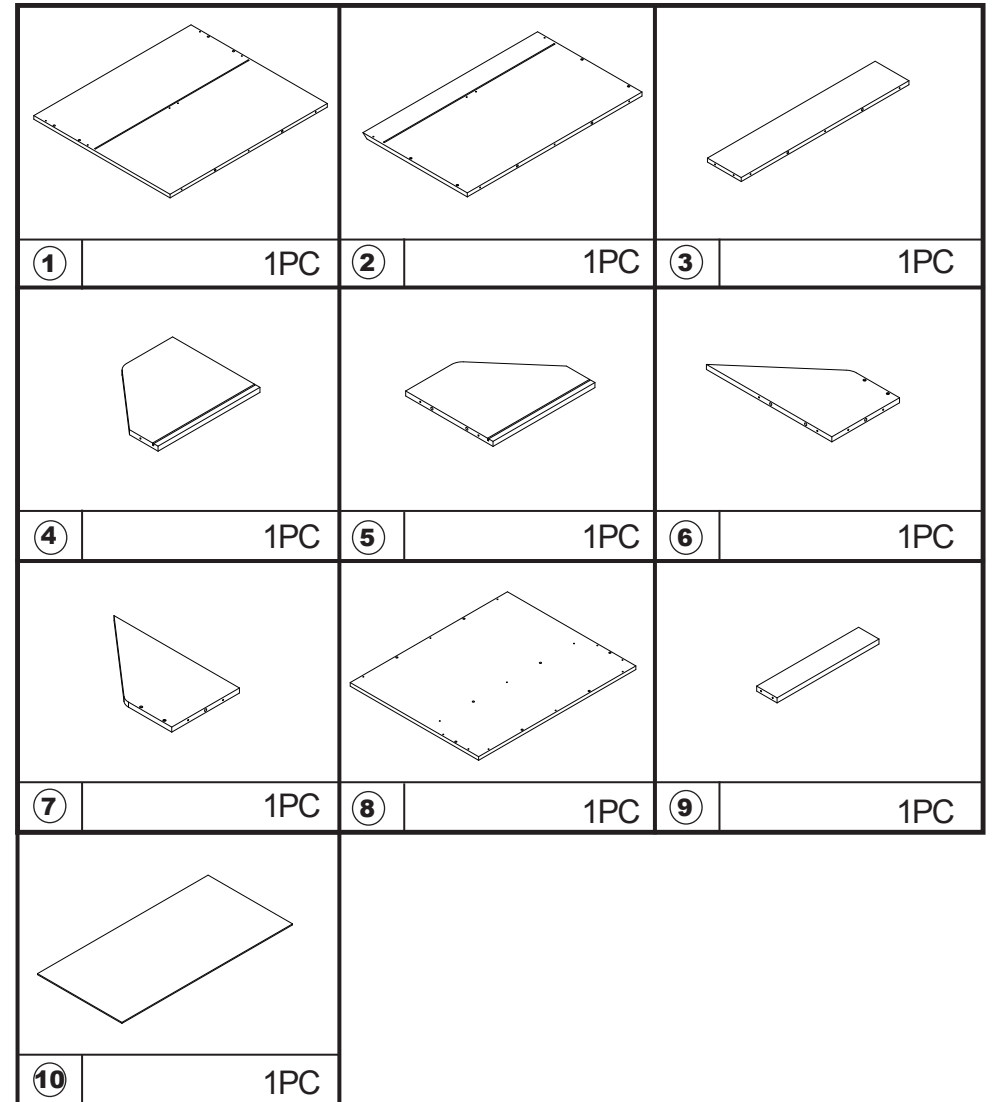


STEP 1

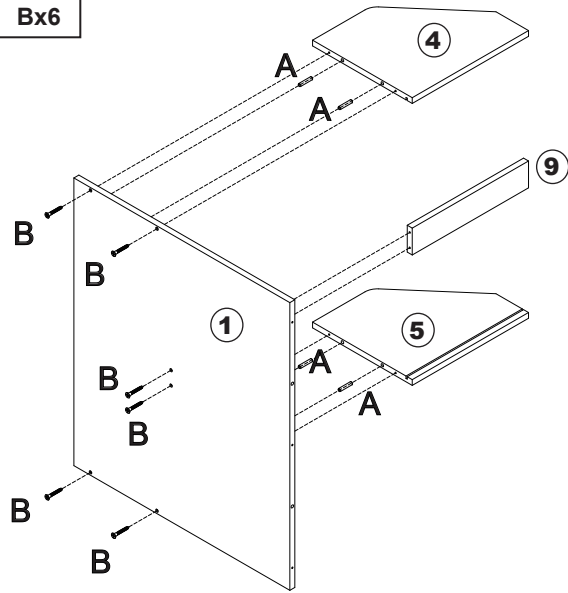


STEP 2

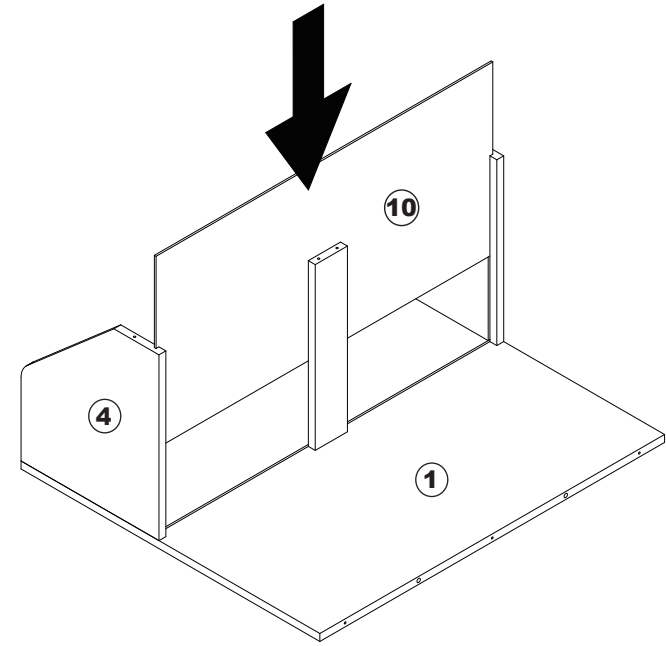

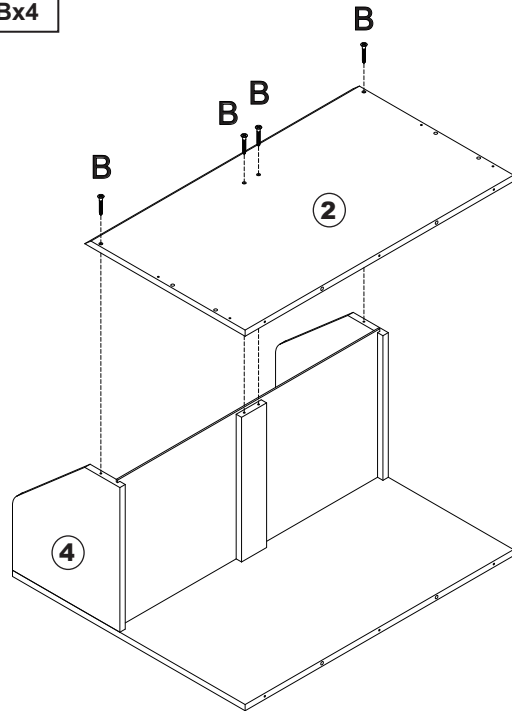

STEP 3

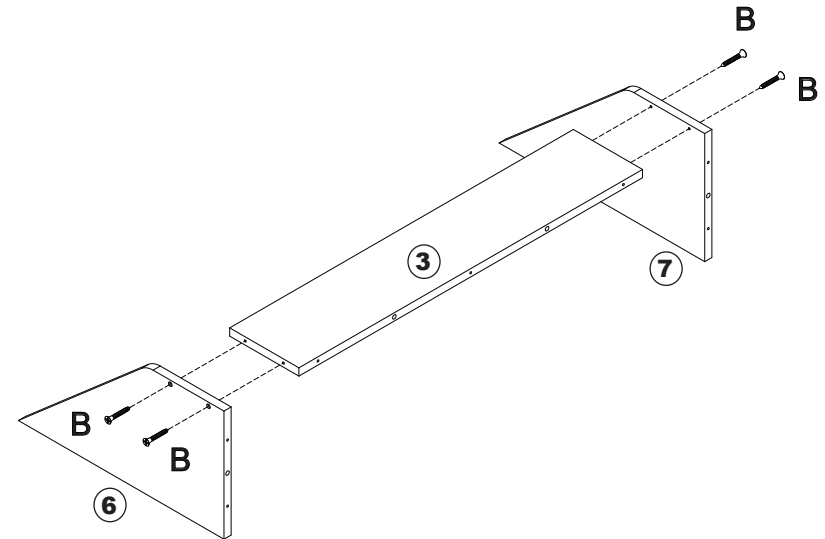


STEP 4




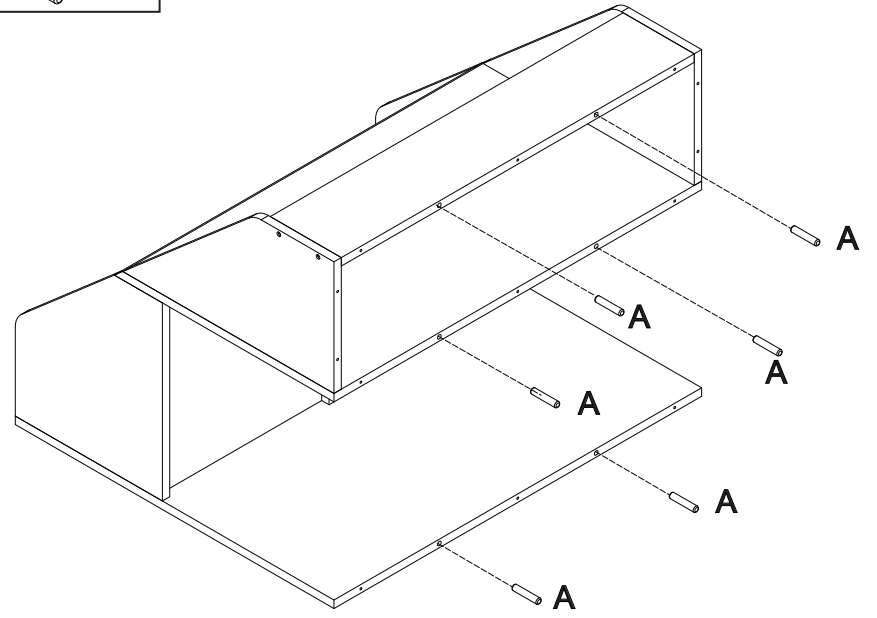
STEP 5

-  Ax4
-  Bx4

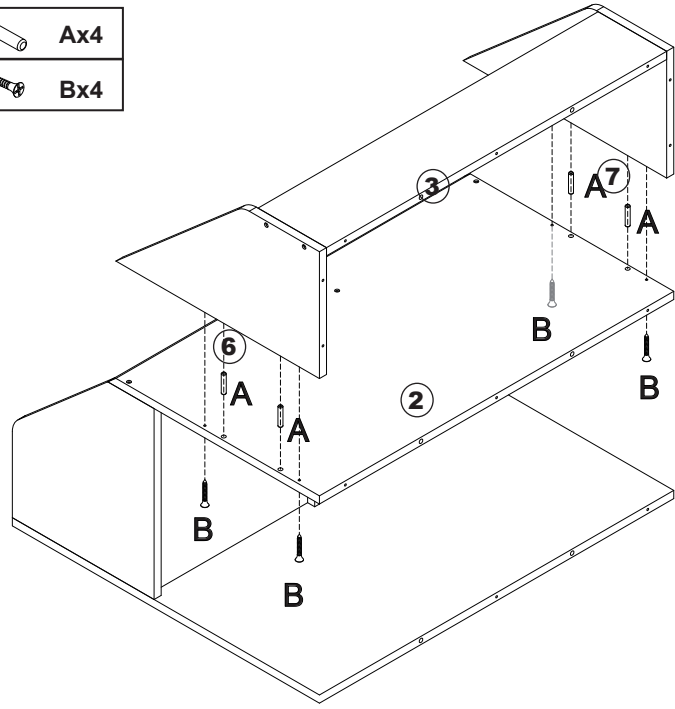


STEP 6

-  Ax6



STEP 7

-  Bx13

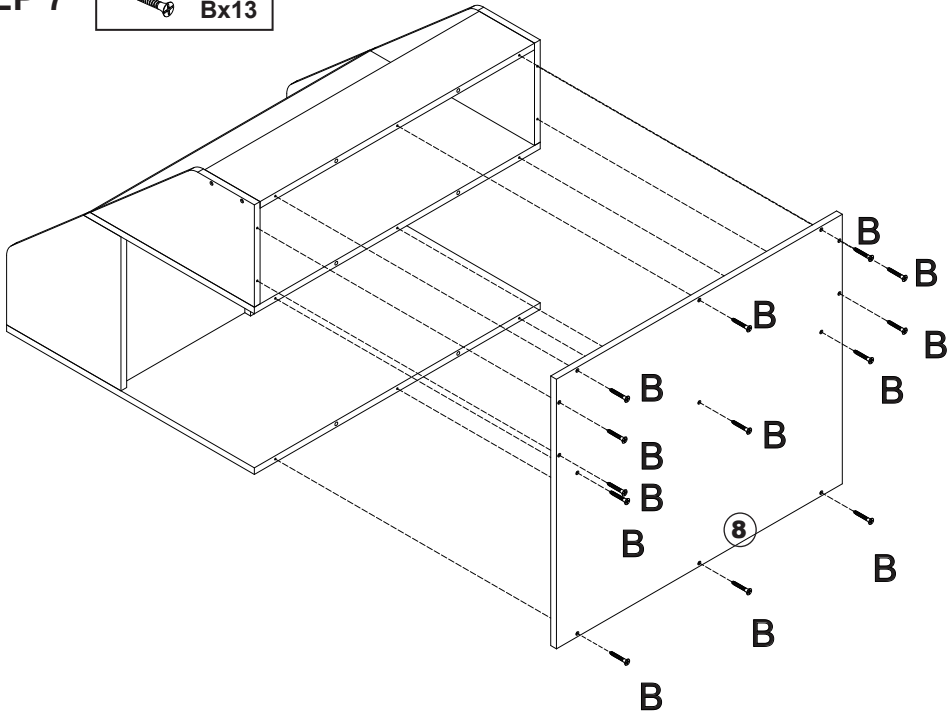

STEP 8

-  Cx10

