

User Instruction 42977025



Warning: - Please read and keep the instruction manual for future reference.
 - Please remove all packaging and attachments before giving this item to a child.
 - This item is not suitable for children under 3 years due to small parts that can be swallowed. Choking hazard, strangulation hazard.
 - Assembly and disassembly must be undertaken by adults only. Use only when supervised by Adults
 - Protrusion hazard during unassembled state
 - Recommended for children age 3+ years

Safety information:
 - Adult supervision of play is recommended at all times
 - Do not let children play with this item near stairs, slopes, etc.
 - This is a toy and should only be used with dolls - do not allow babies, children or pets to sit or ride in this item.
 - Please check condition of item regularly, tighten screw fittings if necessary. Please discontinue use of the item if excessive wear & tear is found


Care instructions:
 - Surface washable only - wipe clean with a soft damp cloth, with mild detergent if necessary.
 - Please ensure all items are removed from the seat and carry tray areas before folding the item closed.



Made in China

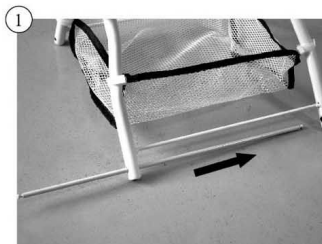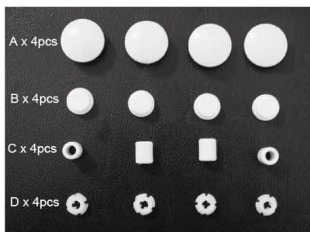

Insert the shaft in the front and rear

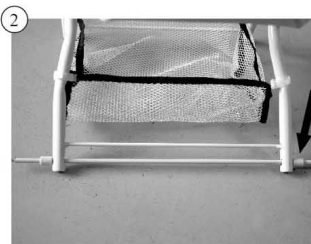

Insert part 'C' at each end



Assemble the wheel on the shaft



Assemble part 'D'




Assemble part 'B'




Assemble part 'A'

Repeat step 2~6 to assemble other 3 wheels

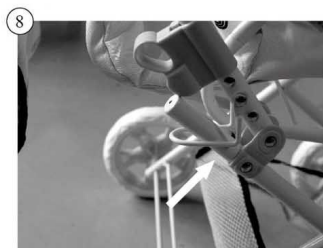


Please take care that the safety locks are fixed.

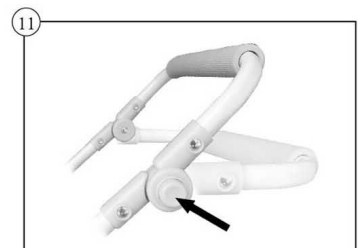

press two side buttons to adjust the handle

Finished.

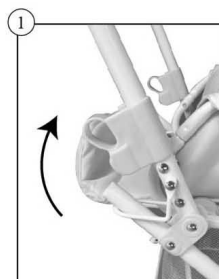

To fold the pram

