

AGES 3+ YEARS

# SMART REMOTE CONTROL ROBOT

## MANUAL



### PACKAGE CONTENTS

• Smart Robot • Remote Control Watch • Tray • User's Manual

### IMPORTANT SAFETY PRECAUTIONS

READ ALL INSTRUCTIONS BEFORE USING YOUR ROBOT.


1. Do not use your robot near water. Clean using a soft cloth or paper towel.
2. Do not place your robot on any wet surfaces.
3. Do not allow children under age three to play with robot without adult supervision.
4. Do not expose your robot to excessive heat, flames or fire.
5. Always press all buttons or switches carefully.
6. Do not use in extremely dry environments, as this can lead to static discharge during usage.
7. Do not expose your robot to temperatures above 40°C. Keep out of direct sunlight.
8. Do not drop, puncture or expose your robot to excessive trauma.
9. Your robot is not intended for commercial use.

### SMART ROBOT



-1-

### REMOTE CONTROL WATCH

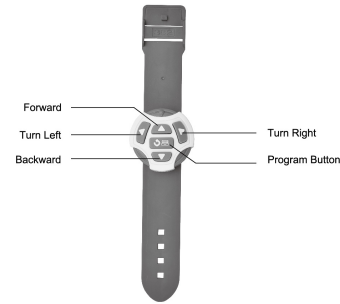


### INSERTING BATTERIES

#### SMART ROBOT

1. Unscrew to open battery cover, insert 3 X 1.5V AAA batteries.
2. Replace battery cover.

Attention: remove batteries after you have finished using your product.

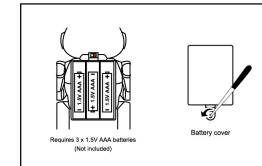

### POWERING ON YOUR ROBOT

Once you have inserted batteries into your robot, you can go ahead and power on your robot. To do so, slide the ON/OFF switch located on the rear of the robot to the ON position. (the LED light of the eyes will be on). When you have finished playing with your robot, slide the ON/OFF switch to the OFF position.

NOTE: Once the batteries are completely depleted, replace the batteries as soon as possible to continue use.

-2-

### MOVING YOUR ROBOT

You can use your remote control watch to move your robot around in different directions.

By pressing the up or down arrow buttons your robot will move forwards or backwards.

By pressing the left and right arrow buttons, your robot will turn left or right.



### PROGRAMMING YOUR ROBOT

Press the program button and your robot will enter Program mode.

Once in program mode, you can press the directional buttons to create a series of movements.

Press the program button again to have your robot carry out the movement program that you created.

Note: The LED lights will keep flashing when the robot is entering the programming mode. The LED lights will turn back to steady when the robot performs programming actions.

**WARNING:** DISPOSE OF USED BATTERIES IMMEDIATELY. KEEP NEW AND USED BATTERIES AWAY FROM CHILDREN. IF YOU THINK BATTERIES MIGHT HAVE BEEN SWALLOWED OR PLACED INSIDE ANY PART OF BODY, SEEK IMMEDIATE MEDICAL ATTENTION.

**WARNING:** BUTTON CELL BATTERIES CAN CAUSE SERIOUS INJURY OR DEATH IF SWALLOWED. DISPOSE OF SAFELY STORE BATTERIES OUT OF REACH OF CHILDREN. VISIT [THEBATTERYCONTROLLED.COM.AU](http://THEBATTERYCONTROLLED.COM.AU)

**WARNING:** BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED.

DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.



KEYCODE: 42977483

**WARNING: CHOKING HAZARD**  
SMALL PARTS. NOT FOR CHILDREN UNDER 3 YRS.

**WARNING:** FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC PARTS BEFORE GIVING THIS TOY TO YOUR CHILD.

REMOTE CONTROL WATCH INCLUDED NON-REPLACABLE BATTERY. PRODUCT MAY VARY SLIGHTLY FROM IMAGE SHOWN. READ THE INSTRUCTIONS BEFORE OPERATING THE PRODUCT. PLEASE KEEP THE PACKAGING AND INSTRUCTION MANUAL FOR FUTURE REFERENCE.

-3-