 
 
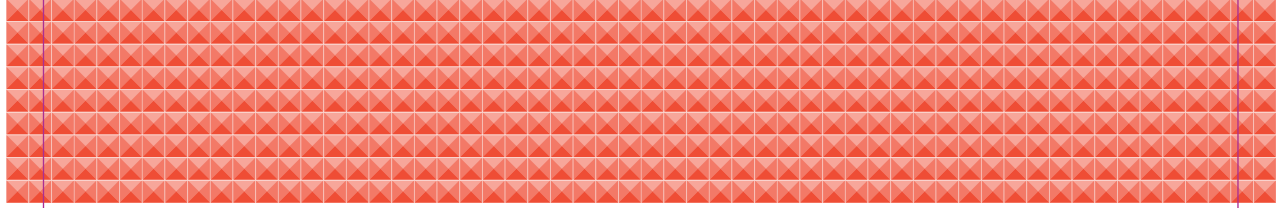 
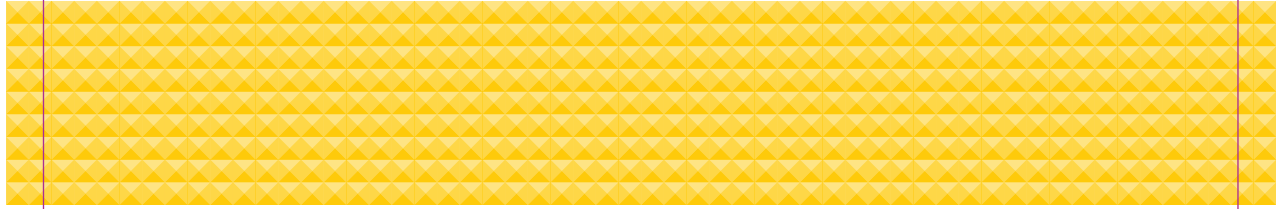 
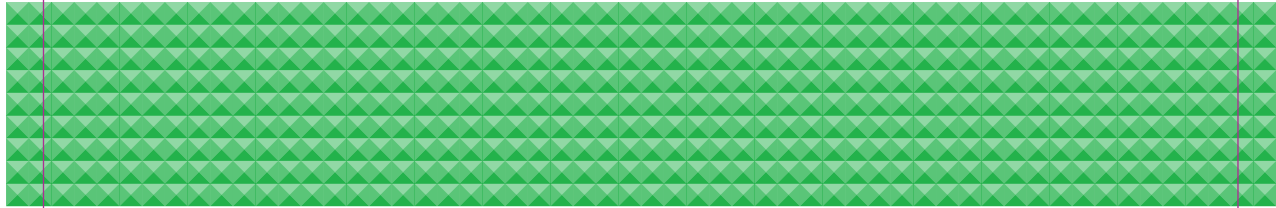 


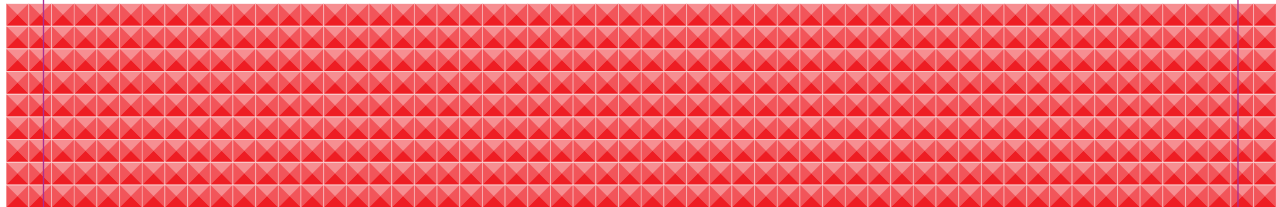

# MEMORY GAME

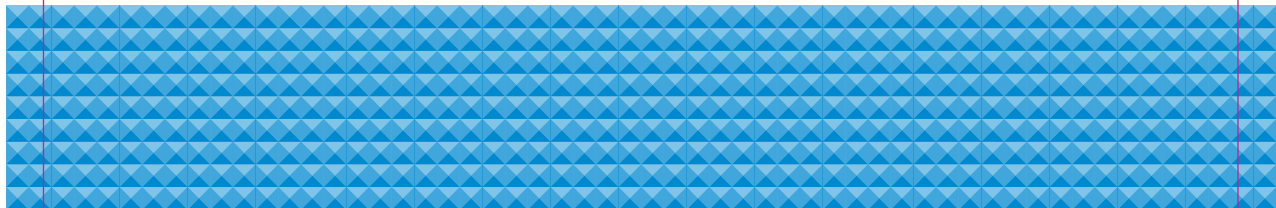 


**WATCH, REMEMBER, REPEAT!**

## INSTRUCTION MANUAL

The game has a total of 32 levels.

1. Slide the ON/OFF switch located on the bottom of the product to the ON position.
2. Press the start button to start the game.
3. The outer 5 coloured buttons will play a sound and light up randomly.
4. Follow the correct order and press the relevant button accordingly. You have 8 seconds to complete the game.
5. If the coloured button is selected in the incorrect sequence or not played in required time then the player will receive a warning sign and the game is over.
6. Press the start button to commence a new game as required.

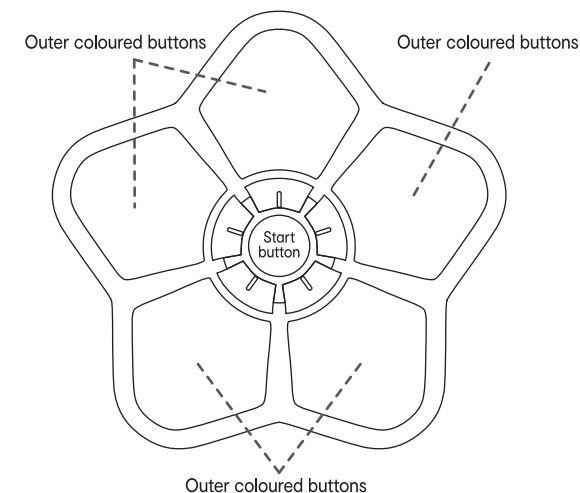 


PRODUCT MAY VARY FROM IMAGE SHOWN.  
PLEASE KEEP THE PACKAGING FOR FUTURE REFERENCE.

**WARNING:** BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED BY ADULT. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

**WARNING:** DISPOSE OF USED BATTERIES IMMEDIATELY. KEEP NEW AND USED BATTERIES AWAY FROM CHILDREN IF YOU THINK BATTERIES MIGHT HAVE BEEN SWALLOWED OR PLACED INSIDE ANY PART OF THE BODY, SEEK IMMEDIATE MEDICAL ATTENTION.

**CAUTION:** BATTERY INSTALLATION BY AN ADULT IS REQUIRED.

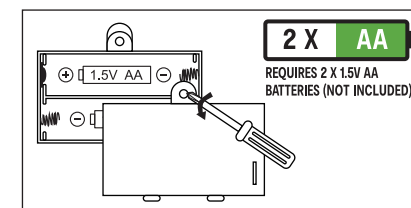

**WARNING:** CHOKING HAZARD  
SMALL PARTS. NOT FOR CHILDREN UNDER 3 YRS.

**MADE IN CHINA**  
FOR AU / NZ: IMPORTED FOR KMART  
STORES IN AUSTRALIA AND NEW ZEALAND.



42-982-760