# anko

Keycode # 42982951 WIRELESS CHARGER

#### For Your Safety:



## Cautions

In emergency cases, please unplug the electric socket:

- \*Emergency cases include
- Smoke from the unit
- Changed shape
- Liquid or material leakage
- Dropped & broken casing or parts.
- 1. The charger is used for office equipment
- and information technology equipment.

  2. The max ambient temperature is 40 °C. 3. For indoor use only.
- 4. Do not drop the product or submit it to
- impact. 5. Dropping the product or submitting it to
- impact can cause the product to malfunction. 6. Do not place the product in an area exposed to heat, direct sunlight, dampness, moisture, rain, vibration, shock, dust or sand.
- 7. Do not place the product near any kind of magnet or expose it to excessive vibration.
- 8. Do not drop the main body, accessories or submit them to any impact, as this can cause the product to malfunction.
- 9. When the plug is used as disconnect device, the socket-outlet shall be installed near the equipment and shall be easily

#### Introduction:

#### Specification:

Wireless Charging Pad Input: DC 5V/3A, 9V/2A, 12V/1.5A Output (wireless): 10W (Max)

To achieve fast wireless charging, a PD 18W or above power adapter is required and your charging device must also supports fast wireless charging function.

\*Power adapter sell separately


This wireless charger is compatible with Qi-enabled devices. Able to charge through cases up to 3mm thick.

#### LED indicator:

Blue (1s): power is on
Blue (constant): charging in processing Red: charging process completed Blue (flashing): protection mode initiated Blue-Red (flashing): power input voltage is lower than 4.2V / higher than 13.5V

### User guide:

- Connect the micro USB plug to the micro USB port on the wireless charging pad
- 2. Connect the USB-C plug into power adapter\*
- Plug the power adapter into wall socket
   Put down your phone & charge

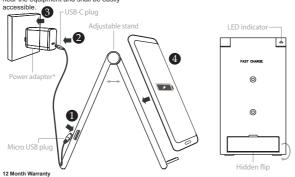

oice of refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the warranty, This warranty will not longer apply where the deded is a result of alteration, accident, misuse, abuse or regiect. In order partness and control or unclaimer Service Centre on 1800 (12 Hz) (Australia) or (800 Hz) 655 (9 New Zealanty) or alternatively, to far any be addressed to our Customer Service Centre at 690 Springrake RA, Mulgrave Vc 3170.

Int cannot be excluded under the Australian Consumer Laur Visu are extelled to a replacement or refund for a major failure and