

anko

42983101 Unicorn Light-up Earphone User Manual



*Please read all the information carefully before you use the product and keep the manual for future reference.

Safety instructions:

Please read all safety instruction warnings carefully before using this product. Improper use of this product may result in damage to this or attached products.

To ensure the production works well, please never use this in the following conditions:

1. Moist or underwater conditions.
2. Conditions near heater or high temperature service.
3. Conditions with direct and strong sunshine.
4. Do not use chemical solvent on cleaning this product.
5. This toy is only to be connected to equipment bearing either of the following symbols

Please keep the instruction, since it contains important information

1. Function
 - One button,
- 2 lighting model
 - Adjustable and foldable headband
 - Soft cushion on the headband and earcups

3. Installation Description:

Step 1

Remove the plastic film from the battery door.



Step 2

Press the LED control button to light up the LED



Replace the battery

Loosen the screw and open the battery door and remove out the battery.



Insert a CR2032 battery in the slot, close the battery door and screw the door tightly.



- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed.
- The supply terminals are not to be short-circuited.
- Warning: This product contains a coin battery. A coin battery can cause serious internal chemical burns if swallowed.
- Warning: Dispose of used batteries immediately. Keep new and used batteries away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Button cell battery warning

- SWALLOWING MAY LEAD TO SERIOUS INJURY OR DEATH IN AS LITTLE AS 2 HOURS DUE TO CHEMICAL BURNS AND POTENTIAL PERFORATION OF THE OESOPHAGUS.
- DISPOSE OF USED BATTERIES IMMEDIATELY AND SAFELY. FLAT BATTERIES CAN STILL BE DANGEROUS.
- EXAMINE DEVICES AND MAKE SURE THE BATTERY COMPARTMENT IS CORRECTLY SECURED, E.G. THAT THE SCREW OR OTHER MECHANICAL FASTENER IS TIGHTENED. DO NOT USE IF COMPARTMENT IS NOT SECURE
- IF YOU SUSPECT YOUR CHILD HAS SWALLOWED OR INSERTED A BUTTON BATTERY, CALL THE 24HOUR POISONS INFORMATION CENTRE IN AUS ON 131126 OR IN NZ 0800 764 766 OR CONTACT YOUR COUNTRY'S EMERGENCY DEPT.

WARNING!



Button cell batteries can cause serious injury or death if swallowed. Dispose of safely! Store batteries out of reach of children!

Visit TheBatteryControlled.com.au



Specifications:

- Driver: 40mm
- Frequency response: 20Hz-20kHz
- Cable length: 1.2m
- Plug type: 3.5mm
- CR2032 Button cell battery.