



Please read the manual carefully and keep it properly before using the product.

42963462/42997580 User Manual



1

Important Precautions:

- 1.This speaker shall not be exposed to dripping or splashing and that not objects filled with liquids, such as vases, shall be placed on the speaker.
- 2.Minimum distances 100 cm around the apparatus for sufficient ventilation.
- 3.The ventilation should not be impeded by covering the ventilation opening switch items, such as news papers, table-cloths or curtains.
- 4.No naked flame sources such as lighted candles, should be placed on the apparatus.
- 5.When the mains plug or and appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- 6.To be completely disconnect the power input, the mains plug of apparatus shall be disconnected from the mains completely.
- 7.The main plug of apparatus should not be obstructed or should be easily accessed during intended use.
- 8.The use of apparatus in moderate climates.

2

- 9.Attention should be drawn to the environmental aspects of battery disposal.
- 10.Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- 11.Excessive sound pressure from ear phones and headphones can cause hearing loss.
12. The internal battery is non-user replaceable.
13. Do not use this apparatus near the water
- 14.For pluggable equipment, the socket-out(power adaptor) shall be installed near the equipment and shall be easily accessible.

Avoids to use battery in following conditions:

- 1.High or low extreme temperature during use, storage or transportation.
- 2.Replacement of a battery with an incorrect type that can defeat a safeguard.
- 3.Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- 4.Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.

3

- 5.Extremely high temperature and/or extremely low air pressure that can result in an explosion or the leakage of flammable liquid or gas.

Technical Data:

Input voltage: DC 5V/ 200mA

Output power: 3W


Function Features:

- 1.Wireless music playback, Wireless calling.
- 2.TWS wireless connection.
- 3.Built-in polymer lithium battery
- 4.Low voltage intelligent detection and charging reminder
- 5.Energy-saving and environmental protection function (automatic shutdown after 5 minutes without connection)

4

Function Description:

1. Indicator light(working in blue color, charging in red color, full charge turn off)
2. Charging jack
3. ON/OFF button
4. Carrying hole
5. Microphone

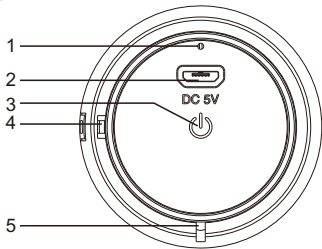

5

TWS Connection Instruction:

1. Turn on two units with same model number in the same time, these two units will connect automatically.
2. Turn on your mobile phone Bluetooth function and search the Bluetooth name: KC42963462 or KC42997580 shown on your mobile phone to connect.
3. Then you could play these two units together.
4. Turn off one unit to disconnect this function.

Notes:

1. TWS function could only pair same model products.
2. Once two units pair successfully, there is a DI sound to confirm.

Charging Instruction:

1. Please use the charge cable in the package for charging.
2. during the charging, the indicator light will show RED color.
3. Full charge will show and keep Blue color.

Noted:

1. The charge input is DC 5V 200mA.
2. This unit have low voltage remind function, and the indicator light will show red color.

6

Function Operation:

Power on: Long press the "ON/OFF" button for 3 seconds to power on , and the bottom working indicator light show as blue color and keep flashing quickly.

Power off: Long press the "ON/OFF" button for 3 seconds to power off , and the blue light will turn off.

Bluetooth connection:

1. Turn on your mobile phone Bluetooth and search for the speaker name "KC42963462 or KC42997580" to pair.
 2. When pairing successfully, the indicator light will keep the blue color.
 3. When playing music, the indicator light will flash slowly with blue color .
- Play/Pause:** When playing music , press the "ON/OFF" button for one time to pause and press one again resume playing.
- Calling function:** If there is an incoming phone when speaker on bluetooth status, press the "ON/OFF" button to answer the call. Press the "ON/OFF" button to hang up the call during the call.

7

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

8