Keycode: 43023424 User Manual

Vendor: Chun Shing

12 month warranty

Thank you for your purchase from Kmart.

alteration, accident, misuse, abuse or neglect

not amount to a major failure.

observed under New Zealand legislation.

说明书保修卡用80克书写纸单黑双面印刷

diecut K Size:210x143mm 正面

Kmart Australia Ltd warrants your new product to be free from defects in

materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with the accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. Kmart will provide you with your choice of a refund, repair or exchange

(where possible) for this product if it becomes defective within the

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does

For New Zealand customers, this warranty is in addition to statutory rights

WARNING Do not dispose of unit in fire or water. > Never attempt to disassemble and reassemble. > Waster electrical products should not be disposed of with household waste, please recycle where facilities exist. > Check electrical products should not be disposed of with household waste, piedse recycle where facilities exist. > Check with your local authority for recycle advice. Neep your device and all accessories out of the reach of children and animals. > Small parts may cause choking or serious injury if swallowed. > Avoid exposing your device to very cold or very hot temperatures (below 0°C or above 45°C). > Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. > Do not allow your device to get wet—liquids can cause serious damage. > Do not handle your device with wet hands.


Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

warranty period. Kmart will bear the reasonable expense of claiming the

warranty. This warranty will no longer apply where the defect is a result of

anko

Sports Earhook Earphone Operating instructions

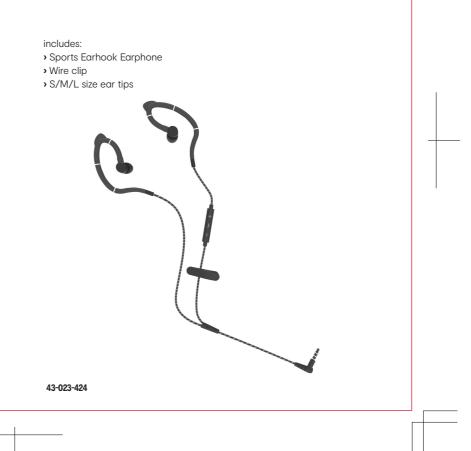

说明书保修卡用80克书写纸单黑双面印刷

E-metical example of		Constantion of the section of the se	
Function overview:	Π	Specification:	
1. Volume up $1 - 1$		Model No.:	Frequency response:
2. Call answer and music control button		43023424	20-20khz
3. Volume down 2 4. Microphone		Driver unit:	Cord length:
3		8.45mm	1.2m
		Impedance:	Plug:
How to use the In-line control functions:		16ohm	L-shape 3.5mm plug
A. Volume Control With the headphone/earphone connected to your device	via the 3.5mm	Sensitivity:	
headphone socket.		92±3dB S.P.L At 1khz	
	Adjust Volume Up Short press the volume up button until the desired volume		
Adjust Volume Down Short press the volume down butto	n until the desired		
volume level is achieved.			
B. Call answer With the headphone/earphone connected to your device	via the 3.5mm		
headphone socket.			
Note: If you wish to make a call using the in-line micropho microphone will automatically activate whilst the headpho connected to your device via the 3.5mm socket.	one/earphone is		
Function Operation			
Call Answer 1 press the call answer/music control button your device	n to answer calls on		
Hang Up 1 press the call answer/music control button phone call	n to hang up your		
Reject Call 2 press the call answer/music control button call	n to reject your phone		
C. Music Control Function With the headphone/earphone connected to your device headphone socket.	e via the 3.5mm		
Function Operation			
Pause Music 1 press the call answer/music control button Play Music 1 press the call answer/music control button	n once to pause music		