

12 month warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with the accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on **1800 124 125 (Australia)** or **0800 945 995 (New Zealand)** or alternatively, via Customer Help at **kmart.com.au** for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.


For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

WARNING This product shall be supplied by a power source not exceeding PS1 only.>The battery in product is non-replaceable.> Danger of explosion if battery is incorrectly replaced.>Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.>Replacement of a battery with an incorrect type that can result in an explosion or the leakage of flammable liquid or gas.>Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.>Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas. The ambient temperature for product normal operation is 0°C to 45°C>A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.


Bluetooth® Sport Earphones Operating instructions

includes:

- > Bluetooth Sport Earphones
- > Charging Cable
- > 3 Pairs of Ear Cap
- > Manual

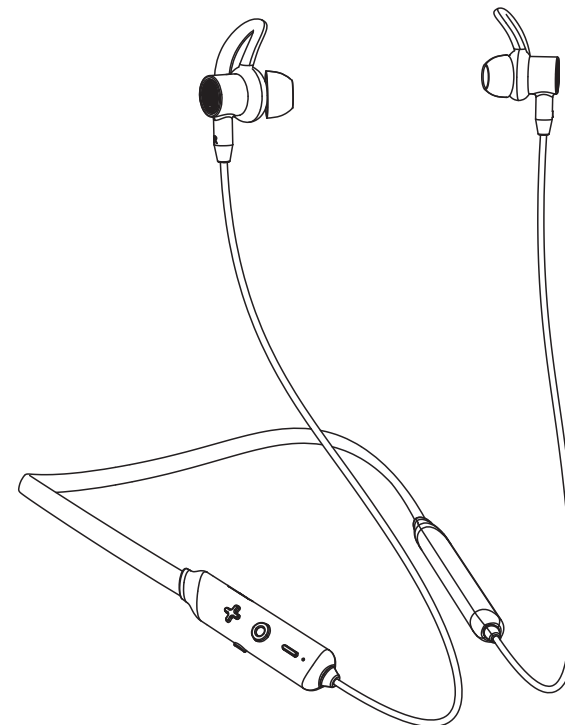

Function overview:

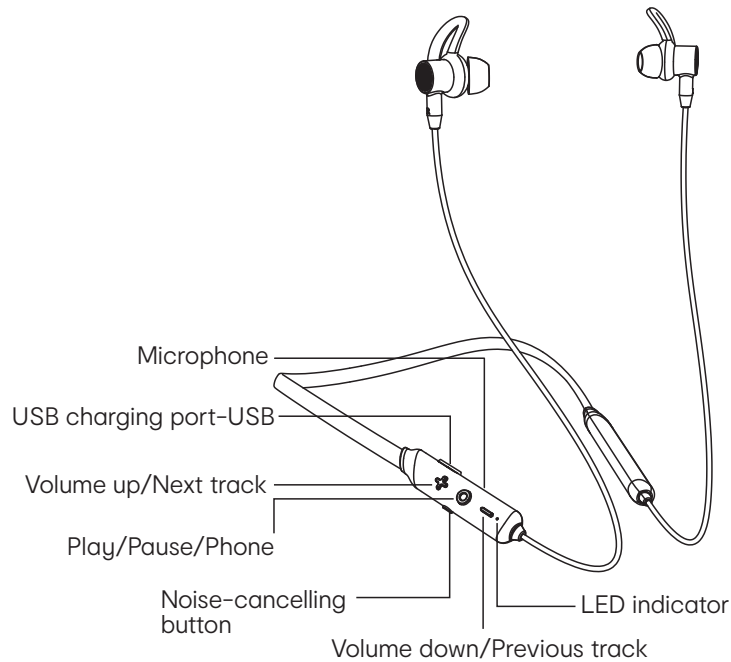

How to use these headphones:

Function Operation

Pause Short press  button 1 time

Play Short press  button 1 time

Next track Long press + button 2s


Previous track long press - button 2s

Volume Up Short press + button
when the volume is adjusted to maximum
you will hear a voice indication tone


Volume Down Short press - button

Power ON / OFF

Power ON

Long press  2 seconds, until you hear a "power on" prompt tone. LED indicator flashes Blue 3 times.

Power OFF

Long press  3 seconds, until you hear a "power off" prompt tone. LED indicator will flash red for 1 seconds, and then goes off.

Noise Reduction On

Short press the noise noise reduction button 1 time.

Pairing the headset with Bluetooth devices

- › Once the Earphone is powered on, it is in pairing mode (Red & Blue LED flashes alternately) and will pair to the last paired device (if available).
- › Pair the Earphone in Bluetooth menu in mobile phone and once it is paired, you can hear a "connected" tone and the LED will go off.
Bluetooth Name: anko Sport ANC

Phone calls

- › Press MFB button once to pick up/hang up phone calls.

Playing music

When the Earphone connects with the mobile phone via Bluetooth you can enjoy music through the Earphone wirelessly.

Long press "-" button to switch to the previous track, long press "+" button to switch to the next track.

Battery Charging

This Bluetooth headset is powered by rechargeable lithium battery.

Please use the accessory USB cable to recharge the battery.

- › Insert USB charging cable into a suitable USB port.
- › Connect charging cable with the Earphone USB port .
- › Indicator LED turns RED to show battery is charging.
- › Indicator LED turns OFF when battery is fully charged.
- › It takes about 1.5 hours to fully charge the battery.

Specifications:

Model No:
43023462

Version:
Bluetooth V5.0

Support profiles:
HFP, A2DP, HSP, AVRCP

Working Distance:
10 meters

Music Time:
>5 Hours

Talk time:
>5 Hours

Standby time:
>100 Hours

Charging voltage:
5V_500mA

Battery capacity:
110mAh

Charge time:
1.5 Hours

Cable length:
0.3 m

Pairing window time:
5 minutes

The active noise cancelling function is effective to reduce low frequency range such as airplanes, trains, or offices (near air-conditioning, etc.)