 


Front

10cm

anko 43024094 AUTOMATIC SOAP DISPENSER

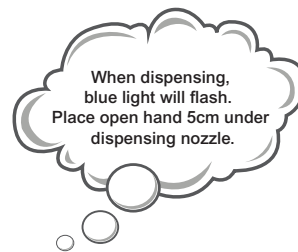

5cm is the best distance



15cm



TOUCH-FREE

200ML

 
Back

43024094 AUTOMATIC SOAP DISPENSER


Operation Instructions

1. Open battery compartment and insert 4 AAA batteries, ensure that the polarity is correct. Replace battery cover and screw to close.


Switch

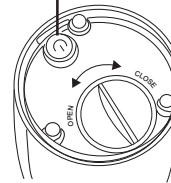

4 AAA batteries

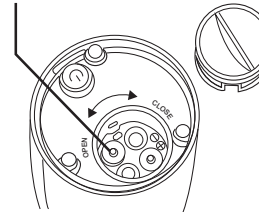 

 2. Press the "on" switch, a blue light will flash to show that it is on.
3. To fill the dispenser, stand the dispenser upright, slide off cover and pull off lid. Pour in liquid to fill.

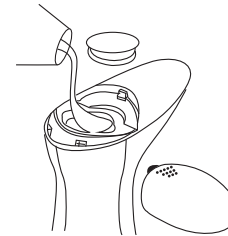

4. The dispenser will need to be primed on first use, place your hand 5cm from dispensing nozzle a few times to draw the liquid up.
5. If the nozzle clogs, gently clean the nozzle to clear any dried debris.
6. Refill when liquid level is low.
7. Do not place in water or allow battery compartment to become wet, the dispenser is not water proof.
8. Do not place in direct sunlight
9. Remove batteries from the dispenser when not used for extended periods of time or when batteries are exhausted.