 


# anko Bluetooth® Party Speaker with LED Light

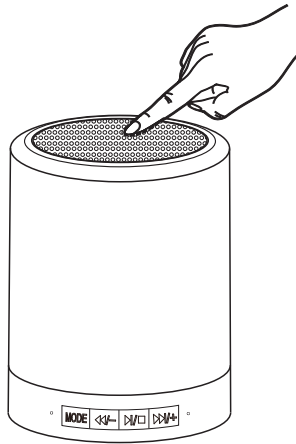

Keycode:43025008

## operation instruction

 
### Warning

- **DANGER:** To reduce the risk of fire, do not immerse this product into water or under raining.
- **WARNING:** Please refer to the electrical compliance label before charging or operating the unit.
- **WARNING:** Product shall not be exposed to excessive heat such as direct sunshine, fire or under the wind shield.
- Do not place or store this product where it can fall or be pulled into a water source like a sink, tub, or pool while charging.
- If the product falls into water, unplug it immediately.
- Do not expose battery to extreme temperatures.
- Do not tamper or puncture battery.
- Do not use if the battery or any cords are damaged.
- Unplug your charger when not in use.
- Never try to repair this product yourself.
- When the unit is not in use, make sure it is correctly turned off and stored in a cool, dry place.
- An appliance is only suitable for mounting at height ≤ 2m.
- Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
- Replacement of a battery with an incorrect type that can result in an explosion or the leakage of flammable liquid or gas.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
- USB terminal is only to supply 500mA output when the battery is charged.

### Product feature

- Personalized small night light, 3 levels brightness touch control.
- Romantic colorful light.
- Bluetooth® version 5.1, compatible with all audio devices with Bluetooth® function, as MP3/4, mobile, computer, ipad...
- Built-in rechargeable lithium battery.

### Button and interface:

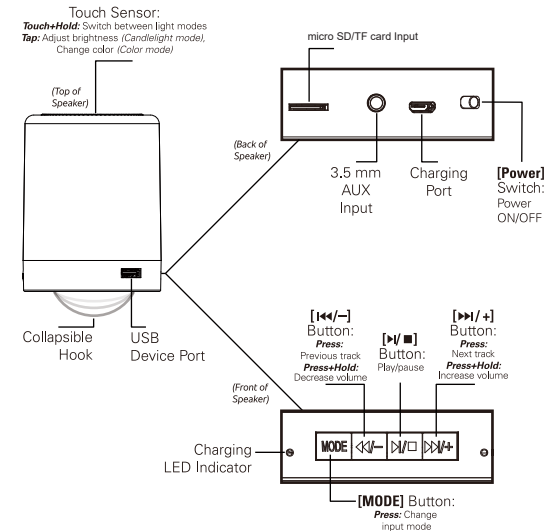


### Operation manual:

1. Turn on  
To turn on, select the on/off switch to "on" of the product.
2. Bluetooth® mode  
After turn on the product and go straight into Bluetooth® mode. On your mobile phone or other device, Open the Bluetooth®, search the device name - **PBT9514**, and going to pairing.
3. Play on micro SD/TF card  
Insert the micro SD/TF card, music will play automatically when there is MP3 in micro SD/TF card. If not, please press MODE button to switch into TF card mode.
4. AUX-in mode.  
Press MODE button to enter into AUX mode, take out AUX cable (not include), plug one end of 3.5mm stereo cable to your mobile phone, computer or other audio equipment, the other end into the AUX-in jack of the speaker.
5. USB Input  
When insert USB device, the speaker will automatically enter into USB mode and will start to play music, if not, please press MODE button until the speaker enters into USB mode.
6. FM mode  
The USB charging cable must be plugged into the charging port, with the other end unplugged, in order to function as an antenna. See diagram at right.

Change input modes until you enter FM radio mode.

In FM radio mode, playback will be controlled by the buttons on the speaker.

 - Press and hold the [▶▶] button to start scanning stations. Allow the radio to make a complete scan and save of all available radio stations, and return to the first saved station.
- Press the [▶▶] and [◀◀] buttons to skip through saved stations.

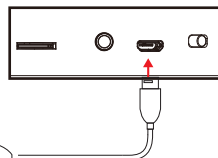

### 7. The key function

- MODE** MODE key, Select the Bluetooth®/ AUX-in / FM .  
 ◀◀- Short press for previous song, long press to decrease the volume.  
 ▶▶ Pick up the phone/hang up/play/pause.  
 ▶▶ Short press for the next song, long press to increase the volume.  
 ⏻ POWER

### Instructions of Light:

1. Press the top of the speaker to open the light. Press again to select three difference brightness.
2. To change RGB colour light mode, Long press the top of the speaker. Press the top of the speaker again to change to difference colours: RGB changing and beat of music, Red, Green, Dark Blue, Cyan, Purple, Light Blue.

### Packing accessories:

1. Bluetooth® Speaker
2. USB charging cable
3. Instruction manual

### 12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.