

The Filters must be cleaned regularly for best suction performance and to prevent overheating and damage to your vacuum cleaner. Here is how to clean the Vacuum Cleaner Filter:



Grip the handle on the front of the dust canister, slide the **Dust Canister Release Button** down, and pull the dust canister forward and out of the housing.




To clean the filtration system, Grasp the tabs on either side of the **Main HEPA Filter** and pull straight up and out.




To remove the **1st Stage Filter/ Filter Holder**, lift the wire handle up and then pull the inner component straight up and out.



Empty the **Dust Canister** into a rubbish bin and remove any debris from the filter and filter holder by tapping on the edge of the rubbish bin.

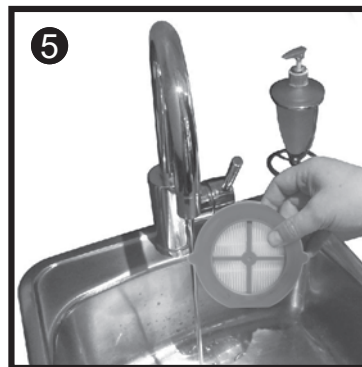


Wash the **Main HEPA Filter(A)**, **1st Stage Filter(B)**, and **Dust Canister(C)** in warm mild soapy water and rinse in clean fresh cold water.

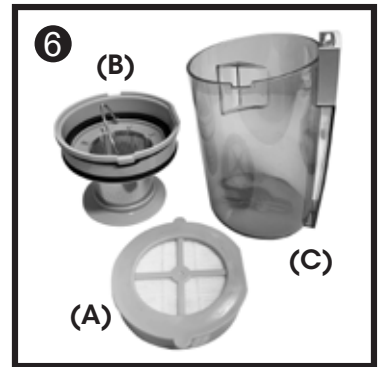


Set all aside to **AIR-DRY**. (Note: **Do not refit the filters when they are still wet**. It may cause serious damage to the vacuum cleaner motor.)


The Microfibre Pads must be cleaned regularly for best cleaning performance. Here is how to remove Steam Mop Pads:

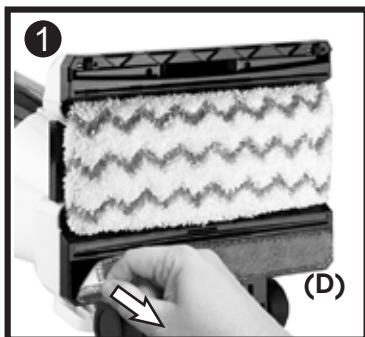

Turn over the floor head to access mop pads. Grasp the **Narrow Microfibre Pad(D)** and peel off the bottom of the floor head.

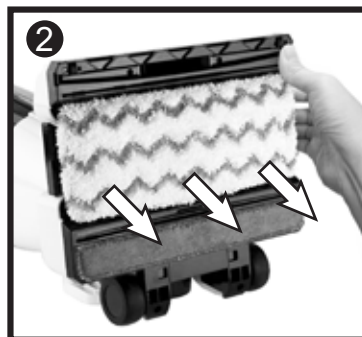

To remove the large microfibre pad, first pull out the **Detachable Microfibre Holder** from the floor head.

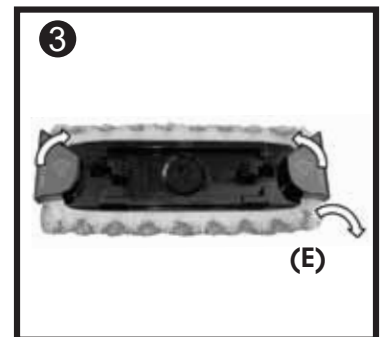

Lift the outer edges of the clamps of the holder and peel the **Large Microfibre Pad(E)** off from the corners. Simply wash and dry the mop pads.

If you have any query or would like to order replacement filters or mop pads, please feel free to call our friendly customer service team on 1300 105 888 or via email info@hegroup.com.au. We will be glad to assist you.