


anko

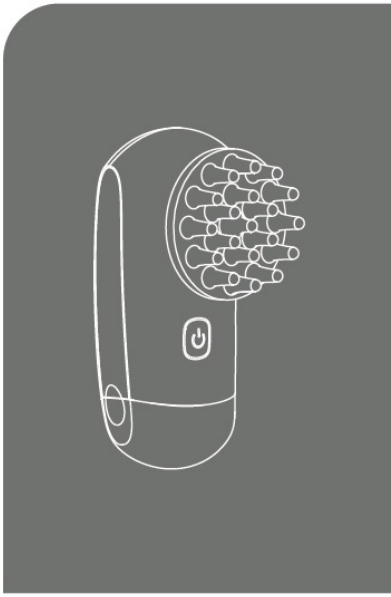

Head Massager and Facial Cleanser

TB-1718

INSTRUCTION MANUAL

Safety Instructions:

To ensure proper operation of this device, please read this instruction manual carefully before using the device and keep it for future reference.

⚠ WARNING

- The following persons should not use this device: pregnant women or while nursing; persons with allergies; persons with neurological or perceiving disabilities; persons who have had hair transplants; persons with open wounds, chapped or swollen skin on the area of use; persons with existing scalp diseases, such as hereditary dermatitis, seborrheic dermatitis, and eczema; persons with acute disease or malignant tumors; persons with a bleeding disorder, hemophilia, and other diseases; persons with hypertension, etc.
- If unsure suggest seeking medical advice before using this product, do not apply pressure on your skin or move the device too fast to prevent injuries.
- Do not overuse the device to avoid injury to the scalp.
- Please check the device for any damage before use. Do not use if there is any damage.
- Immediately stop using the device and consult a doctor if you feel any discomfort on the head or body.
- Do not attempt to disassemble, repair or modify the device by yourself, there are no user serviceable parts inside.


⚠ CAUTION

- This device is not a toy, keep out of reach of children.
- Regularly clean the device and the accessories to extend its lifetime.
- Do not share the same device with others.
- If you do not intend to use the device for a long time, remove the batteries.

Device Specifications:

- Model No.: TB-1718
- Type of Battery: 2x AA battery required (Not Included)

Device Description:

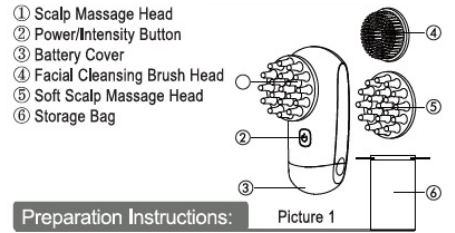

Preparation Instructions:

• Install the batteries

Hold the device with the back facing up and remove the battery cover. Insert two AA batteries according to the battery compartment + and - instructions (batteries are not included). (picture 2)



Picture 2

• Disassemble Accessory Heads

- Attach the facial cleansing brush head or the scalp massage head to the device. Align the accessory head with the connection shaft on the device body and firmly press it until it locks the position with a click.
- To remove the head, hold the device and pull the head away from the device. (picture 3)



Picture 3

• Intensity Level Adjustment

Press the power/intensity button to turn on the device. Press and hold the power/intensity button to gradually increase the intensity level. To gradually decrease the intensity level, press and hold the power/speed button. Adjust the intensity level according to your needs.

How to Use:

To ensure the correct operation of this device, please read the instructions carefully before use.

• Head Massage

- Choose and install the preferred accessory head. Short press the power/intensity button to turn on the device.
- Gently place the massage head on the scalp. According to your needs, press and hold the power/intensity button to adjust the intensity level. Slowly move the massage head to massage the scalp.
- Using sequence and instructions: (picture 4)
 - Front Area of the Head: Gently press the massage head on the scalp, and slowly move it from the hairline to the crown of the head, repeat 2-3 times.
 - Left & Right Side of the Head: Gently press the massage head on the scalp, and slowly move it from the hairline to the crown of the head, repeat 2-3 times. When using the device on the right side of the head, hold it with your right hand to massage. When using the device on the left side of the head, hold it with your left hand to massage.
 - Back Area of the Head: Gently press the massage head on the scalp, and slowly move it from the crown of the head towards the nape, repeat 2-3 times.



Picture 4

- After use, short press the power/intensity button to turn off the device.

• Facial Cleansing

- Install the facial cleansing brush head and moisten the face with water.
- Short press the power/intensity button to turn on the device, and adjust the intensity level according to your needs. Apply cleansing gel/cream to the palm of one hand, wet it with water, with the other hand hold the device and rub the brush on the cleansing gel/cream to form a foam.
- Apply the foam to the face, and gently move the brush head in a circular motion from inside to outside of the face. Recommended cleaning area, order and using time:

T-zone (forehead, nose area) 20s → left and right cheeks 15s each (total 30s) → chin 10s → neck 30s. (picture 5)



Picture 5

- After your cleansing routine is complete, turn off the device, rinse your face with water, and apply your daily skincare products.
- After each use, wash the brush head with clean water and allow it to dry in a well-ventilated place. Wipe the device body with a clean slightly wet cloth.

Cleaning & Maintenance:

- Make sure the device is turned off before you start cleaning it. Clean the device body with a clean slightly wet cloth and dry it.
- Do not immerse the device in water.
- Wash accessory heads with water and allow it to dry in a well-ventilated place. Do not dry in direct sunlight.
- Never use lubricants, detergents, polishing agents or air fresheners on this device.
- When cleaning the accessory heads, do not use water that is higher than 40°C or corrosive liquids to clean.

Recycling:

Batteries contain substances harmful to our environment. Do not dispose of the appliance with the battery inside, remove the battery and hand it over to your local council recycling point for environmental protection.

Warranty & Support:

• Troubleshooting

Problem	Possible Cause	Solution
Not working	Battery installed incorrectly.	Reinstall battery correctly.
	Low battery.	Install new battery
Abnormal noise	The brush not installed correctly.	Turn OFF the device and install the brush correctly.

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.